

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2020 NISSAN GT-R Nismo Service and Repair Manual

Go to manual page

To check malfunction symptom before repair:Refer to Intermittent Incident.

NO-2 >>

DTC DETECTION LOGIC

DTC		CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	
C1F05	54		Diagnosis condition	When vehicle is READY
		Front camera unit	Signal (terminal)	_
		(Front camera unit)	Threshold	If front camera unit is malfunctioning
			Diagnosis delay time	1 second or less

POSSIBLE CAUSE

- Front camera unit
- ADAS control unit 2

FAIL-SAFE

The following systems are canceled.

- Lane keep function*1
- Lane keep function*2
- Lane change support function
- Overtaking support function
- Route driving support function
- AEB
- RAB
- I-FCW
- I-LI
- I-BSI
- TSR

*1: ProPILOT Assist 2.0 display is green

*2: ProPILOT Assist 2.0 display is blue

CONFIRMATION PROCEDURE

1. CHECK DTC PRIORITY

If DTC "C1F05-49" is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES >>

Perform diagnosis of applicable. Refer to <u>DTC Index</u>.

NO >>

GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Set the vehicle to READY.

2. Perform "All DTC Reading" with CONSULT.

3. Check if the "C1F05-54" is detected as the current malfunction in "Self Diagnostic Result" of "ICC/ADAS 2".

Is "C1F05-54" detected as the current malfunction?

YES >>

Refer to DTC Diagnosis Procedure.

NO-1 >>

To check malfunction symptom before repair: Refer to Intermittent Incident.

NO-2 >>

1. CHECK DTC PRIORITY

If DTC "C1F05-54" is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES >>

Perform diagnosis of applicable. Refer to <u>DTC Index</u>(Without ProPILOT Assist 2.0).<u>DTC Index</u>(With ProPILOT Assist 2.0).

NO >>

GO TO 2.

2. CHECK FRONT CAMERA UNIT SELF-DIAGNOSTIC RESULT

Check if any DTC is detected in "Self Diagnostic Result" of "LANE CAMERA".

Is any DTC detected?

YES >>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to DTC Index .

NO >>

Replace the ADAS control unit 2. Refer to <u>Removal and Installation</u>(Without ProPILOT Assist 2.0) or <u>Removal and Installation</u>(With ProPILOT Assist 2.0).

DTC Description

DTC DETECTION LOGIC

DTC		CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	
C1F05	54		Diagnosis condition	When vehicle is READY
		Front camera unit	Signal (terminal)	—
		(Front camera unit)	Threshold	If front camera unit is malfunctioning
			Diagnosis delay time	1 second or less

POSSIBLE CAUSE

- Front camera unit
- ADAS control unit 2

FAIL-SAFE

The following systems are canceled.

- Vehicle-to-vehicle distance control mode
- Conventional (fixed speed) cruise control mode
- Steering wheel assistance function
- AEB
- RAB
- I-FCW
- I-LI
- I-BSI
- TSR
- I-DA

CONFIRMATION PROCEDURE

1. CHECK DTC PRIORITY

If DTC "C1F05-49" is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES >>

Perform diagnosis of applicable. Refer to DTC Index.

NO>>

GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Set the vehicle to READY.
- 2. Perform "All DTC Reading" with CONSULT.
- 3. Check if the "C1F05-54" is detected as the current malfunction in "Self Diagnostic Result" of "ICC/ADAS 2".

Is "C1F05-54" detected as the current malfunction?

YES >>

Refer to DTC Diagnosis Procedure.

NO-1 >>

To check malfunction symptom before repair: Refer to <u>Intermittent Incident</u>.

NO-2 >>



DTC DETECTION LOGIC

DTC		CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	
C1F05	64	Front camera unit (Front camera unit)	Diagnosis condition	When vehicle is READY
			Signal (terminal)	—
			Threshold	If front camera unit is malfunctioning
			Diagnosis delay time	1 second or less

POSSIBLE CAUSE

- Front camera unit
- ADAS control unit 2

FAIL-SAFE

The following systems are canceled.

- Lane keep function^{*}
- Lane change support function
- Overtaking support function
- Route driving support function

*: ProPILOT Assist 2.0 display is blue

CONFIRMATION PROCEDURE

1. CHECK DTC PRIORITY

If DTC "C1F05-64" is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to <u>DTC Index</u>.

NO>>

```
<u>GO TO 2</u>.
```

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Set the vehicle to READY.
- 2. Perform "All DTC Reading" with CONSULT.
- 3. Check if the "C1F05-64" is detected as the current malfunction in "Self Diagnostic Result" of "ICC/ADAS 2".

Is "C1F05-64" detected as the current malfunction?

Refer to DTC Diagnosis Procedure.

NO-1>>

To check malfunction symptom before repair: Refer to <u>Intermittent Incident</u>.

NO-2>>

1. CHECK DTC PRIORITY

If DTC "C1F05-64" is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES>>

Perform diagnosis of applicable. Refer to DTC Index.

NO>>

<u>GO TO 2</u>.

2. CHECK FRONT CAMERA UNIT SELF-DIAGNOSTIC RESULT

Check if any DTC is detected in "Self Diagnostic Result" of "LANE CAMERA".

Is any DTC detected?

YES>>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to DTC Index.

NO>>

Replace the ADAS control unit 2. Refer to Removal and Installation.