

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2020 Nissan Versa Service and Repair Manual

[Go to manual page](#)

Priority	Detected items (DTC)
	<ul style="list-style-type: none"> • C1F50-82: Side radar front RH • C1F50-83: Side radar front RH • C1F50-97: Side radar front RH • C1F51-29: IPDM E/R • C1F51-82: IPDM E/R • C1F51-83: IPDM E/R • C1F52-54: Driver monitor system circuit • C1F52-62: Driver monitor system circuit • C1F52-82: Driver monitor system circuit • C1F52-83: Driver monitor system circuit • C1F54-29: E-driven intelligent brake unit circuit • C1F54-82: E-driven intelligent brake unit circuit • C1F54-83: E-driven intelligent brake unit circuit • C1F55-82: Electric parking brake circuit • C1F55-83: Electric parking brake circuit • C1F56-04: EPS sub system circuit • C1F56-82: EPS sub system circuit • C1F56-83: EPS sub system circuit • C1F59-04: EPS control unit • C1F59-64: EPS control unit • C1F59-82: EPS control unit • C1F59-83: EPS control unit • C1F5F-04: Distance sensor • C1F5F-16: Distance sensor • C1F5F-4B: Distance sensor • C1F5F-78: Distance sensor • C1F5F-82: Distance sensor • C1F5F-83: Distance sensor • C1F60-97: VCM system circuit • C1F62-82: Intelligent key system circuit • C1F62-83: Intelligent key system circuit • C1F64-04: Head Up Display unit • C1F64-08: Head Up Display unit • C1F64-82: Head Up Display unit • C1F64-83: Head Up Display unit

Priority	Detected items (DTC)
	<ul style="list-style-type: none"> • C1F65-04: Sonar control unit • C1F65-82: Sonar control unit • C1F65-83: Sonar control unit • C1F76-49 Steering angle sensor • C1F76-82: Steering angle sensor • C1F76-83: Steering angle sensor • C1F80-11: Steering wheel touch sensor • C1F80-12: Steering wheel touch sensor • C1F80-49: Steering wheel touch sensor • C1F80-55: Steering wheel touch sensor • C1F80-82: Steering wheel touch sensor • C1F80-83: Steering wheel touch sensor • C1F80-86: Steering wheel touch sensor • C1F80-88: Steering wheel touch sensor • C1F89-04: Side radar rear LH • C1F89-82: Side radar rear LH • C1F89-83: Side radar rear LH • C1F89-97: Side radar rear LH • C1F8A-04: Side radar rear RH • C1F8A-82: Side radar rear RH • C1F8A-83: Side radar rear RH • C1F8A-97: Side radar rear RH • C1F8B-47: HD map module circuit • C1F8B-62: HD map module circuit • C1F90-04: ADAS control unit 2 circuit • C1F90-97: ADAS control unit 2 circuit • C1F92-64: EPS sub system circuit • C1F93-29: E-driven intelligent brake unit circuit • C1F93-64: E-driven intelligent brake unit circuit • C1F94-54: BSW system circuit • C1F95-11: System BU func power supply circ • C1F96-29: CONTROL UNIT • U1327-52: MAC key update • U1327-54: MAC key update • U19B0-87: LIN comm err (Touch sensor)

Priority	Detected items (DTC)
	<ul style="list-style-type: none"> • U19B1-87: CAN comm err (CCM) • U19B2-87: LIN comm err • U19B4-87: CAN comm err (AVM) • U19B5-87: CAN comm err (BCM) • U19B6-87: CAN comm err (VCM/HPCM) • U19B7-87: CAN comm err (VCM) • U19B8-87: CAN comm err (EPS control unit) • U19B9-87: CAN comm err (ABS/TCS/VDC) • U19BA-87: CAN comm err (Parking brake) • U19BB-87: CAN comm err (Front camera unit) • U19BC-87: CAN comm err (Side radar rear LH) • U19BD-87: CAN comm err (Side radar rear RH) • U19BE-87: CAN comm err (VCM/HPCM) • U19BF-87: CAN comm err (AVM) • U19C1-87: Ethernet comm err (Distance sensor) • U19C2-87: Ethernet comm err (AVM) • U19C3-87: Ethernet comm err (Distance sensor) • U19C5-87: Ethernet comm err (HD map module) • U19C6-87: Ethernet comm err (Front camera) • U19C7-87: Ethernet comm err (HD map module) • U19C8-87: Ethernet comm err (Front camera) • U19C9-87: CAN comm err (Side radar front LH) • U19CA-87: CAN comm err (Side radar front RH) • U19D0-87: CAN comm err (BCM) • U19D1-87: CAN comm err (CCM) • U19D2-87: CAN comm err (VCM) • U19D3-87: CAN comm err (Sonar control unit) • U19D4-87: CAN comm err (ABS/TCS/VDC) • U19D5-87: CAN comm err (EPS control unit) • U19D6-87: CAN comm err (Combination meter) • U19D7-87: CAN comm err (Steering angle sen) • U19D8-87: CAN comm err (IPDM E/R) • U2112-87: CAN comm err (brake unit) • U2118-87: CAN comm err (Intelligent Key) • U2140-87: CAN comm err (ECM)

Priority	Detected items (DTC)
	<ul style="list-style-type: none"> • U2143-87: CAN comm err (VCM/HCM) • U2148-87: CAN comm err (brake control unit) • U214E-87: CAN comm err (combination meter) • U214F-57: CAN comm err (BCM) • U214F-87: CAN comm err (BCM) • U2150-87: CAN comm err (AIRBAG) • U2153-87: CAN comm err (HVAC) • U2154-87: CAN comm err (MIU) • U2155-87: CAN comm err (parking brake) • U2159-87: CAN comm err (steering control unit) • U2175-57: CAN comm err (AVM) • U2175-87: CAN comm err (AVM) • U2176-57: CAN comm err (CCM/ST angle sensor) • U2176-87: CAN comm err (CCM/ST angle sensor) • U2193-87: CAN comm err (ADP driver seat) • U226B-87: CAN comm err (front camera) • U229D-87: CAN comm err (DMC) • U236C-87: CAN comm err (side radar) • U236E-87: CAN comm err (side radar) • U2375-87: CAN comm err (AVM) • U2440-87: CAN comm err (ECM) • U2443-87: CAN comm err (VCM/HCM) • U2448-87: CAN comm err (ABS control unit) • U244E-87: CAN comm err (combination meter) • U244F-57: CAN comm err (BCM) • U244F-87: CAN comm err (BCM) • U2454-87: CAN comm err (MIU) • U2456-87: CAN comm err (ST angle sensor) • U2459-87: CAN comm err (EPS control unit) • U245B-87: CAN comm err (IPDM E/R) • U2465-57: CAN comm err (sonar control unit) • U2465-87: CAN comm err (sonar control unit) • U2475-87: CAN comm err (AVM) • U2476-57: CAN comm err (CCM) • U2476-87: CAN comm err (CCM)

Priority	Detected items (DTC)
	<ul style="list-style-type: none">• U2589-87: CAN comm err (side radar)• U258A-87: CAN comm err (side radar)• U2612-87: CAN comm err (E-drvn intllgnt brk)• U2648-87: CAN comm err (ABS)• U2673-87: CAN comm err (HUD unit)• U26AA-87: CAN comm err (EPS control unit)• U2752-88: Ethernet circuit (Distance sensor)• U2A0B-88: Comm Bus Off CH2-CAN• U2B52-88: Ethernet comm err

Sample

Self Diagnostic Result

DTC		Items (CONSULT screen terms)	Fail-safe											Reference		
			Vehicle speed & vehicle- to- vehicle control function	Lane keep function *1	Lane keep function *2	Lane change support function	Overtaking support function	Route driving support function	AEB	RAB	I- FCW	I- LI	I- BSI	TSR	I- DA	
C1655	62	Electric parking brake circuit	x	x	x	x	x	x	—	—	—	—	—	—	DTC Description	
C1F00	44	CONTROL UNIT	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description	
	45		x	x	x	x	x	x	x	x	x	x	x	x	DTC Description	
	46		x	x	x	x	x	x	x	x	x	x	x	x	DTC Description	
	47		x	x	x	x	x	x	x	x	x	x	x	x	DTC Description	
	49		x	x	x	x	x	x	x	x	x	x	x	x	DTC Description	
	4B		x	x	x	x	x	x	x	x	x	x	x	x	DTC Description	
	54		—	x	x	x	x	x	—	—	—	—	—	—	DTC Description	
	71		—	—	—	—	—	—	—	—	—	—	—	—	DTC Description	
	87		x	x	x	x	x	x	x	x	x	x	x	x	DTC Description	
C1F02	16	POWER SUPPLY CIR	x	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
	17		x	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
C1F03	23	OPERATION SW CIRC	x	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
	62		x	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
	72		x	x	x	x	x	x	x	x	x	x	—	—	—	DTC Description
C1F04	48	FEB OPE COUNT LIMIT	—	—	x	x	x	x	x	x	x	x	—	—	—	DTC Description
	61		x	x	x	x	x	x	x	x	x	x	—	—	—	DTC Description
C1F05	04	Front camera unit	—	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
	49		—	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
	4B		—	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
	54		—	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
	64		—	—	x	x	x	x	—	—	—	—	—	—	—	DTC Description
	82		—	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
	83		—	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description
	97		—	x	x	x	x	x	x	x	x	x	x	x	—	DTC Description

DTC		Items (CONSULT screen terms)	Fail-safe											Reference		
			Vehicle speed & vehicle-to-vehicle control function	Lane keep function *1	Lane keep function *2	Lane change support function	Overtaking support function	Route driving support function	AEB	RAB	I-FCW	I-LI	I-BSI	TSR	I-DA	
C1F36	55	CONFIG UNFINISHED	x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
C1F37	55	Switch information	x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
C1F40	82	ECM	x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
	83		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
C1F42	82	TCM	x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
	83		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
C1F43	04	Around view control unit	—	—	x	x	x	x	—	—	—	—	—	x	—	DTC Description
	82		—	—	x	x	x	x	—	—	—	—	—	—	—	DTC Description
	83		—	—	x	x	x	x	—	—	—	—	—	—	—	DTC Description
C1F44	29	BCM	—	—	x	x	x	x	—	—	—	—	—	—	—	DTC Description
	82		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
	83		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
C1F45	64	CCM	x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
	82		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
	83		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
C1F46	04	VCM/HPCM	x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
	24		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	29		—	—	x	x	x	x	—	—	—	—	—	—	—	DTC Description
	62		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	82		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
	83		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
	97		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
C1F47	04	Combination meter	x	x	x	x	x	x	—	—	—	—	—	—	—	DTC Description
	08		x	x	x	x	x	x	—	—	—	—	—	—	—	DTC Description
	29		—	—	x	x	x	x	—	—	—	—	—	—	—	DTC Description
	82		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description
	83		x	x	x	x	x	x	x	x	x	x	x	x	x	DTC Description

DTC		Items (CONSULT screen terms)	Fail-safe											Reference		
			Vehicle speed & vehicle-to-vehicle control function	Lane keep function *1	Lane keep function *2	Lane change support function	Overtaking support function	Route driving support function	AEB	RAB	I-FCW	I-LI	I-BSI	TSR	I-DA	
C1F48	04	ABS/TCS/VDC CIRC	×	×	×	×	×	×	×	×	×	×	×	×	—	DTC Description
	29		×	×	×	×	×	×	×	×	×	×	×	×	—	DTC Description
	64		×	×	×	×	×	×	×	×	×	×	×	×	—	DTC Description
	82		×	×	×	×	×	×	×	×	×	×	×	×	—	DTC Description
	83		×	×	×	×	×	×	×	×	×	×	×	×	—	DTC Description
	86		×	×	×	×	×	×	×	×	×	×	×	×	—	DTC Description
C1F49	04	Side radar front LH	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	82		—	—	×	×	×	—	—	—	—	—	—	—	—	DTC Description
	83		—	—	×	×	×	—	—	—	—	—	—	—	—	DTC Description
	97		—	—	×	×	×	—	—	—	—	—	—	—	—	DTC Description
C1F50	82	Side radar front RH	—	—	×	×	×	—	—	—	—	—	—	—	—	DTC Description
	83		—	—	×	×	—	—	—	—	—	—	—	—	—	DTC Description
	97		—	—	×	×	—	—	—	—	—	—	—	—	—	DTC Description
C1F51	29	IPDM E/R	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	82		—	—	×	×	—	—	—	—	—	—	—	—	—	DTC Description
C1F51	83	IPDM E/R	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F52	54	Driver monitor system circuit	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	62		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	82		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	83		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F54	29	E-driven intelligent brake unit circuit	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	82		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	83		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F55	82	Electric parking brake circuit	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F55	83	Electric parking brake circuit	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F56	04	EPS sub system circuit	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	82		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description

DTC		Items (CONSULT screen terms)	Fail-safe											Reference		
			Vehicle speed & vehicle-to-vehicle control function	Lane keep function *1	Lane keep function *2	Lane change support function	Overtaking support function	Route driving support function	AEB	RAB	I-FCW	I-LI	I-BSI	TSR	I-DA	
	83		—	—	×	×	×	×	—	—	—	—	—	—	—	DTC Description
C1F59	04	EPS control unit	×	×	×	×	×	×	×	×	×	×	×	—	—	DTC Description
	64		×	×	×	×	×	×	×	×	×	×	×	—	—	DTC Description
	82		×	×	×	×	×	×	×	×	×	×	×	—	—	DTC Description
	83		×	×	×	×	×	×	×	×	×	×	×	—	—	DTC Description
C1F5F	04	Distance sensor	×	×	×	×	×	×	—	—	—	—	—	—	—	DTC Description
	16		×	×	×	×	×	—	—	—	—	—	—	—	—	DTC Description
	4B		×	×	×	×	×	—	—	—	—	—	—	—	—	DTC Description
	78		×	×	×	×	—	—	—	—	—	—	—	—	—	DTC Description
	82		×	×	×	—	—	—	—	—	—	—	—	—	—	DTC Description
	83		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F60	97	VCM system circuit	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F62	82	Intelligent key system circuit	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	83		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F64	04	Head Up Display unit	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	08		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	82		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	83		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F65	04	Sonar control unit	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	82		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	83		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F76	49	Steering angle sensor	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	82		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	83		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
C1F80	11	Steering wheel touch sensor	—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	12		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description
	49		—	—	—	—	—	—	—	—	—	—	—	—	—	DTC Description