

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2021 NISSAN 370Z Roadster Service and Repair Manual

Go to manual page

6. Remove 12V battery terminal.


CAUTION:

After installing 12V battery, always check self-diagnosis results of all ECUs and erase DTC.



CAN communication uses a twisted pair line. Be careful when repairing it.

• Solder the repaired area and wrap tape around the soldered area.

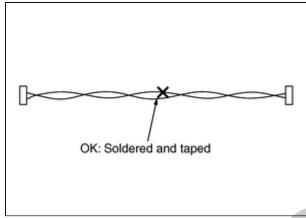


RDE-001502441-01-KIB8766E



A fray of twisted lines must be within 110 mm (4.33 in).

• Bypass connection is never allowed at the repaired area.

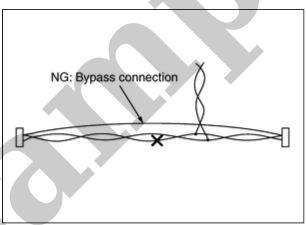

RDE-001502441-02-KIB8767E



Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

- Do not use distance sensor removed from vehicle. Never disassemble or remodel.
- When replacing the distance sensor, perform radar alignment.



Be careful of traffic conditions and safety around the vehicle when performing road test.

- Never perform the active test while driving.
- Never disassemble and remodel the front camera unit.
- Do not use the front camera unit that is removed from the vehicle.



Be careful of traffic conditions and safety around the vehicle when performing road test.

- Never use the I-LI system when driving with free rollers or a chassis dynamometer.
- Never perform the active test while driving.
- Never disassemble and remodel the front camera unit.
- Do not use the front camera unit that is removed from the vehicle.



Be careful of traffic conditions and safety around the vehicle when performing road test.

- Never perform the active test while driving.
- Never disassemble and remodel the side radar.
- Do not use the side radar that is removed from the vehicle.



Be careful of traffic conditions and safety around the vehicle when performing road test.

- Never use the I-BSI system when driving with free rollers or a chassis dynamometer.
- Never perform the active test while driving.
- Never disassemble and remodel the side radar.
- Do not use the side radar that is removed from the vehicle.



Be careful of traffic conditions and safety around the vehicle when performing road test.

- Never perform the active test while driving.
- Never disassemble and remodel the side radar.
- Do not use the side radar that is removed from the vehicle.



Be careful of traffic conditions and safety around the vehicle when performing road test.

- Never perform the active test while driving.
- Never disassemble and remodel the front camera unit.
- Do not use the front camera unit that is removed from the vehicle.

