

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2022 NISSAN Frontier Service Manual & Repair Guide

[Go to manual page](#)

1. CHECK DTC PRIORITY

If DTC “C2526-83” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES >>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO >>

[GO TO 2.](#)

2. CHECK ADAS CONTROL UNIT 2 SELF DIAGNOSTIC RESULT

Perform “Self Diagnostic Result” of “ICC/ADAS 2” using CONSULT.

Are any DTCs detected?

YES >>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#) (Without ProPILOT Assist 2.0) or [DTC Index](#) (With ProPILOT Assist 2.0).

NO >>

Replace front camera unit. Refer to [Removal and Installation](#)(Without ProPILOT Assist 2.0) or [Removal and Installation](#)(With ProPILOT Assist 2.0).

DTC DETECTION LOGIC

DTC No.	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	
C2526-86	ADAS control unit	Diagnosis condition	When power switch is ON.
		Signal (terminal)	CAN communication signal
		Threshold	Front camera unit detects that ADAS control unit 2 has a malfunction.
		Diagnosis delay time	5 seconds or more

POSSIBLE CAUSE

ADAS control unit 2

FAIL-SAFE

The following functions are suspended.

- Vehicle-to-vehicle distance control mode^{*1}
- Steering wheel assistance function^{*1}
- Conventional (fixed speed) cruise control mode^{*1}
- Vehicle speed & vehicle-to-vehicle control function^{*2}
- Lane keep function^{*2,3}
- Lane keep function^{*2,4}
- Lane change support function^{*2}
- Overtaking support function^{*2}
- Route driving support function^{*2}
- AEB
- LDW
- I-LI
- I-BSI
- TSR

*1: With ProPILOT Assist, Without ProPILOT Assist 2.0

*2: With ProPILOT Assist 2.0

*3: ProPILOT Assist 2.0 display is green

*4: ProPILOT Assist 2.0 display is blue

CONFIRMATION PROCEDURE

1. CHECK DTC PRIORITY

If DTC “C2526-86” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES >>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO >>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power switch ON, and then wait for 5 seconds or more.
2. Perform “All DTC Reading” with CONSULT.
3. Check if the “C2526-86” is detected as the current malfunction on the self-diagnosis results of “LANE CAMERA”.

Is “C2526-86” detected as the current malfunction?

YES >>

Refer to [DTC Diagnosis Procedure](#).

NO-1 >>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2 >>

Confirmation after repair: INSPECTION END

1. CHECK DTC PRIORITY

If DTC “C2526-86” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES >>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO >>

[GO TO 2.](#)

2. CHECK ADAS CONTROL UNIT 2 SELF DIAGNOSTIC RESULT

Perform “Self Diagnostic Result” of “ICC/ADAS 2” using CONSULT.

Are any DTCs detected?

YES >>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#) (Without ProPILOT Assist 2.0) or [DTC Index](#) (With ProPILOT Assist 2.0).

NO >>

Replace front camera unit. Refer to [Removal and Installation](#)(Without ProPILOT Assist 2.0) or [Removal and Installation](#)(With ProPILOT Assist 2.0).

DTC DETECTION LOGIC

DTC No.	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	
C2526-87	ADAS control unit	Diagnosis condition	When power switch is ON.
		Signal (terminal)	CAN communication signal
		Threshold	Front camera unit detects that ADAS control unit 2 has a malfunction.
		Diagnosis delay time	5 seconds or more

POSSIBLE CAUSE

ADAS control unit 2

FAIL-SAFE

The following functions are suspended.

- Vehicle-to-vehicle distance control mode^{*1}
- Steering wheel assistance function^{*1}
- Conventional (fixed speed) cruise control mode^{*1}
- Vehicle speed & vehicle-to-vehicle control function^{*2}
- Lane keep function^{*2,3}
- Lane keep function^{*2,4}
- Lane change support function^{*2}
- Overtaking support function^{*2}
- Route driving support function^{*2}
- AEB
- LDW
- I-LI
- I-BSI
- TSR

*1: With ProPILOT Assist, Without ProPILOT Assist 2.0

*2: With ProPILOT Assist 2.0

*3: ProPILOT Assist 2.0 display is green

*4: ProPILOT Assist 2.0 display is blue

CONFIRMATION PROCEDURE

1. CHECK DTC PRIORITY

If DTC “C2526-87” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES >>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO >>

[GO TO 2.](#)

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power switch ON, and then wait for 5 seconds or more.
2. Perform “All DTC Reading” with CONSULT.
3. Check if the “C2526-87” is detected as the current malfunction on the self-diagnosis results of “LANE CAMERA”.

Is “C2526-87” detected as the current malfunction?

YES >>

Refer to [DTC Diagnosis Procedure](#).

NO-1 >>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2 >>

Confirmation after repair: INSPECTION END

1. CHECK DTC PRIORITY

If DTC “C2526-87” is displayed with Network-DTC, first diagnose the Network-DTC.

Is applicable DTC detected?

YES >>

Perform diagnosis of applicable. Refer to [DTC Index](#).

NO >>

[GO TO 2.](#)

2. CHECK ADAS CONTROL UNIT 2 SELF DIAGNOSTIC RESULT

Perform “Self Diagnostic Result” of “ICC/ADAS 2” using CONSULT.

Are any DTCs detected?

YES >>

Perform diagnosis on the detected DTC and repair or replace the malfunctioning parts. Refer to [DTC Index](#) (Without ProPILOT Assist 2.0) or [DTC Index](#) (With ProPILOT Assist 2.0).

NO >>

Replace front camera unit. Refer to [Removal and Installation](#)(Without ProPILOT Assist 2.0) or [Removal and Installation](#)(With ProPILOT Assist 2.0).

DTC DETECTION LOGIC

DTC No.		CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	
C2545	82	ADAS control unit	Diagnosis condition	When power switch is ON
			Signal (terminal)	CAN communication signal
			Threshold	Front camera unit detects that ADAS control unit 2 has a malfunction
			Diagnosis delay time	5 seconds or more

POSSIBLE CAUSE

ADAS control unit 2

FAIL-SAFE

The following systems are cancelled.

- Vehicle-to-vehicle distance control mode^{*1}
- Steering wheel assistance function^{*1}
- Conventional (fixed speed) cruise control mode^{*1}
- Vehicle speed & vehicle-to-vehicle control function^{*2}
- Lane keep function^{*2,3}
- Lane keep function^{*2,4}
- Lane change support function^{*2}
- Overtaking support function^{*2}
- Route driving support function^{*2}
- AEB
- LDW
- I-LI
- I-BSI
- TSR

*1: With ProPILOT Assist, Without ProPILOT Assist 2.0

*2: With ProPILOT Assist 2.0

*3: ProPILOT Assist 2.0 display is green

*4: ProPILOT Assist 2.0 display is blue

CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power switch ON, and then wait for 5 seconds or more.
2. Perform “All DTC Reading” with CONSULT.
3. Check if the “C2545-82” is detected as the current malfunction on the self-diagnosis results of “LANE CAMERA”.

Is “C2545-82” detected as the current malfunction?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

Sample