

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2022 Toyota Corolla Service Manual

[Go to manual page](#)

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001R88T
Model Year Start: 2021	Model: Supra	Prod Date Range: [07/2020 -]
Title: POWER DISTRIBUTION: FUSE BOX: REMOVAL; 2021 - 2025 MY Supra [07/2020 -]		

REMOVAL

CAUTION / NOTICE / HINT

CAUTION:

- Working on 12 V vehicle electrical system.

Risk of short circuits! Risk of fire!

- Detach the cable from the negative (-) battery terminal.
- w/ No. 2 Battery: Detach the cable from the negative (-) battery terminal of the No. 2 battery.

NOTICE:

- Before performing work on electronic components, disconnect the cable from the negative (-) battery terminal to prevent damage to the electrical system or components.
- When disconnecting the cable, turn the START-STOP button (engine switch) and headlight switch off and loosen the cable nut completely. Perform these operations without twisting or prying on the cable. Then disconnect the cable.
- Clock settings, radio settings, audio system memory, DTCs and other data will be cleared when the cable is disconnected from the negative (-) battery terminal. Write down any necessary data before disconnecting the cable.

PROCEDURE

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

- for B46:

Click here [INFO](#)

- for B48:

Click here [INFO](#)

- for B58:

Click here [INFO](#)

2. REMOVE NO. 1 LUGGAGE COMPARTMENT LIGHT ASSEMBLY

Click here [INFO](#)

3. REMOVE TRIANGLE REFLECTOR SET

Click here [INFO](#)

4. REMOVE DECK TRIM REAR COVER

Click here [INFO](#)

5. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY RH

HINT:

Use the same procedure as for the LH side.


Click here [INFO](#)

6. SEPARATE TRANSVERSE PIPE TRIM


HINT:

Use the same procedure as for the LH side.


Click here [INFO](#)

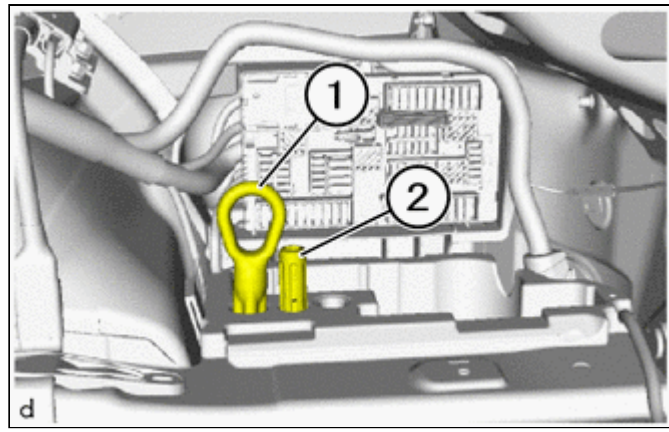

(b) Detach the claws (2) to remove the rear power distribution box (1).

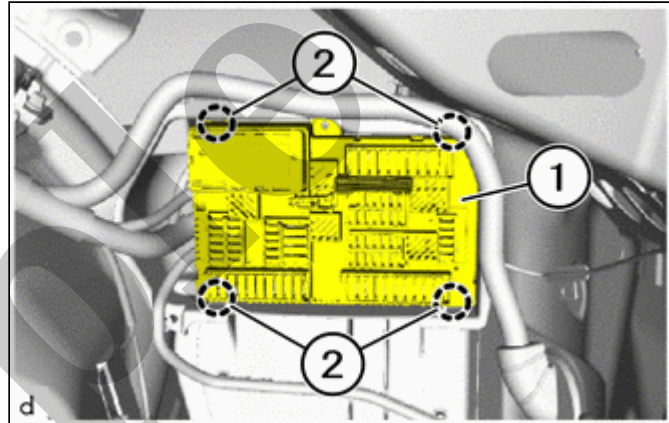

(c) Open the cover (1).

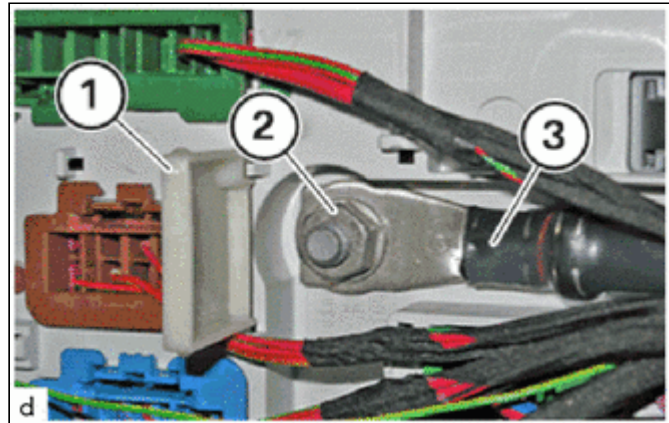

(d) Loosen the nut (2).

(e) If applicable, loosen the tie band on the positive battery cable (3).

(f) Remove the positive battery cable (3).


(g) Disconnect all the connectors to remove the rear power distribution box (1).

INSTALLATION


PROCEDURE

1. INSTALL REAR POWER DISTRIBUTION BOX

- (a) Connect all the connectors to the rear power distribution box (1).

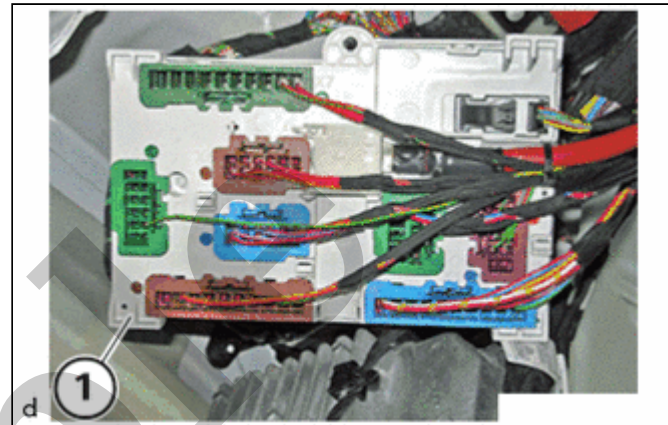

- (b) Install the positive battery cable (3).

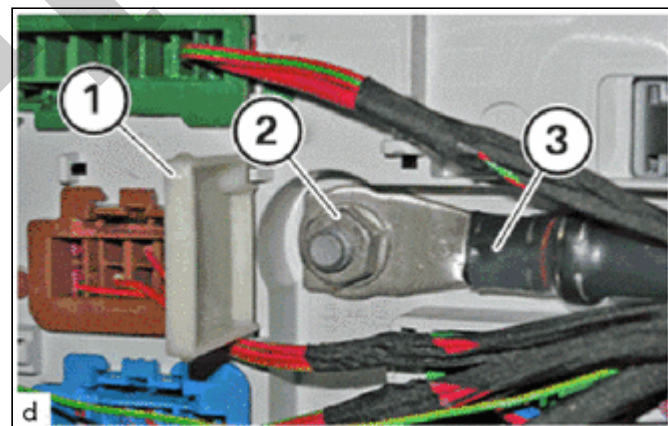

- (c) Tighten the nut (2).

Torque:

15 N·m {153 kgf·cm, 11 ft·lbf}

- (d) If applicable, replace the tie band on the positive battery cable (3).
- (e) Close the cover (1).
- (f) Attach the claws (2) to install the rear power distribution box (1) correctly.

12. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Click here [INFO](#)



Sample