

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


2022 Toyota Supra Service Manual

[Go to manual page](#)


Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM1000000001JCJG
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: SUPPLEMENTAL RESTRAINT SYSTEMS: FRONT AIRBAG SENSOR: COMPONENTS; 2020 - 2025 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

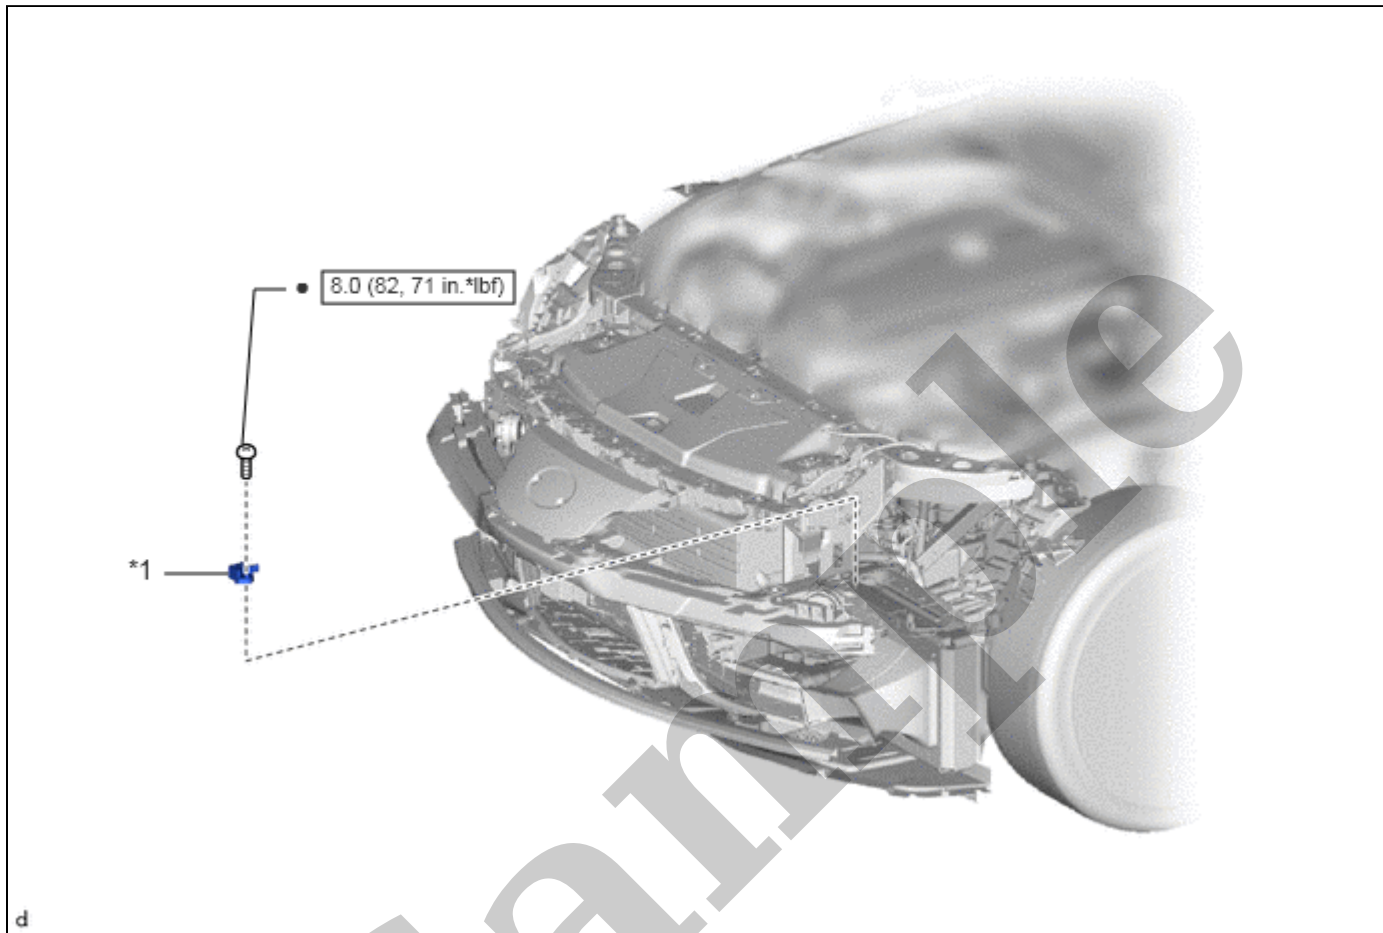

*1	FRONT AIRBAG SENSOR	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

 

Damage to or destruction of electrical components.


- Only touch the housings of electrical components. Do not touch pins or multi-pin connectors directly.
- For additional information see:

[Click here](#) **INFO**

(a) Check that the START-STOP button (engine switch) off.

HINT:

Pressing and holding the AUDIO button changes the power source mode to IG OFF.

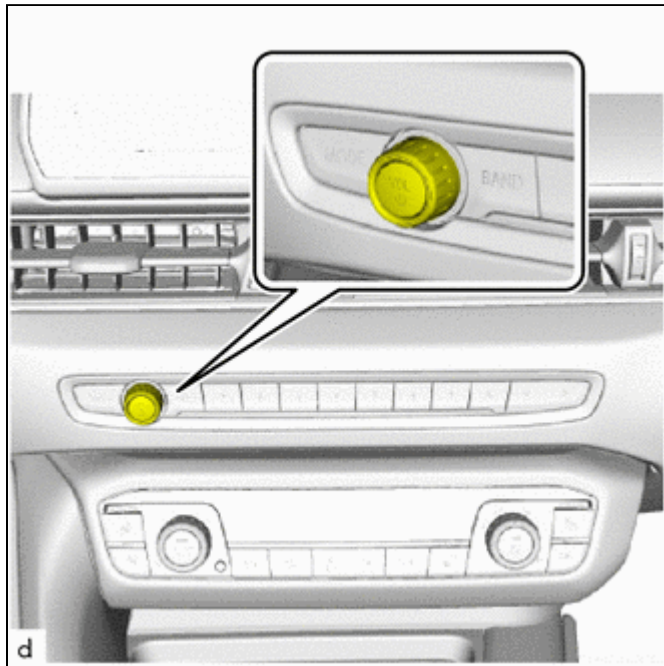


(b) Check that the cable is disconnected from the negative (-) battery terminal.

CAUTION:

- Wait at least 60 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.
- If the airbag deploys for any reason, it may cause a serious accident.

(c) Unlock the plug connection (1) and disconnect.

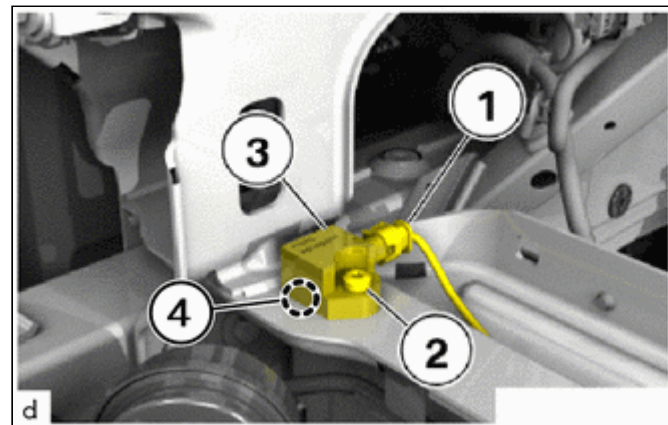

(d) Loosen the T30 bolt (2) and detach the guide (4) to remove the front airbag sensor (3).



- Electrostatic discharge.

Damage to or destruction of electrical components.


- Only touch the housings of electrical components. Do not touch pins or multi-pin connectors directly.
- For additional information see:

Click here [INFO](#)

(a) Check that the START-STOP button (engine switch) off.

HINT:

Pressing and holding the AUDIO button changes the power source mode to IG OFF.

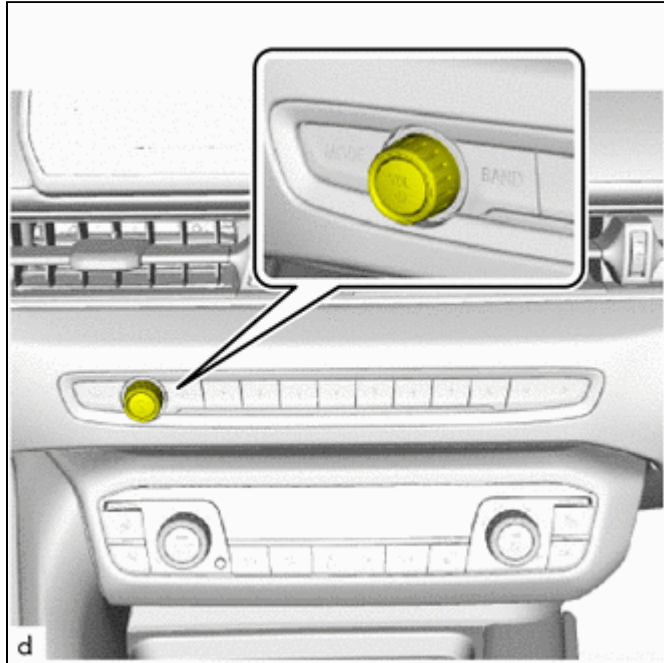


(b) Check that the cable is disconnected from the negative (-) battery terminal.

CAUTION:


- Wait at least 60 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.
- If the airbag deploys for any reason, it may cause a serious accident.

(c) Unlock the plug connection (1) and disconnect.

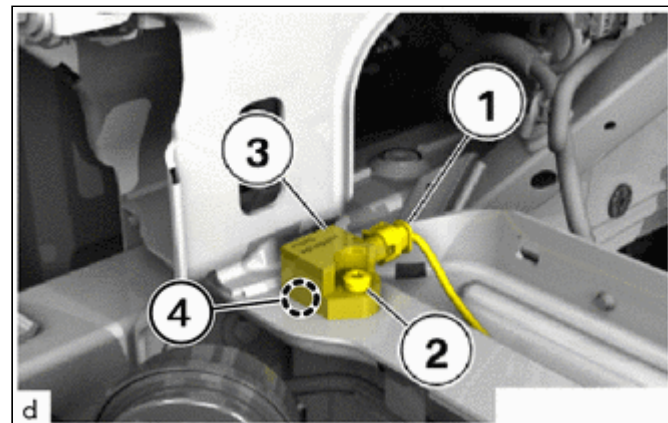

(d) Loosen the T30 bolt (2) and detach the guide (4) to remove the front airbag sensor (3).



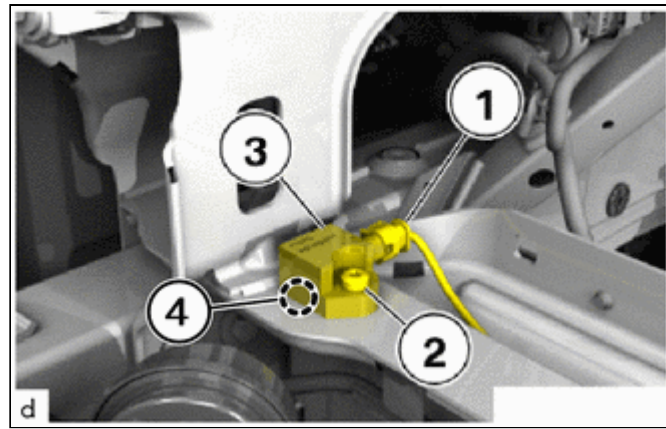

(d) Replace the T30 bolt (2).

(e) Tighten the T30 bolt (2).

Torque:

8.0 N·m {82 kgf·cm, 71 in·lbf}

(f) Connect the connectors (1) and lock.

2. INSTALL HEADLIGHT ASSEMBLY

Click here [INFO](#)

