

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2022 Toyota Tacoma Service and Repair Manual

[Go to manual page](#)

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001R9LP
Model Year Start: 2021	Model: Supra	Prod Date Range: [07/2020 -]
Title: SUPPLEMENTAL RESTRAINT SYSTEMS: SIDE AIRBAG SENSOR: INSTALLATION; 2021 - 2025 MY Supra [07/2020 -]		

INSTALLATION

CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.


PROCEDURE

1. INSTALL SIDE AIRBAG PRESSURE SENSOR

(a) Check that the START-STOP button (engine switch) off.

HINT:

Pressing and holding the AUDIO button changes the power source mode to IG OFF.

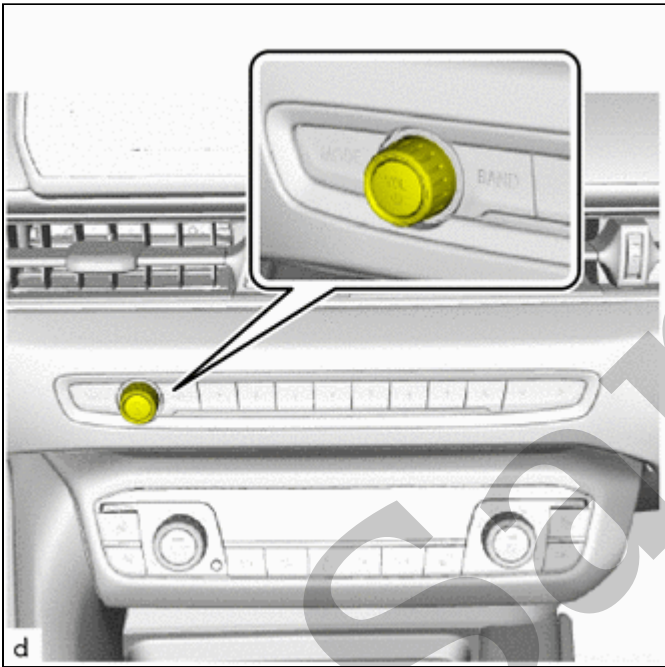

(b) Check that the cable is disconnected from the negative (-) battery terminal.

CAUTION:


- Wait at least 60 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.
- If the airbag deploys for any reason, it may cause a serious accident.


(c) Turn the side airbag pressure sensor (3) in the direction of the arrow until the claw (2) attach.

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001JCJM
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: SUPPLEMENTAL RESTRAINT SYSTEMS: REAR AIRBAG SENSOR: COMPONENTS; 2020 - 2025 MY Supra [03/2019 -]		

COMPONENTS

ILLUSTRATION

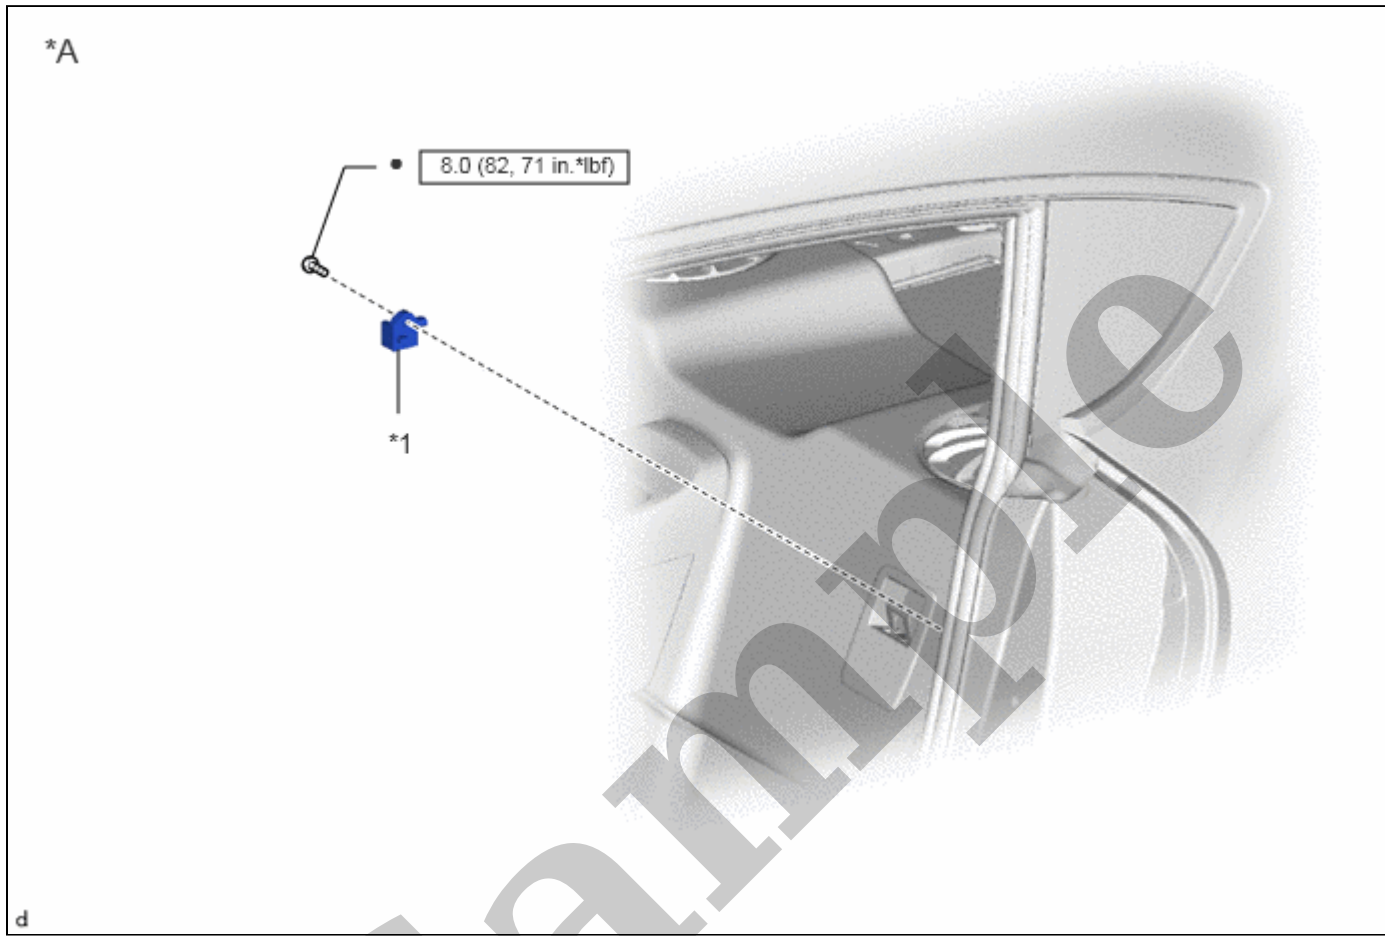

*A	for LH Side	-	-
*1	AIRBAG SENSOR	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

ILLUSTRATION

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001JCJN
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 - 07/2020]
Title: SUPPLEMENTAL RESTRAINT SYSTEMS: REAR AIRBAG SENSOR: REMOVAL; 2020 - 2021 MY Supra [03/2019 - 07/2020]		

REMOVAL

CAUTION / NOTICE / HINT

CAUTION:

- Pyrotechnic components.

Danger! Life-threatening injuries!



- All work on pyrotechnic parts may be carried out by technically experienced and appropriately trained personnel only.
- Replace any damaged part or ones that have been dropped.
- For additional information see:

Click here [INFO](#)

- Working on 12 V vehicle electrical system.

Risk of short circuits! Risk of fire!

- Detach the cable from the negative (-) battery terminal.

NOTICE:

- Before performing work on electronic components, disconnect the cable from the negative (-) battery terminal to prevent damage to the electrical system or components.
- When disconnecting the cable, turn the START-STOP button (engine switch) and headlight switch off and loosen the cable nut completely. Perform these operations without twisting or prying on the cable. Then disconnect the cable.
- Clock settings, radio settings, audio system memory, DTCs and other data will be cleared when the cable is disconnected from the negative (-) battery terminal. Write down any necessary data before disconnecting the cable.

PROCEDURE

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Click here [INFO](#)


CAUTION:

- Wait at least 60 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.
- If the airbag deploys for any reason, it may cause a serious accident.

(a) Check that the START-STOP button (engine switch) off.

HINT:

Pressing and holding the AUDIO button changes the power source mode to IG OFF.

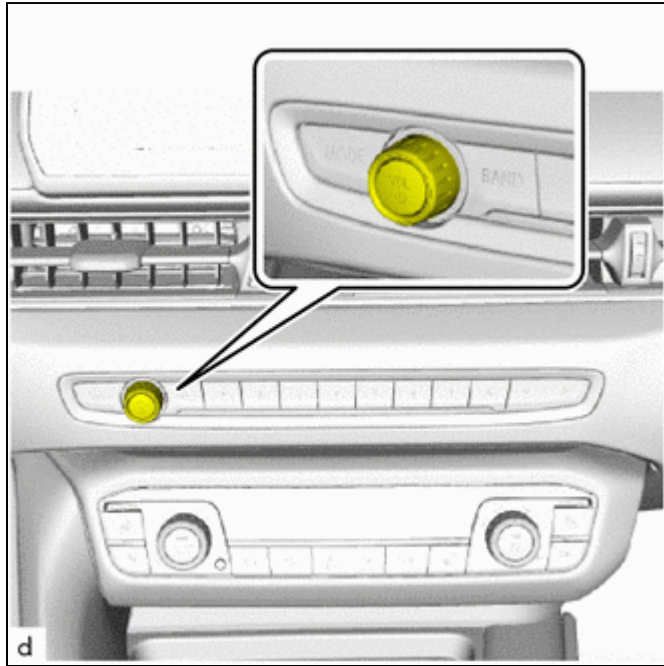


(b) Check that the cable is disconnected from the negative (-) battery terminal.

CAUTION:

- Wait at least 60 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.
- If the airbag deploys for any reason, it may cause a serious accident.

(c) Unlock the plug connection (1) and disconnect.

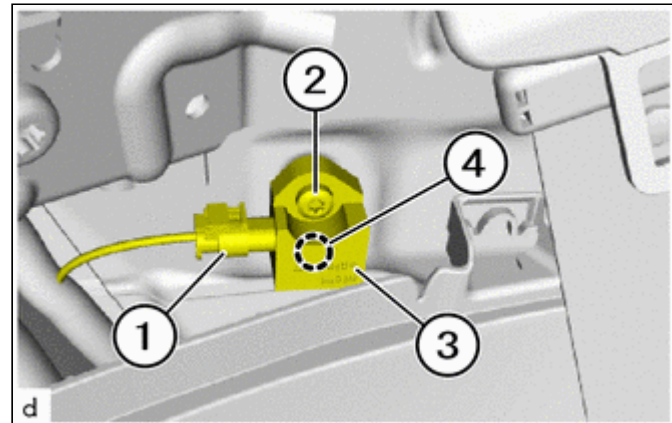

(d) Loosen the T30 bolt (2) and detach the guide (4) to remove the airbag sensor (3).

6. REMOVE AIRBAG SENSOR (for RH Side)

HINT:

Use the same procedure as for the LH side.

