

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2023 NISSAN Sentra SE-R Service and Repair Manual

[Go to manual page](#)

# DTC Inspection Priority Chart

SIEMD-7109588

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none"><li>• C1E90-54: Radar off-center</li><li>• C1E90-78: Radar off-center</li><li>• C1E93-55: Configuration unfinished</li><li>• U2A08-88: CAN comm err (ITS3/5-CAN Bus Off)</li></ul>
2	<ul style="list-style-type: none"><li>• C1E80-44: Control unit</li><li>• C1E80-45: Control unit</li><li>• C1E80-46: Control unit</li><li>• C1E80-47: Control unit</li><li>• C1E80-48: Control unit</li><li>• C1E80-49: Control unit</li><li>• C1E80-4B: Control unit</li><li>• C1E81-12: Incorrect installation location</li><li>• C1E82-62: RCTA ON/OFF Incorrect</li><li>• C1E83-62: BSW ON/OFF Incorrect</li><li>• C1E91-97: RADAR BLOCKED</li><li>• C1E92-16: Power supply circuit</li><li>• C1E92-17: Power supply circuit</li><li>• C1E94-97: RADAR ELECTROMAGNETIC INTERFERENCE</li><li>• U1B46-11: BSW indicator</li><li>• U1B46-15: BSW indicator</li><li>• U1B4E-87: CAN comm err</li><li>• U2148-81: CAN comm err (brake control unit)</li><li>• U2148-82: CAN comm err (brake control unit)</li><li>• U2148-83: CAN comm err (brake control unit)</li><li>• U2148-86: CAN comm err (brake control unit)</li><li>• U2148-87: CAN comm err (brake control unit)</li><li>• U214E-81: CAN comm err (combination meter)</li><li>• U214E-87: CAN comm err (combination meter)</li><li>• U214F-81: CAN comm err (BCM)</li><li>• U214F-82: CAN comm err (BCM)</li><li>• U214F-83: CAN comm err (BCM)</li><li>• U214F-86: CAN comm err (BCM)</li></ul>

Priority	Detected items (DTC)
	<ul style="list-style-type: none"><li>• U214F-87: CAN comm err (BCM)</li><li>• U2152-81: CAN comm err (ADAS control unit)</li><li>• U2152-87: CAN comm err (ADAS control unit)</li><li>• U2154-81: CAN comm err (MIU)</li><li>• U2154-87: CAN comm err (MIU)</li><li>• U2156-81: CAN comm err (steering angle sensor)</li><li>• U2156-87: CAN comm err (steering angle sensor)</li><li>• U215B-81: CAN comm err (IPDM E/R)</li><li>• U215B-82: CAN comm err (IPDM E/R)</li><li>• U215B-83: CAN comm err (IPDM E/R)</li><li>• U215B-86: CAN comm err (IPDM E/R)</li><li>• U215B-87: CAN comm err (IPDM E/R)</li><li>• U216C-81: CAN comm err (side radar)</li><li>• U216C-82: CAN comm err (side radar)</li><li>• U216C-83: CAN comm err (side radar)</li><li>• U216C-87: CAN comm err (side radar)</li></ul>

Sample

## Self Diagnostic Result

DTC		Items (CONSULT screen terms)	Fail-safe									Reference
			Vehicle speed & vehicle-to-vehicle control function	Lane keep function *1	Lane keep function *2	Lane change support function	Overtaking support function	Route driving support function	BSW	I-BSI	RCTA	
C1E80	44	Control unit	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
	45		x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
	46		x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
	47		x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
	48		x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
	49		x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
	4B		x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
C1E81	12	Incorrect installation location	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
C1E82	62	RCTA ON/OFF Incorrect	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
C1E82	62	RCTA ON/OFF Incorrect	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
C1E83	62	BSW ON/OFF Incorrect	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
C1E90	54	CAN comm err (MIU)	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
	78		x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
C1E91	97	RADAR BLOCKED	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
C1E92	16	Power supply circuit	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
	17		x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
C1E93	55	Configuration unfinished	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
C1E94	97	RADAR ELECTROMAGNETIC INTERFERENCE	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
U1B46	11	BSW indicator	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
	15		x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
U1B4E	87	CAN comm err	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>
U2148	81	CAN comm err (brake control unit)	x	x	x	x	x	x	x	x	x	<a href="#">DTC Description</a>

DTC		Items (CONSULT screen terms)	Fail-safe									Reference
			Vehicle speed & vehicle-to-vehicle control function	Lane keep function *1	Lane keep function *2	Lane change support function	Overtaking support function	Route driving support function	BSW	I-BSI	RCTA	
	82	CAN comm err (BCM)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	83		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	86		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U214E	81	CAN comm err(combination meter)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U214F	81	CAN comm err (BCM)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	82		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	83		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	86		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U2152	81	CAN comm err (ADAS control unit)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U2154	81	CAN comm err (MIU)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U2156	81	CAN comm err (steering angle sensor)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U215B	81	CAN comm err (IPDM E/R)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	82		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	83		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	86		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U216C	81	CAN comm err (side radar)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	82		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
	83		×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U2A08	88	CAN comm err (ITS3/5-CAN Bus Off)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>

\*1: ProPILOT Assist 2.0 display is green

\*2: ProPILOT Assist 2.0 display is blue

×: Applicable

Network-DTC

DTC		Items (CONSULT screen terms)	Fail-safe								Reference	
			Vehicle speed & vehicle- to-vehicle control function	Lane keep function *1	Lane keep function *2	Lane change support function	Overtaking support function	Route driving support function	BSW	I- BSI	RCTA	
U2148	87	CAN comm err (brake control unit)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U214E	87	CAN comm err (combination meter)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U214F	87	CAN comm err (BCM)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U2152	87	CAN comm err (ADAS control unit)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U2154	87	CAN comm err (MIU)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U2156	87	CAN comm err (steering angle sensor)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U215B	87	CAN comm err (IPDM E/R)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>
U216C	87	CAN comm err (side radar)	×	×	×	×	×	×	×	×	×	<a href="#">DTC Description</a>

\*1: ProPILOT Assist 2.0 display is green

\*2: ProPILOT Assist 2.0 display is blue

# List of ECU Reference

SIEMD-7109808


ECU	Reference
ADAS control unit 2	<a href="#">Reference Value</a>
	<a href="#">Fail-safe (ADAS Control Unit 2)</a>
	<a href="#">DTC Inspection Priority Chart</a>
	<a href="#">DTC Index</a>

Sample

## VALUES ON THE DIAGNOSIS TOOL

Monitor item	Condition	Value/Status
Horizontal alignment value	When the power switch ON and the side radar adjustment is completed	Displays the horizontal alignment value

## TERMINAL LAYOUT

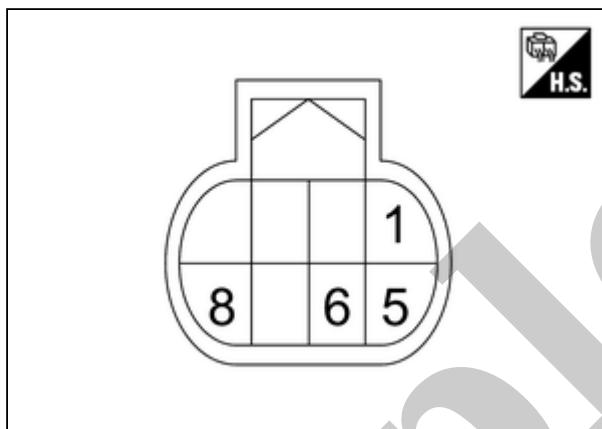

SIEMD-7255973-01-000361281

## PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/Output		
1 (BR)	—	CAN communication-H	—	—	—
5 (B)	Ground	Ground	—	Power switch ON	0 V
6 (V)	—	CAN communication-L	—	—	—
8 (Y)	5 (B)	Power switch ON power supply	Input	Power switch ON	Battery voltage

# Fail-safe

SIEMD-7255974

Refer to [Fail-safe \(ADAS Control Unit 2\)](#).

Sample

# DTC Inspection Priority Chart

SIEMD-7255975

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none"><li>• C1E50–54: Side radar alignment</li><li>• C1E50–78: Side radar alignment</li><li>• C1E53–55: Configuration unfinished</li><li>• U2A09–88: Comm Bus Off ITS5-FD</li></ul>
2	<ul style="list-style-type: none"><li>• C1E40–44: Control unit</li><li>• C1E40–45: Control unit</li><li>• C1E40–46: Control unit</li><li>• C1E40–47: Control unit</li><li>• C1E40–48: Control unit</li><li>• C1E40–49: Control unit</li><li>• C1E40–4B: Control unit</li><li>• C1E41–12: Incorrect installation location</li><li>• C1E51–97: Side radar stain</li><li>• C1E52–16: Side radar malfunction</li><li>• C1E52–17: Side radar malfunction</li><li>• C1E54–97: Radar electromagnetic interference</li><li>• U1B3E–87: CAN comm err</li><li>• U2148–81: CAN comm err (brake control unit)</li><li>• U2148–82: CAN comm err (brake control unit))</li><li>• U2148–83: CAN comm err (brake control unit)</li><li>• U2148–86: CAN comm err (brake control unit)</li><li>• U214F–81: CAN comm err (BCM)</li><li>• U214F–82: CAN comm err (BCM)</li><li>• U214F–83: CAN comm err (BCM)</li><li>• U214F–86: CAN comm err (BCM)</li><li>• U2156–81: CAN comm err (steering angle sensor)</li><li>• U215B–81: CAN comm err (IPDM E/R)</li><li>• U215B–82: CAN comm err (IPDM E/R)</li><li>• U215B–83: CAN comm err (IPDM E/R)</li><li>• U215B–86: CAN comm err (IPDM E/R)</li><li>• U2148–87: CAN comm err (brake control unit)</li><li>• U214F–87: CAN comm err (BCM)</li></ul>