 



# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2023 NISSAN Sunny Service and Repair Manual

[Go to manual page](#)

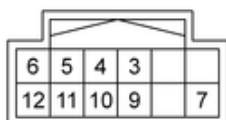

SIEMD-7255969-02-000366449

## PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/Output		
3 (R)	10 (B)	LED signal (+)	Output	Power switch ON	
4 (LA/B)	Ground	Ground	—	Power switch ON	0 V
5 (R)	—	CAN communication-L	—	—	—
6 (LA/B)	Ground	Ground	—	Power switch ON	0 V
7 (LA/LG)		Power switch ON power supply	Input	Power switch ON	Battery voltage
9 (LA/B)		Ground	—	Power switch ON	0 V
10 (B)	—	LED signal (-)	Output	Power switch ON	
11 (BR)	—	CAN communication-H	—	—	—
12 (LA/B)	Ground	Ground	—	Power switch ON	0 V
13 (—)	—	Ground	Output	Power switch ON	0 V
14 (—)	13 (—)	driver monitor camera power supply	Output	Power switch ON	Battery voltage
15 (—)	—	Driver monitor camera image signal (-)	—	—	—
16 (—)		Driver monitor camera image signal (+)	—	—	—

# Fail-safe

Refer to [Fail-safe \(Driver Monitor Camera Control Unit\)](#).

Sample

# DTC Inspection Priority Chart

SIEMD-7255971

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none"><li>• B2A50-55: DRIVER MONITOR CAMERA</li><li>• U2A07-88: Comm Bus Off ITS2-FD</li></ul>
2	<ul style="list-style-type: none"><li>• B2A50-49: DRIVER MONITOR CAMERA</li><li>• B2A51-A2: POWER SUPPLY VOLTAGE</li><li>• B2A52-96: DRIVER MONITOR CAMERA ㉮</li><li>• B2A54-87: DRIVER MONITOR CAMERA</li><li>• U2152-87: CAN comm err (ADAS control unit)</li><li>• U2143-87: CAN comm err (VCM/HCM)</li><li>• U214F-87: CAN comm err (BCM)</li><li>• U2148-87: CAN comm err (brake control unit)</li><li>• U2154-87: CAN comm err (MIU)</li></ul>

## Self Diagnostic Result

DTC		Items (CONSULT screen terms)	Fail-safe				Reference
			Lane keep function *	Lane change support function	Overtaking support function	Route driving support function	
B2A50	49	DRIVER MONITOR CAMERA	×	×	×	×	<a href="#">DTC Description</a>
B2A50	55	DRIVER MONITOR CAMERA	×	×	×	×	<a href="#">DTC Description</a>
B2A51	A2	POWER SUPPLY VOLTAGE	×	×	×	×	<a href="#">DTC Description</a>
B2A52	96	DRIVER MONITOR CAMERA	×	×	×	×	<a href="#">DTC Description</a>
B2A54	87	DRIVER MONITOR CAMERA	×	×	×	×	<a href="#">DTC Description</a>
U2A07	88	Comm Bus Off ITS2-FD	×	×	×	×	<a href="#">DTC Description</a>

\*: ProPILOT Assist 2.0 display is blue

×:Applicable

## Network-DTC

DTC		Items (CONSULT screen terms)	Fail-safe				Reference
			Lane keep function *	Lane change support function	Overtaking support function	Route driving support function	
U2152	87	CAN comm err (ADAS control unit)	×	×	×	×	<a href="#">DTC Description</a>
U2143	87	CAN comm err (VCM/HCM)	×	×	×	×	<a href="#">DTC Description</a>
U214F	87	CAN comm err (BCM)	×	×	×	×	<a href="#">DTC Description</a>
U2148	87	CAN comm err (brake control unit)	×	×	×	×	<a href="#">DTC Description</a>
U2154	87	CAN comm err (MIU)	×	×	×	×	<a href="#">DTC Description</a>

\*: ProPILOT Assist 2.0 display is blue

## OPERATION PROHIBITION

---

### WARNING:

- Parts with strong magnet is used in this vehicle.
- Technicians using a medical electric device such as pacemaker must never perform operation on the vehicle, as magnetic field can affect the device function by approaching to such parts.

## NORMAL CHARGE PRECAUTION

---

### WARNING:

- If a technician uses a medical electric device such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, the possible effects on the devices must be checked with the device manufacturer before starting the charge operation.
- As radiated electromagnetic wave generated by PDM (Power Delivery Module) at normal charge operation may affect medical electric devices, a technician using a medical electric device such as implantable cardiac pacemaker or an implantable cardioverter defibrillator must not approach motor room [PDM (Power Delivery Module)] at the hood-opened condition during normal charge operation.

## PRECAUTION AT TELEMATICS SYSTEM OPERATION

---

### WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of TCU might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), when using the service, etc.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of TCU might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before TCU use.

## PRECAUTION AT INTELLIGENT KEY SYSTEM OPERATION

---


### WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of Intelligent Key might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), at door operation, at each request switch operation, or at engine starting.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of Intelligent Key might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before Intelligent Key use.

# Precautions for Removing Battery Terminal

RDE-001981137

- With the adoption of Auto ACC function, ACC power is automatically supplied by operating the Intelligent Key or remote keyless entry or by opening/closing the driver side door. In addition, ACC power is supplied even after the ignition switch is turned to the OFF position, i.e. ACC power is supplied for a certain fixed time.
- When disconnecting the 12V battery terminal, turn off the ACC power before disconnecting the 12V battery terminal, observing “How to disconnect 12V battery terminal” described below.

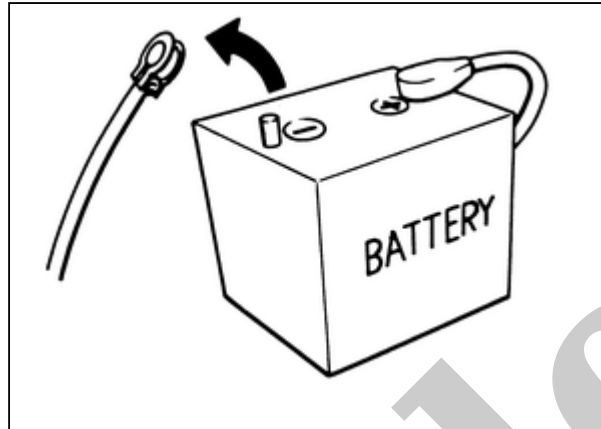

RDE-001981137-01-EF289H



## NOTE:

ECU may be active for several minutes after the power switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- Disconnect 12V battery terminal according to the following steps. Even when the power switch is OFF, the 12V battery automatic charge control may automatically start.

## CAUTION:

Do not remove the battery during the update as the software update cannot be completed normally if the battery is removed during the software update.

## WORK PROCEDURE

1. Open the hood (LHD models) or the back door (RHD models).
2. Check that charge cable (including EVSE) is not connected to the charge port.



## NOTE:

If charge cable (including EVSE) is connected, the air conditioning system may be automatically activated by the timer A/C function.

3. Turn the power switch OFF → ON → press the power switch for at least 2 seconds to turn the high voltage system OFF, and then check that the charging status indicator is not illuminated.



## NOTE:

When the high voltage system is turned ON, the charging status indicator blinks green with a frequency of 1 second.

4. Get out of the vehicle. Close all doors {except the hood (LHD models) or the back door (RHD models)}.
5. Check that the combination meter turns OFF and wait for 5 minutes or more.

## CAUTION:

**While waiting, never operate the vehicle such as locking, opening, and closing doors. Violation of this caution results in the activation of ACC power supply according to the Auto ACC function.**



**NOTE:**

**If the battery is removed within 5 minutes after the power switch is turned OFF, plural DTCs may be detected.**

6. Check that the followings are not illuminated.

- Charging status indicator
- Electric parking brake warning lamp

7. Remove 12V battery terminal within 60 minutes after the power switch is turned OFF at Step 3.

**CAUTION:**

- **After all doors (including hood and back door) are closed, if a door (including hood and back door) is opened before battery terminals are disconnected, start over from Step 3.**
- **After turning the power switch OFF, if “Remote A/C” is activated by user operation, stop the air conditioner and start over from Step 3.**



**NOTE:**

**Once the power switch is turned ON → OFF, the 12V battery automatic charge control does not start for approximately 1 hour.**

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the power switch.



**NOTE:**

**If the power switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.**

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.



**NOTE:**

**The removal of 12V battery may cause a DTC detection error.**



# Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

RDE-001981136

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

## **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

## **PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS**


### **WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition/power switch ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition/power switch OFF, disconnect the 12V battery or batteries, and wait at least 3 minutes before performing any service.

# Commercial Service Tool

RDE-001824489

Tool name		Description
PowerTool	 <p data-bbox="491 414 829 439">RDE-001675050-01-IIB1407E</p>	Loosening nuts, screws and bolts

Sample