

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2024 Ford Ranger Service and Repair Manual


[Go to manual page](#)

18. **NOTE**

Ensure that the ignition coil-on-plug is fully seated on the spark plug by pushing down on the boot end until it stops.

Install the ignition coil-on-plugs, then install and tighten the bolts..

Torque : 89 lb.in (10 Nm)

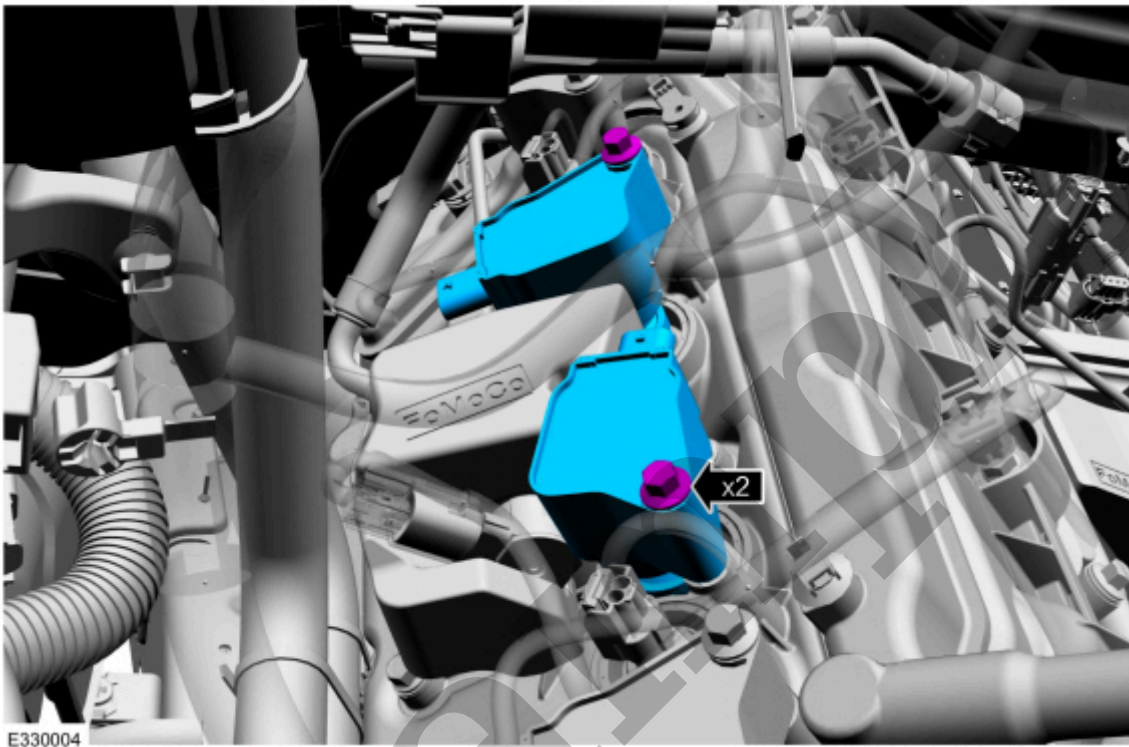

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

19. Connect the ignition coil-on-plug electrical connectors.

Fuel Injectors

303-04E Fuel Charging and Controls - 5.0L 32V Ti-VCT	2022 F-150
Removal and Installation	Procedure revision date: 07/12/2017

Fuel Injectors


Removal and Installation

1. The fuel injectors are removed with the fuel rails.

Refer to: [Direct Injection Fuel Rail LH](#)(303-04E Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).


Refer to: [Direct Injection Fuel Rail RH](#)(303-04E Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).

Refer to: [Port Injection Fuel Rail](#)(303-04E Fuel Charging and Controls - 5.0L 32V Ti-VCT, Removal and Installation).

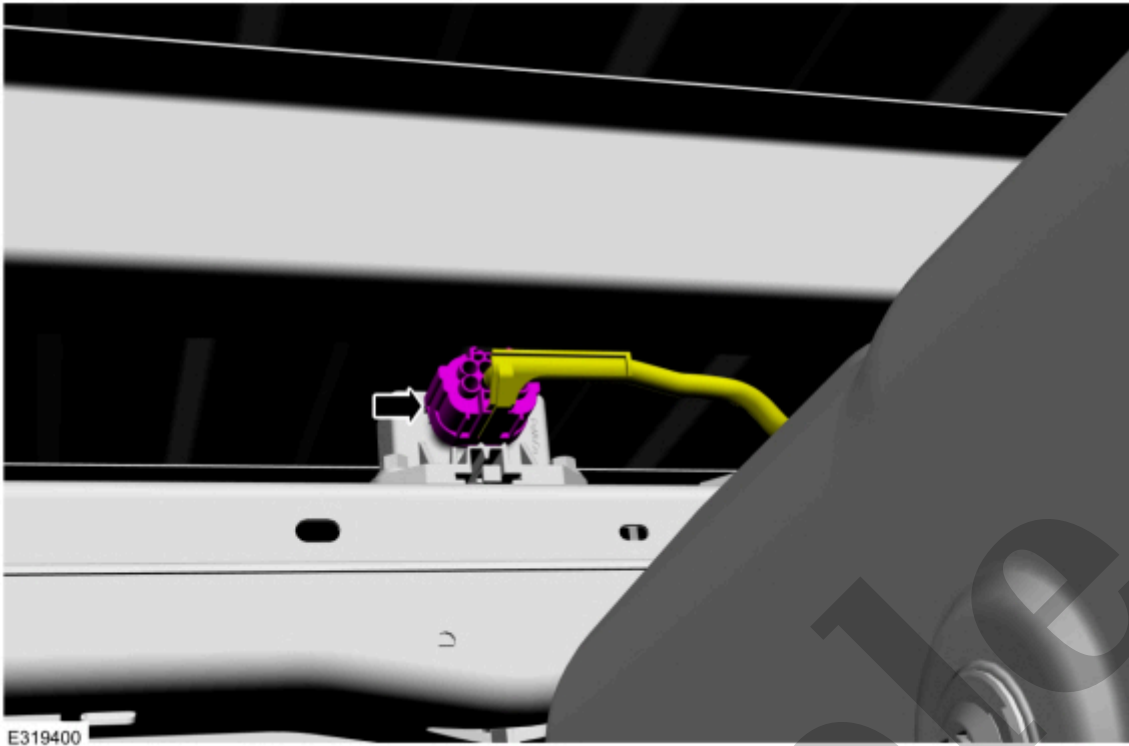

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Remove the fuel pump driver module bolts, then remove the fuel pump driver module.

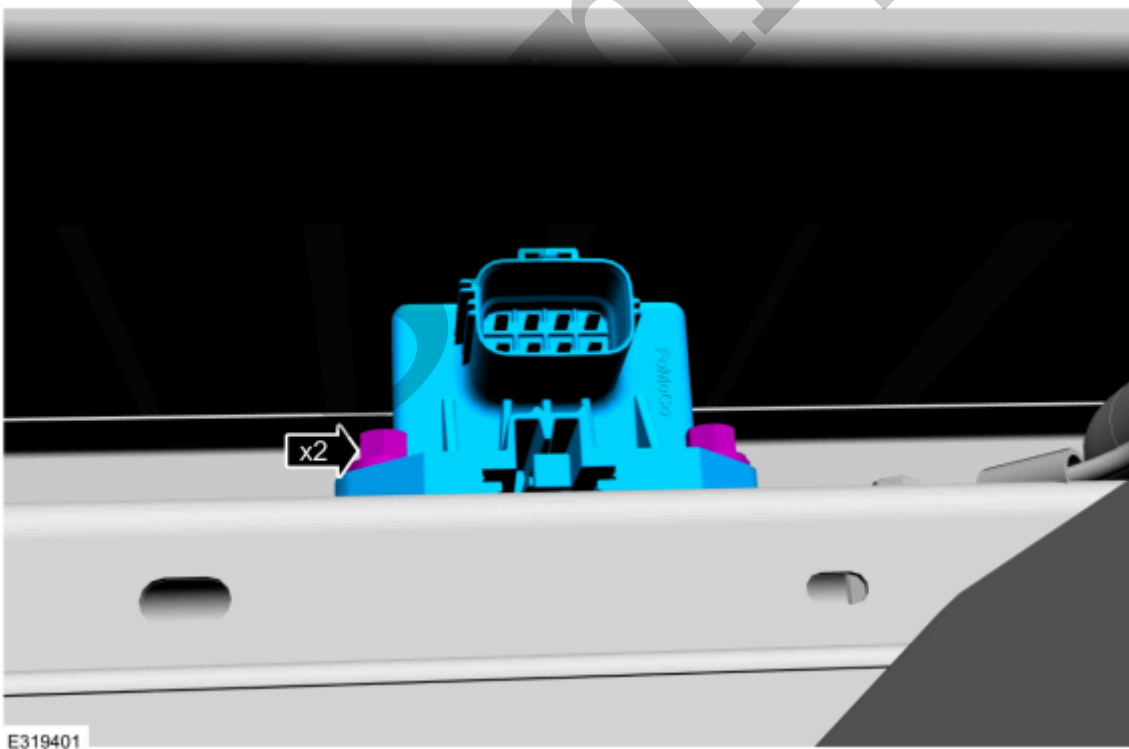

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Copyright © Ford Motor Company

Sample

High-Pressure Fuel Pump

303-04E Fuel Charging and Controls - 5.0L 32V Ti-VCT	2022 F-150
Removal and Installation	Procedure revision date: 10/1/2020

High-Pressure Fuel Pump

Removal

NOTICE

Do not loosen any fittings or plugs on the high-pressure fuel pump.

1. With the vehicle in NEUTRAL, position it on a hoist.

Refer to: [Jacking and Lifting - Overview](#)(100-02 Jacking and Lifting, Description and Operation).


2. Release the fuel system pressure.

Refer to: [Fuel System Pressure Release](#)(310-00E Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).

3. Remove the intake manifold.


Refer to: [Intake Manifold](#)(303-01E Engine - 5.0L 32V Ti-VCT, Removal and Installation).

4. Disconnect the ignition coil-on-plug electrical connectors.

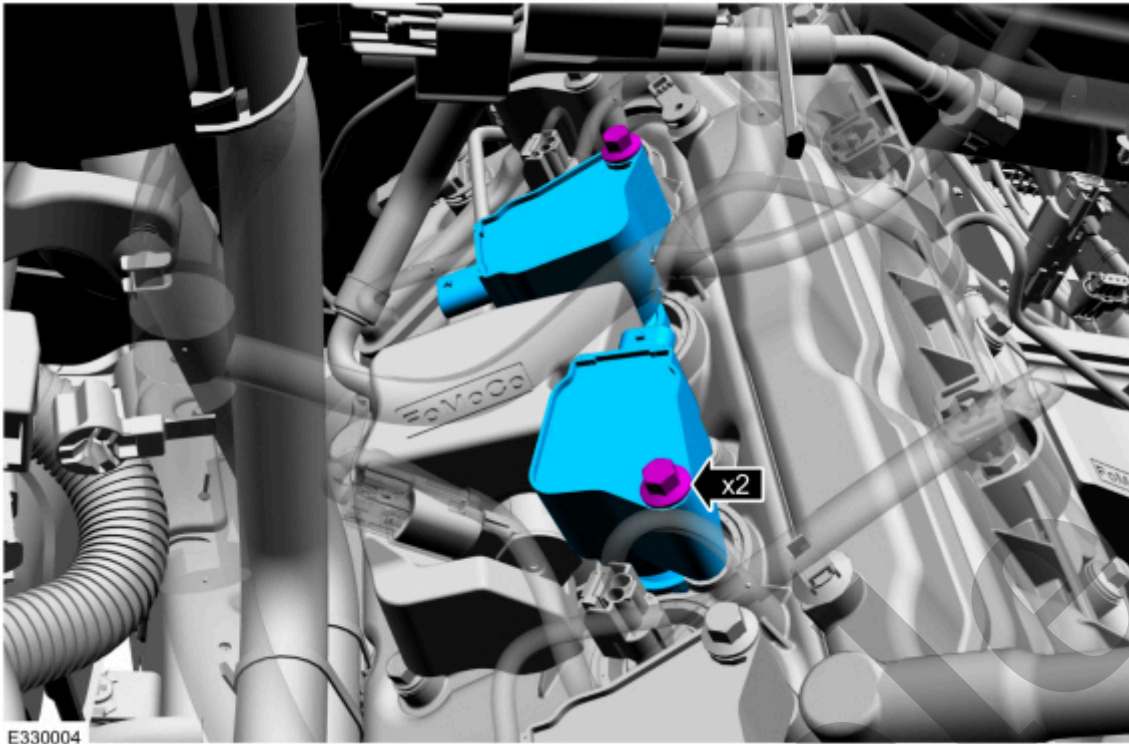


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Disconnect the high-pressure fuel pump electrical connector.

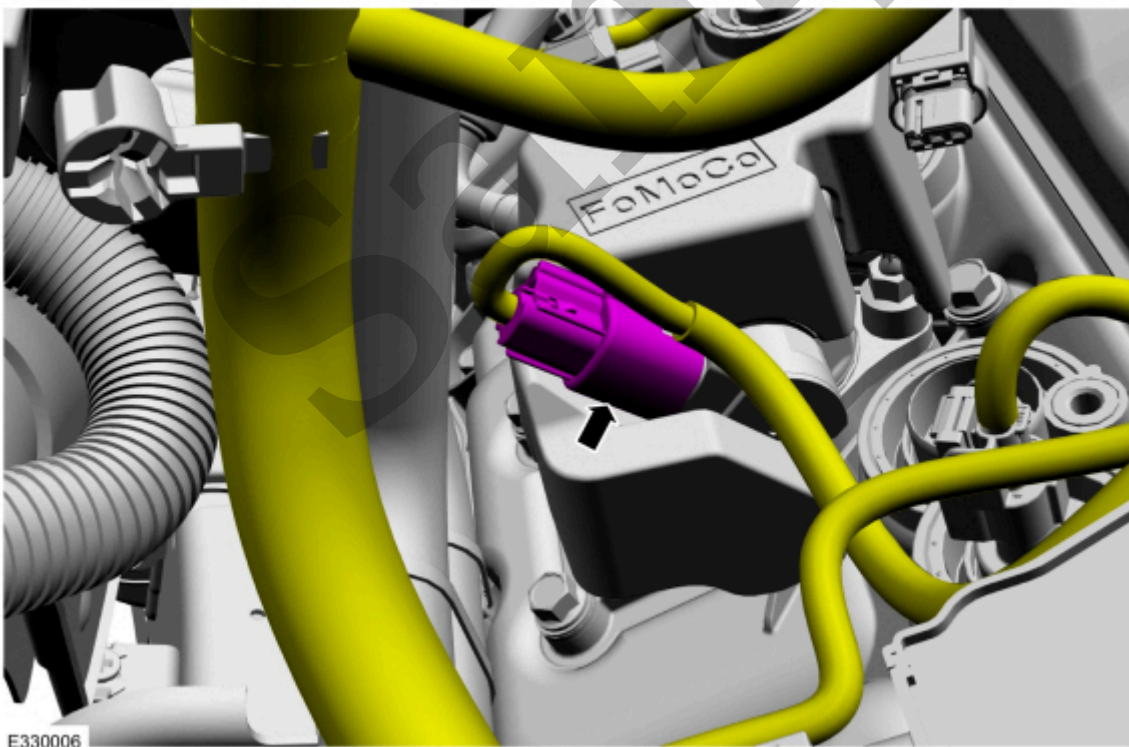


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

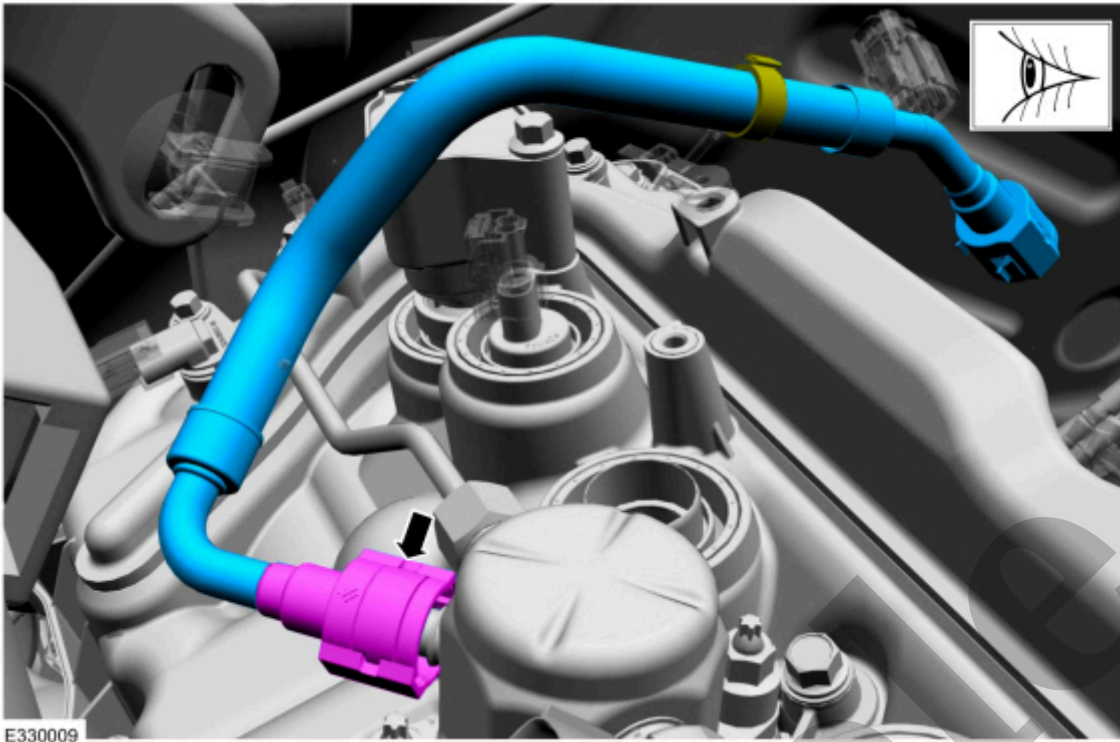

E330009

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. Detach the wiring harness retainer from high-pressure fuel line shield.

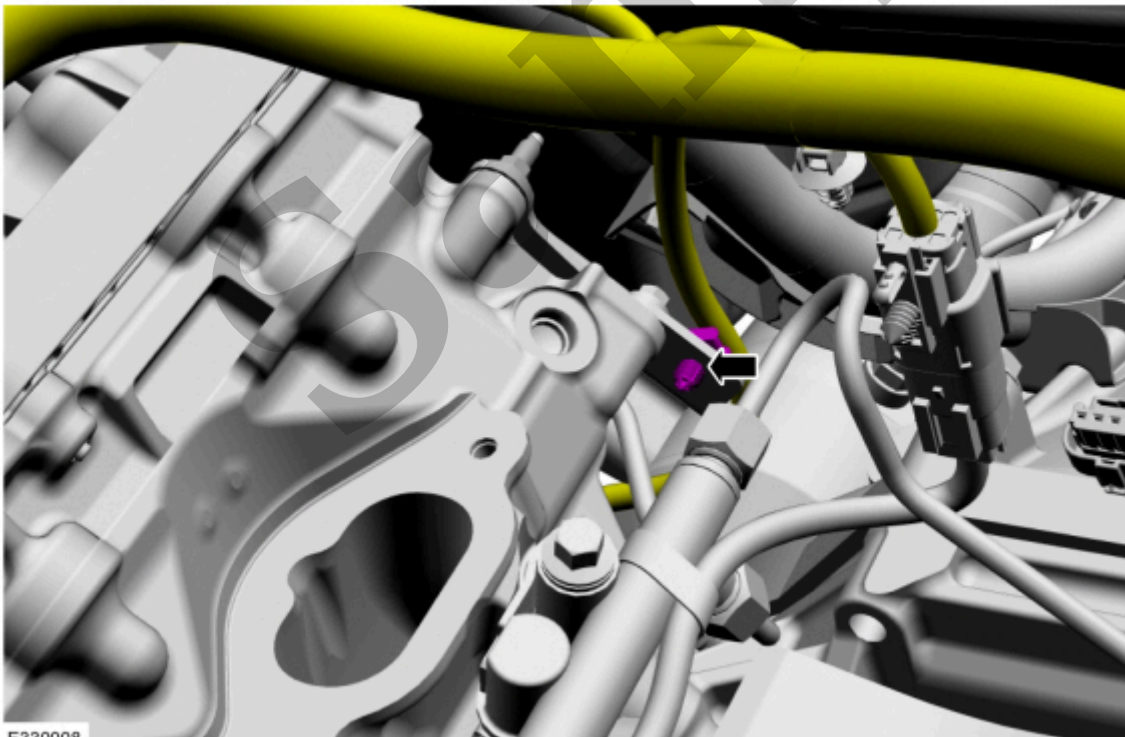

E330008


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

10. Remove the high-pressure fuel line shield retainers, then remove high-pressure fuel line shield.

12. NOTICE


To release the fuel pressure in the high-pressure fuel tube, wrap the high-pressure fuel tube flare nuts with a shop towel to absorb any residual fuel pressure during the loosening of the high-pressure fuel tube flare nuts.

Remove the high-pressure fuel tube retainers. Disconnect the high-pressure fuel tube flare nuts, then remove and discard the high-pressure fuel tube.

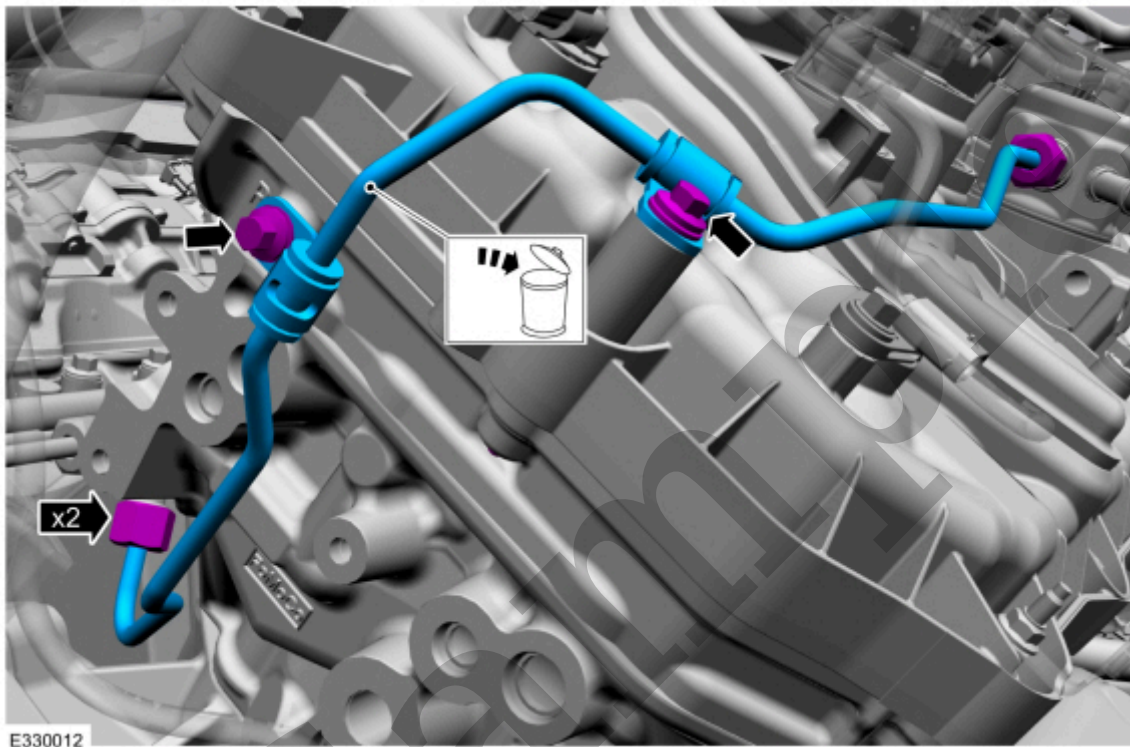

[Click here to learn about symbols, color coding, and icons used in this manual.](#)



13. Alternately loosen the high-pressure fuel pump nuts one complete revolution at a time and remove, then remove the high-pressure fuel pump.

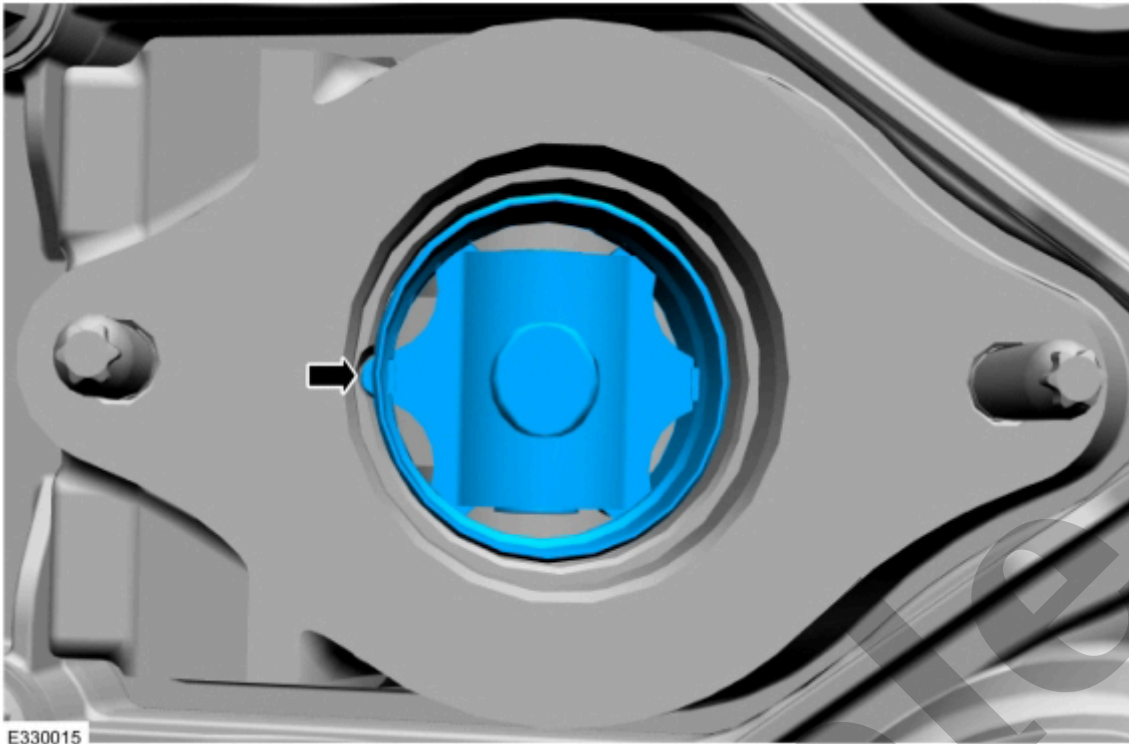

E330015

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

 16. Inspect the high-pressure fuel pump roller tappet. If any flat spots or scoring are found, especially in the indicated areas, then inspect the high-pressure fuel pump and the high-pressure fuel pump roller tappet drive lobe. Install new components as needed.

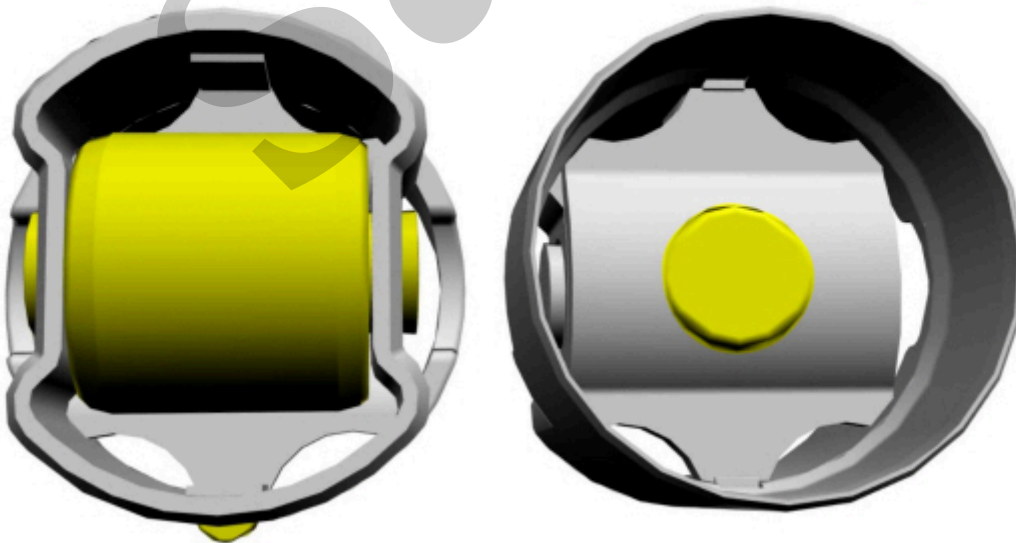

E175709