


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2024 Toyota Camry Service and Repair Manual

[Go to manual page](#)

(a) Remove the front side air guide sub-assembly LH (1).

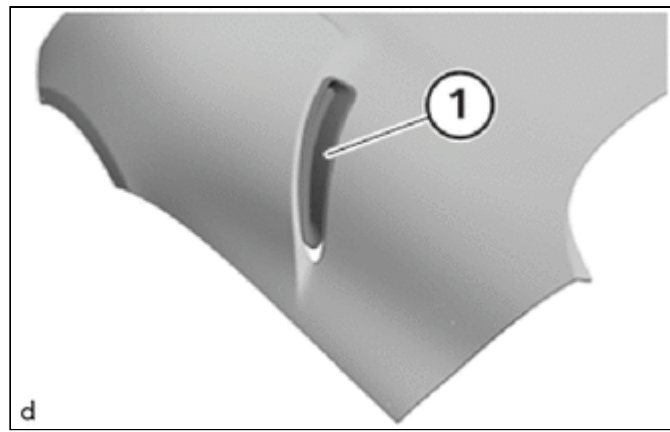

## 7. REMOVE FRONT SIDE AIR GUIDE SUB-ASSEMBLY RH

### HINT:


Perform the operations on the left and right side.

## 8. REMOVE HOOD LOCK STRIKER

### HINT:

Perform the operations on the left and right side.

(a) Loosen nuts (1).

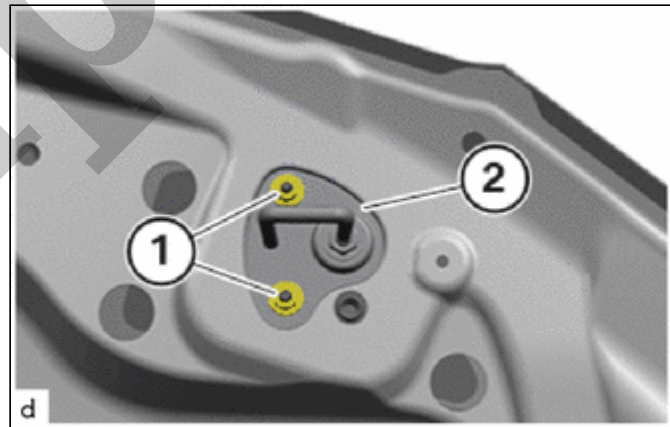

(b) Remove hood lock striker (2).

## 9. REMOVE COWL VENT COVER LH

Click here [INFO](#)

## 10. REMOVE COWL VENT COVER RH


Click here [INFO](#)

## 11. REMOVE HOOD SUPPORT ASSEMBLY


Click here [INFO](#)



19.0 N·m {194 kgf·cm, 14 ft·lbf}

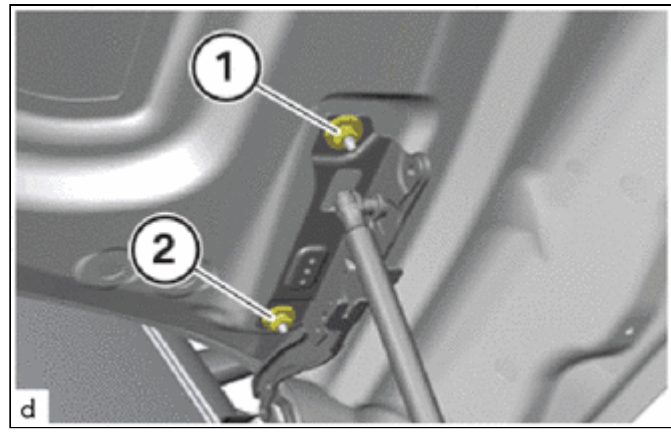

(d) Adjust hood lock striker (1) by turning nut (2).

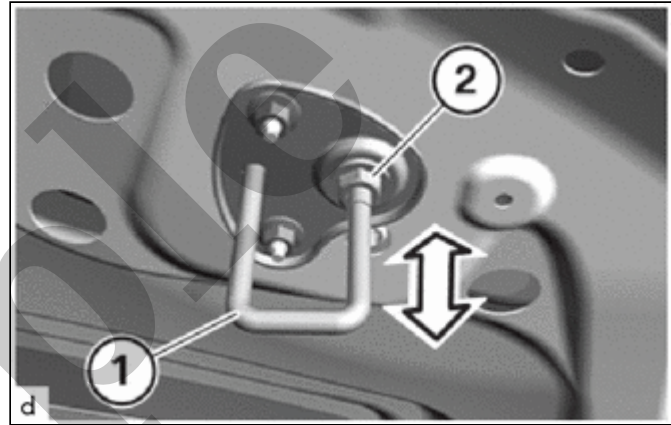

(e) Check the gap dimensions (arrows) between the hood sub-assembly and the front bumper assembly.



(f) Check the gap dimensions (arrows) between the hood sub-assembly and the headlight assemblies.

**HINT:**

- Gap dimensions do not correspond to the specifications.
- Adjust the hood sub-assembly catch correctly.

(g) Screw in fender to hood bumpers (1) fully until the pin (2) can be pulled out.

<b>Last Modified:</b> 07-26-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000001JCSR
<b>Model Year Start:</b> 2020	<b>Model:</b> Supra	<b>Prod Date Range:</b> [03/2019 - ]
<b>Title:</b> DOOR / HATCH: HOOD: REASSEMBLY; 2020 - 2025 MY Supra [03/2019 - ]		

## REASSEMBLY

### PROCEDURE

#### 1. INSTALL HOOD SUPPORT ASSEMBLY

Click here [INFO](#)

#### 2. INSTALL COWL VENT COVER LH

Click here [INFO](#)

#### 3. INSTALL COWL VENT COVER RH


Click here [INFO](#)

#### 4. INSTALL HOOD LOCK STRIKER

##### HINT:

Perform the operations on the left and right side.

(a) Install hood lock striker (2) on the hood sub-assembly.

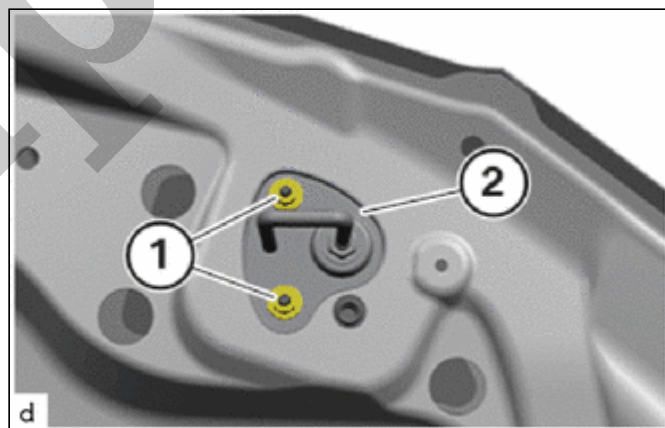

(b) Tighten nuts (1).

##### Torque:

**8.0 N·m {82 kgf·cm, 71 in·lbf}**

#### 5. INSTALL FRONT SIDE AIR GUIDE SUB-ASSEMBLY LH

(a) Install a new front side air guide sub-assembly LH (1).

## 10. INSTALL FRONT WASHER NOZZLE AND HOSE ASSEMBLY

Click here [INFO](#)

## 11. INSTALL HOOD MOULDING LH

Click here [INFO](#)

## 12. INSTALL HOOD MOULDING RH

### HINT:

Use the same procedure as for the LH side.

Sample