


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2025 Toyota Camry Hybrid Service Manual

[Go to manual page](#)

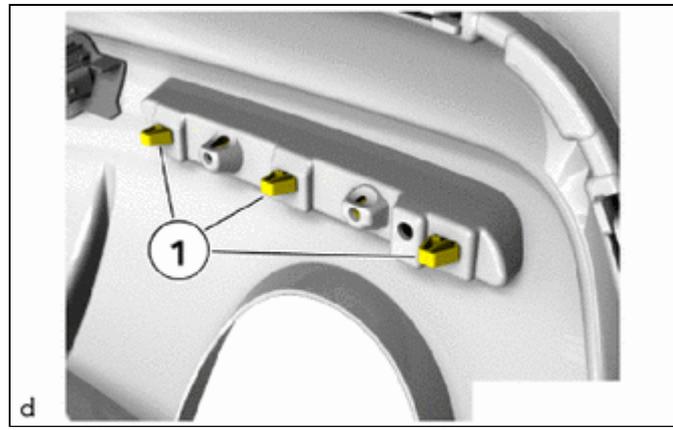

## 16. REMOVE REFLEX REFLECTOR ASSEMBLY RH

### HINT:

Use the same procedure as for the LH side.

## 17. REMOVE REFLECTOR LH

### HINT:

When removing the reflector LH, heat the reflector LH using a heat light.

Standard:

ITEM	TEMPERATURE
Reflector LH	40 to 50 °C (104 to 122 °F)

### CAUTION:




- Touching heated parts for a long time may result in burns.

*a	Heated Part
*b	Heat Light

- Do not touch the heat light and heated parts, touching the heat light may result in burns.

### NOTICE:


Do not heat the reflector LH excessively.

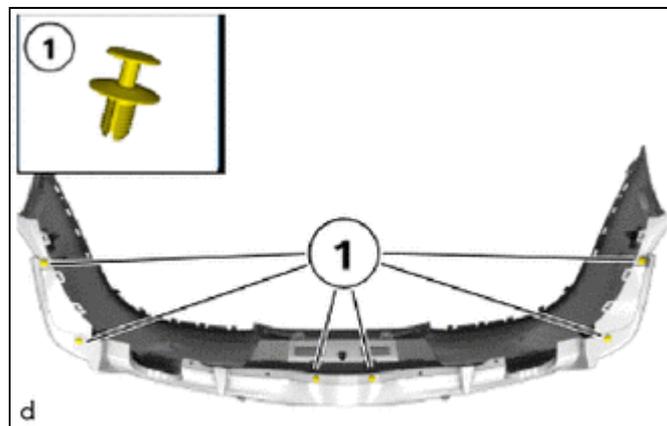

(c) Disengage the claws (2).

**HINT:**


Perform the operations on the left and right side.

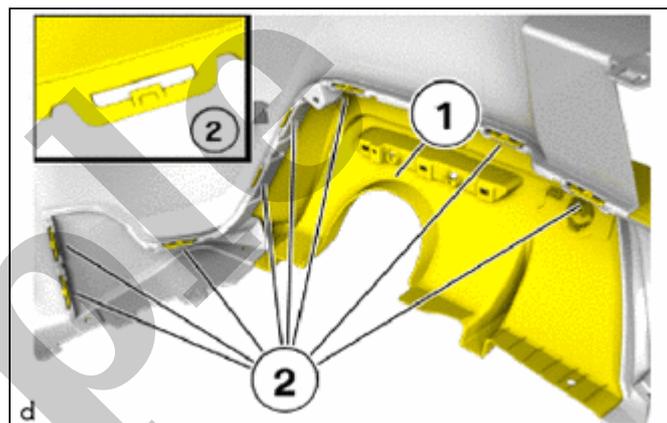

(d) Remove the rear bumper cover lower section (1).

**22. REMOVE AIR INLET TRIM STRIP LH**

(a) Disengage the claws (2) to remove the air inlet trim strip LH (1).

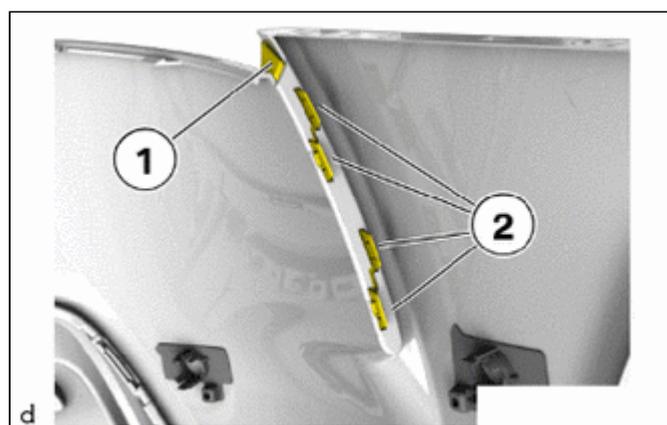


**23. REMOVE AIR INLET TRIM STRIP RH**

**HINT:**

Use the same procedure as for the LH side.


**24. REMOVE ABSORBER FUNNEL LH**

Click here [INFO](#)

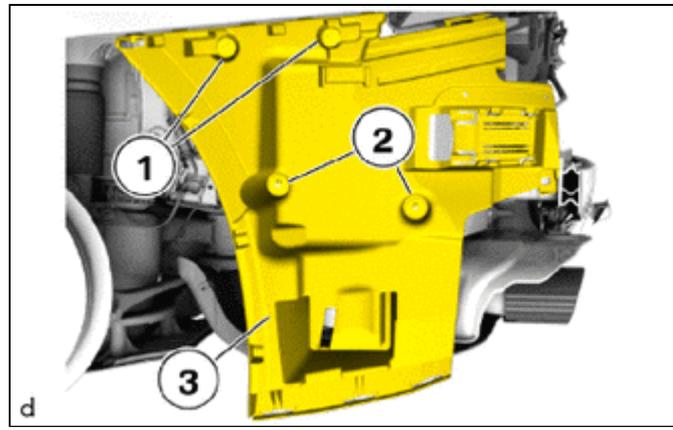

(d) Remove the nuts (2).

(e) Remove the rear bumper side support sub-assembly LH (3).

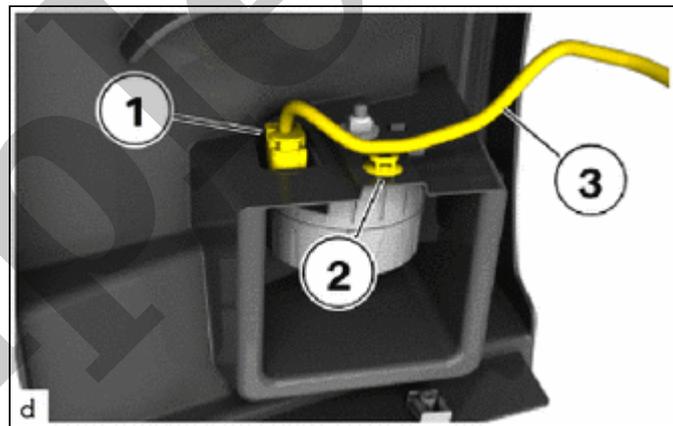

(f) Disengage the clamp (2).


(g) Disconnect the connector (1) and wiring harness (3) to remove the rear bumper side support sub-assembly LH.


## 29. REMOVE THEFT WARNING SIREN ASSEMBLY

Click here [INFO](#)


## 30. REMOVE REAR BUMPER SIDE SUPPORT SUB-ASSEMBLY RH

(a) Remove the screws (1) on the rear bumper side support sub-assembly RH (2).

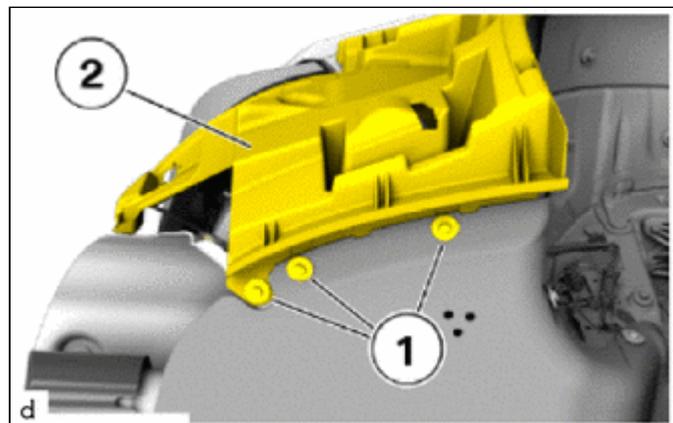

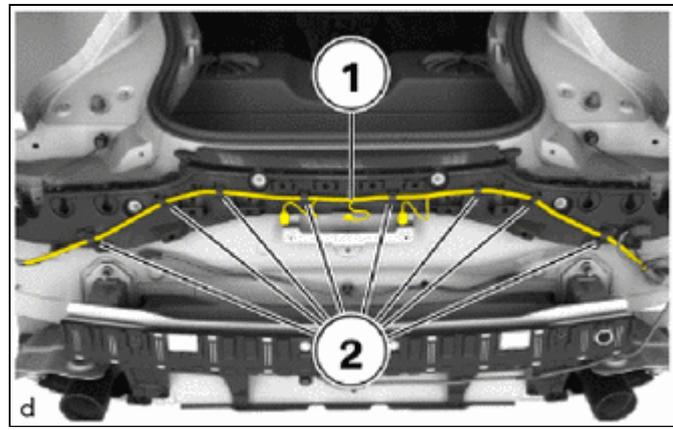


(c) Remove the nuts (1) and guide for the No. 1 rear bumper support (2).

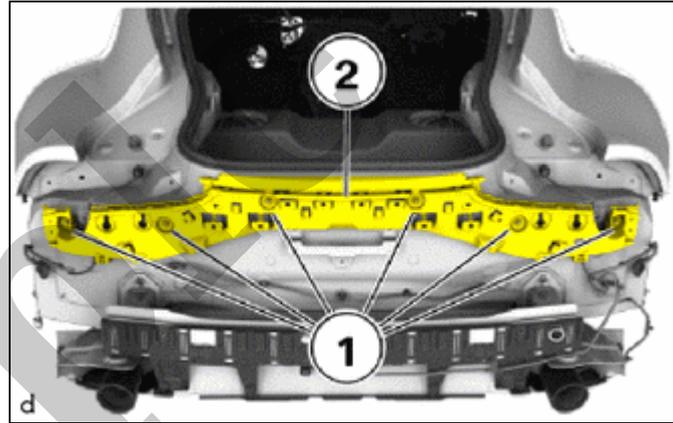

### 32. REMOVE REAR BUMPER ENERGY ABSORBER

(a) Disengage the clamps (1) to disconnect the wiring harness (2).

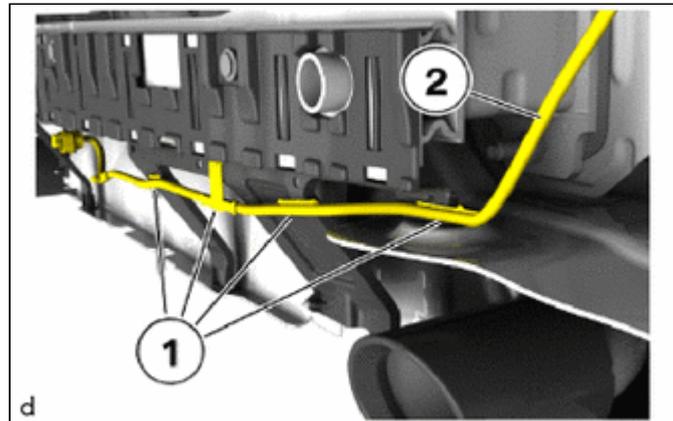

(b) Remove the screws (1).