

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2010 NISSAN Qashqai OEM Service and Repair Workshop Manual

Go to manual page

1. PRECONDITIONING

1. Press the power switch for at least 2 seconds to turn the high voltage system OFF and then check that the charging status indicator is not illuminated.



When the high voltage system is turned ON, the charging status indicator blinks green with a frequency of 1 second.

2. After the high voltage system is turned OFF, open the driver's side door, get out of the vehicle, close the driver's side door and wait for at least 5 minutes.

CAUTION:

• Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors during the standby state.

If an operation is performed, wait an additional 5 minutes from that time.

• Check that 12V battery voltage is 11 V or more.

>>

GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- (I) With CONSULT
 - 1. Power switch ON and wait at least 20 seconds.
 - 2. Check self-diagnostic result in "EV/HEV".

Is DTC detected?

YES>>

Refer to DTC Diagnosis Procedure.

NO-1>>

To check malfunction symptom before repair: Refer to Intermittent Incident.

NO-2>>

Confirmation after repair: INSPECTION END

1. CHECK CAN COMMUNICATION CIRCUIT

Perform trouble diagnosis for CAN communication circuit. Refer to <u>Trouble Diagnosis Flow Chart</u>.

Is the inspection result normal?

YES>>

INSPECTION END

NO>>

Repair or replace error-detected parts.



DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P1033	11	High voltage PTC heater	Diagnosis condition	READY
			Signal	CAN communication (Battery coolant heater malfunction signal)
			Threshold	A battery coolant heater malfunction signal is received
			Detection time	More than 2 seconds

POSSIBLE CAUSE

Battery coolant heater's IGBT is shorted

FAIL-SAFE

A/C control is stopped



1. PRECONDITIONING

1. Press the power switch for at least 2 seconds to turn the high voltage system OFF and then check that the charging status indicator is not illuminated.



When the high voltage system is turned ON, the charging status indicator blinks green with a frequency of 1 second.

2. After the high voltage system is turned OFF, open the driver's side door, get out of the vehicle, close the driver's side door and wait for at least 5 minutes.

CAUTION:

• Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors during the standby state.

If an operation is performed, wait an additional 5 minutes from that time.

• Check that 12V battery voltage is 11 V or more.

>>

GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- (I) With CONSULT
 - 1. Set the vehicle to READY and wait at least 10 seconds.
 - 2. Check self-diagnostic result in "EV/HEV".

Is DTC detected?

YES>>

Refer to DTC Diagnosis Procedure.

NO-1>>

To check malfunction symptom before repair: Refer to Intermittent Incident.

NO-2>>

Confirmation after repair: INSPECTION END

1. CHECK DTC IN A/C AUTO AMP

Check if there is any DTC in A/C auto amp.

Is the inspection result normal?

YES>>

GO TO 2.

NO>>

Perform diagnosis for detected DTC. Refer to DTC Index.

2. PERFORM CONFIRMATION PROCEDURE AGAIN

- 1. Erase DTC.
- 2. Perform DTC confirmation procedure again. Refer to Confirmation Procedure.

Is DTC P1033-11 detected again?

YES>>

Replace battery heater. Refer to <u>Disassembly & Assembly(66kWh LI-ION BATTERY 2WD models)</u>, <u>Disassembly & Assembly(66kWh LI-ION BATTERY AWD models)</u>, <u>Disassembly & Assembly(91kWh LI-ION BATTERY 2WD models)</u>, <u>Disassembly & Assembly(91kWh LI-ION BATTERY AWD models)</u>.

NO>>

INSPECTION END

DTC DETECTION LOGIC


DTC		CONSULT screen terms	DTC detecting condition		
P0000	00	Internal error	Diagnosis condition	Always	
			Signal	_	
10000	00		Threshold	An internal error in the VCM is detected	
			Detection time	—	

POSSIBLE CAUSE

VCM

FAIL-SAFE

- Quick charge prohibited
- Normal charge prohibited

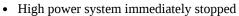



1. PRECONDITIONING

1. Press the power switch for at least 2 seconds to turn the high voltage system OFF and then check that the charging status indicator is not illuminated.



When the high voltage system is turned ON, the charging status indicator blinks green with a frequency of 1 second.

2. After the high voltage system is turned OFF, open the driver's side door, get out of the vehicle, close the driver's side door and wait for at least 5 minutes.

CAUTION:

• Since the auto ACC function causes the accessory power to be turned ON, do not perform any vehicle operation including locking the doors or opening and closing of the doors during the standby state.

If an operation is performed, wait an additional 5 minutes from that time.

• Check that 12V battery voltage is 11 V or more.

>>

GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- (I) With CONSULT
 - 1. Power switch ON and wait at least 10 seconds.
 - 2. Check self-diagnostic result in "EV/HEV".

Is DTC detected?

YES>>

Refer to DTC Diagnosis Procedure.

NO-1>>

To check malfunction symptom before repair: Refer to Intermittent Incident.

NO-2>>

Confirmation after repair: INSPECTION END

1. PERFORM CONFIRMATION PROCEDURE AGAIN

- 1. Erase DTC.
- 2. Perform DTC confirmation procedure again. Refer to Confirmation Procedure.

Is DTC P0560-61 detected again?

YES>>

Replace VCM. Refer to <u>VCM</u>: <u>Removal & Installation</u>.

NO>>

INSPECTION END



DTC DETECTION LOGIC

DTC		CONSULT screen terms	DTC detecting condition	
P0560	16	System voltage	Diagnosis condition	Always
			Signal	12 V battery power supply signal (terminal number 153)
F 0 3 0 0			Threshold	12 V battery power supply signal is detected to be below 9 V
			Detection time	More than 0.1 seconds

POSSIBLE CAUSE

- DC/DC converter
- Harness and connector (12 V battery power supply circuit)
- VCM

FAIL-SAFE

Not applicable

