


# Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 1979 CHEVROLET Corvette C3 OEM Service and Repair Workshop Manual

[Go to manual page](#)

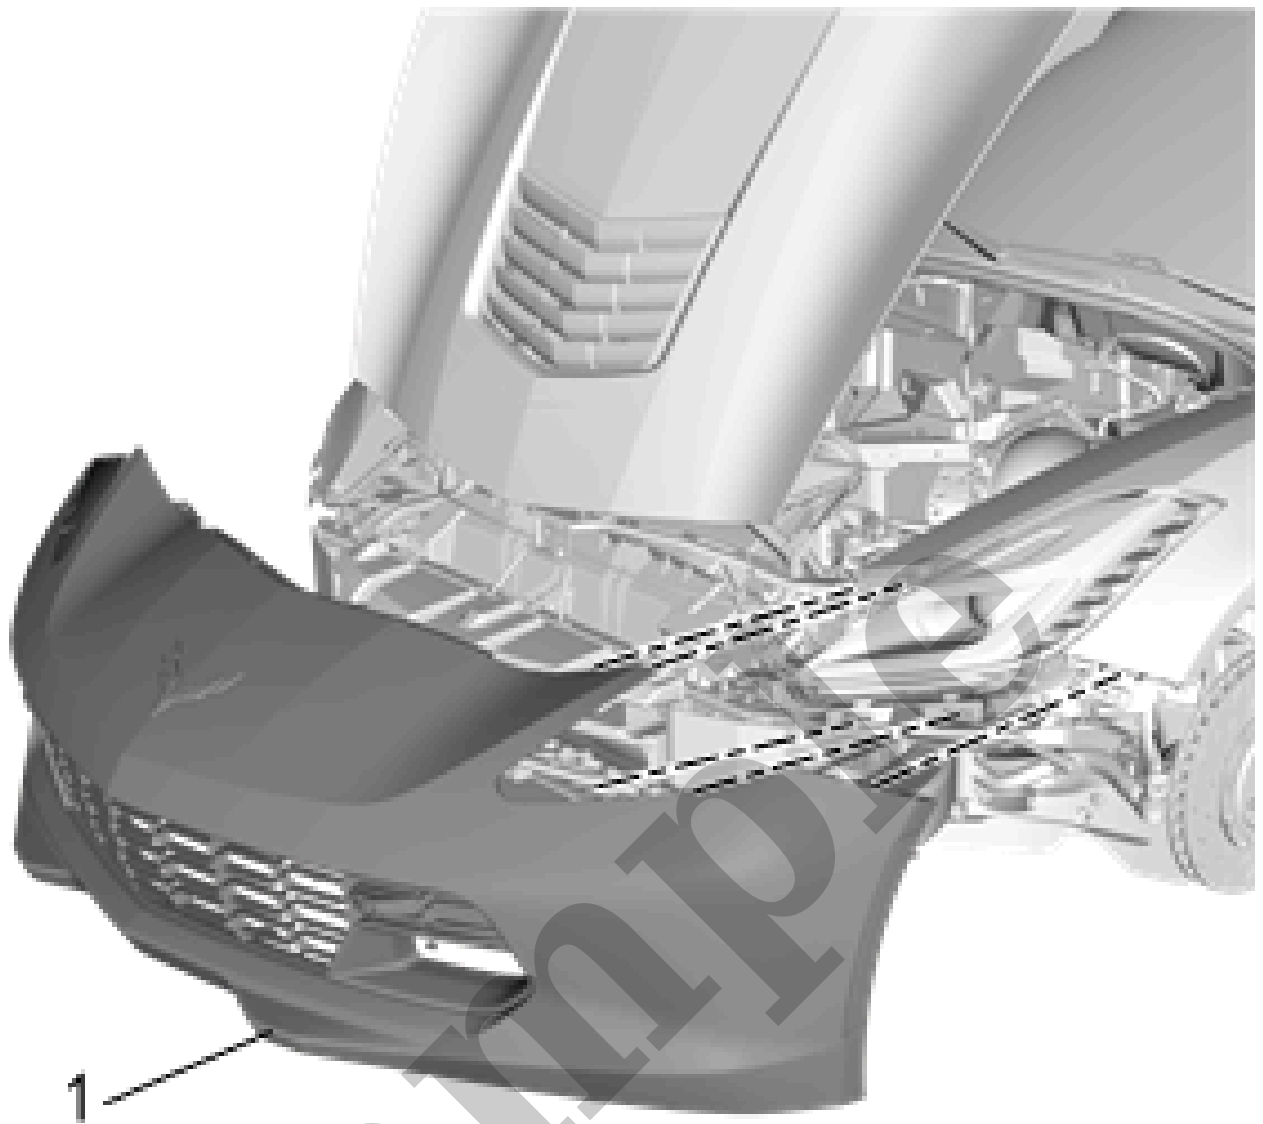

1. Transfer components as necessary.
2. Connect the electrical connectors.
3. Front Bumper Fascia(1) »Install

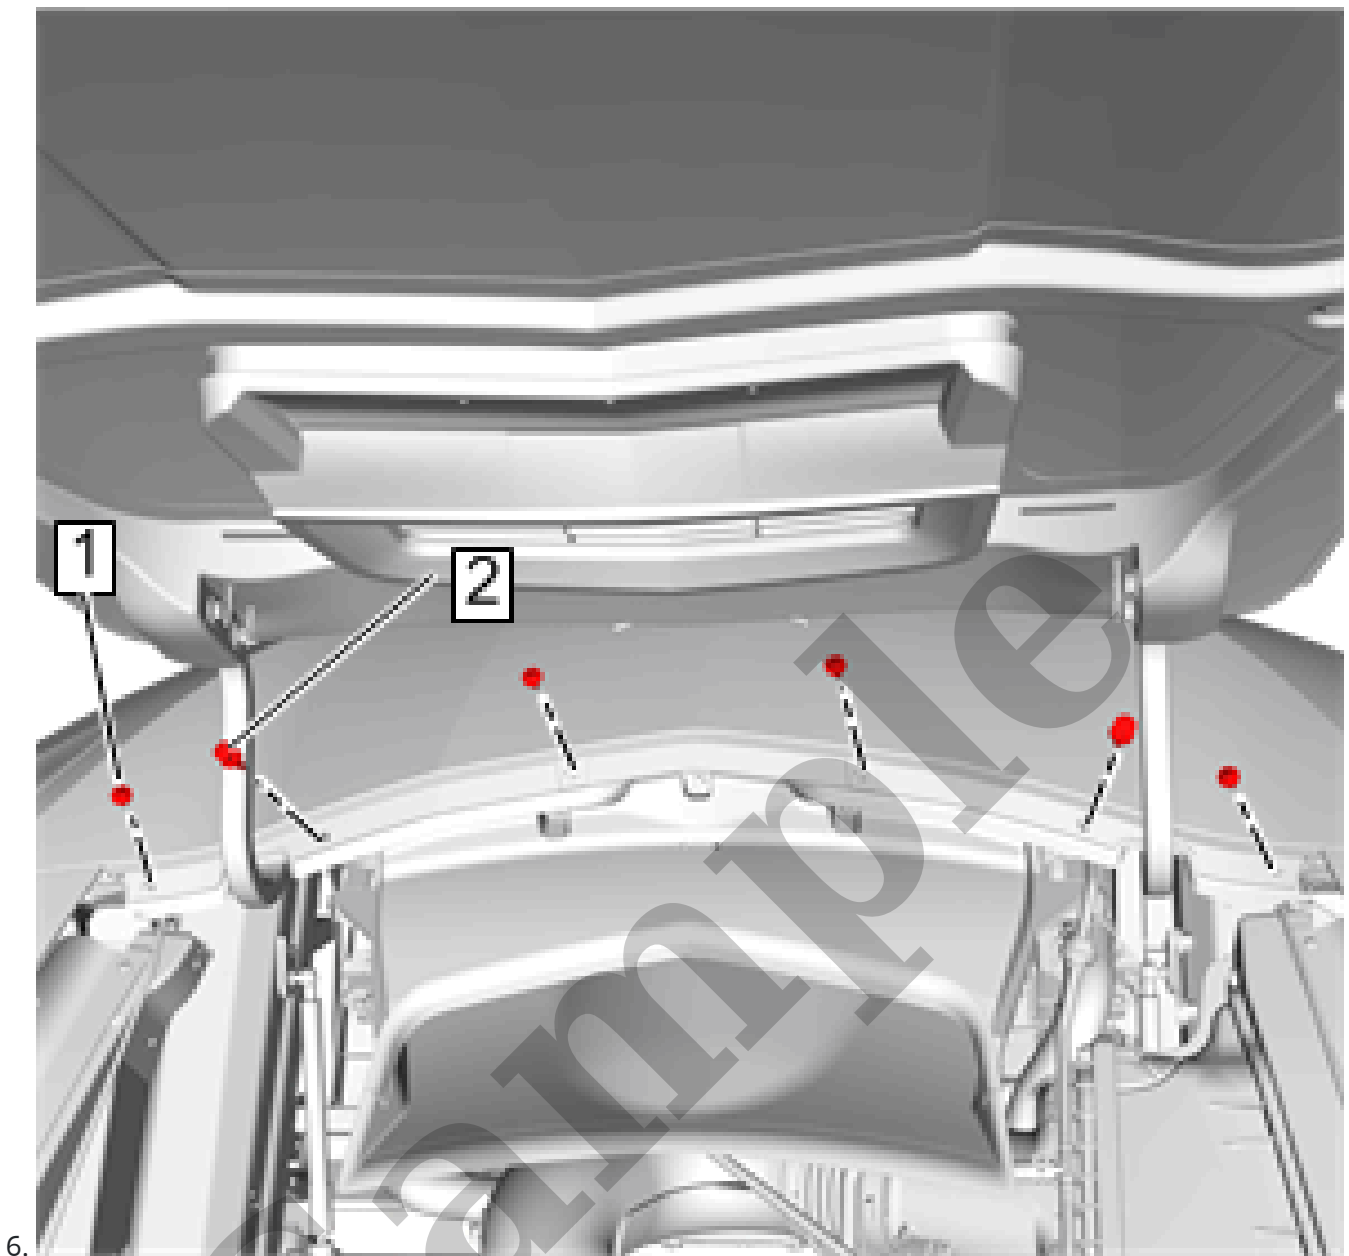

6.


#### CAUTION

##### Caution

Refer to [Fastener Caution](#).


Front Bumper Fascia Bolt(1) »Install and tighten[4x] **2.5 N·m( 22 lb ft)**

7. Front Bumper Fascia Retainer(2) »Install[2x]

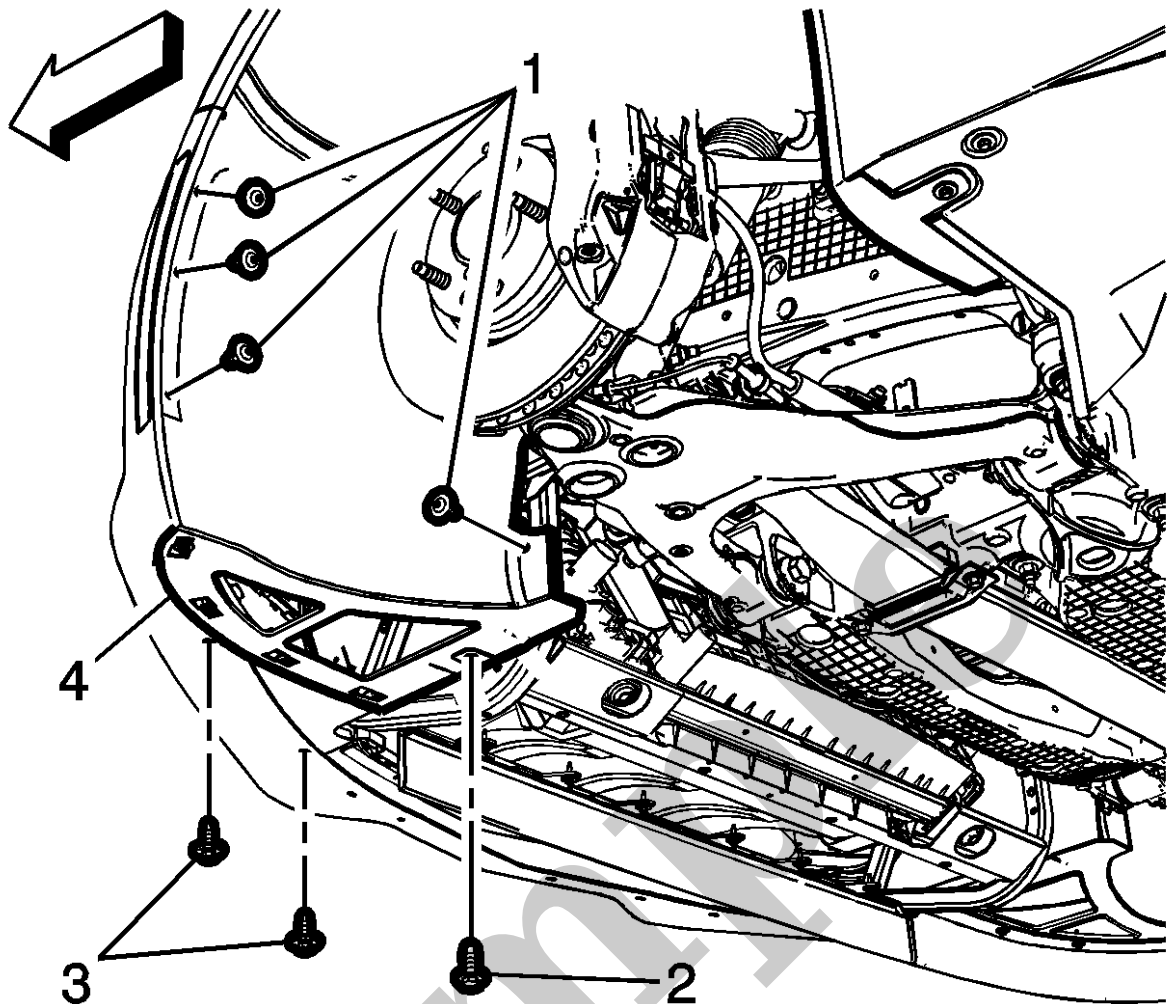


11.

Install the front wheel house bolts (1, 2, 3). [Front Wheelhouse Liner Replacement](#)

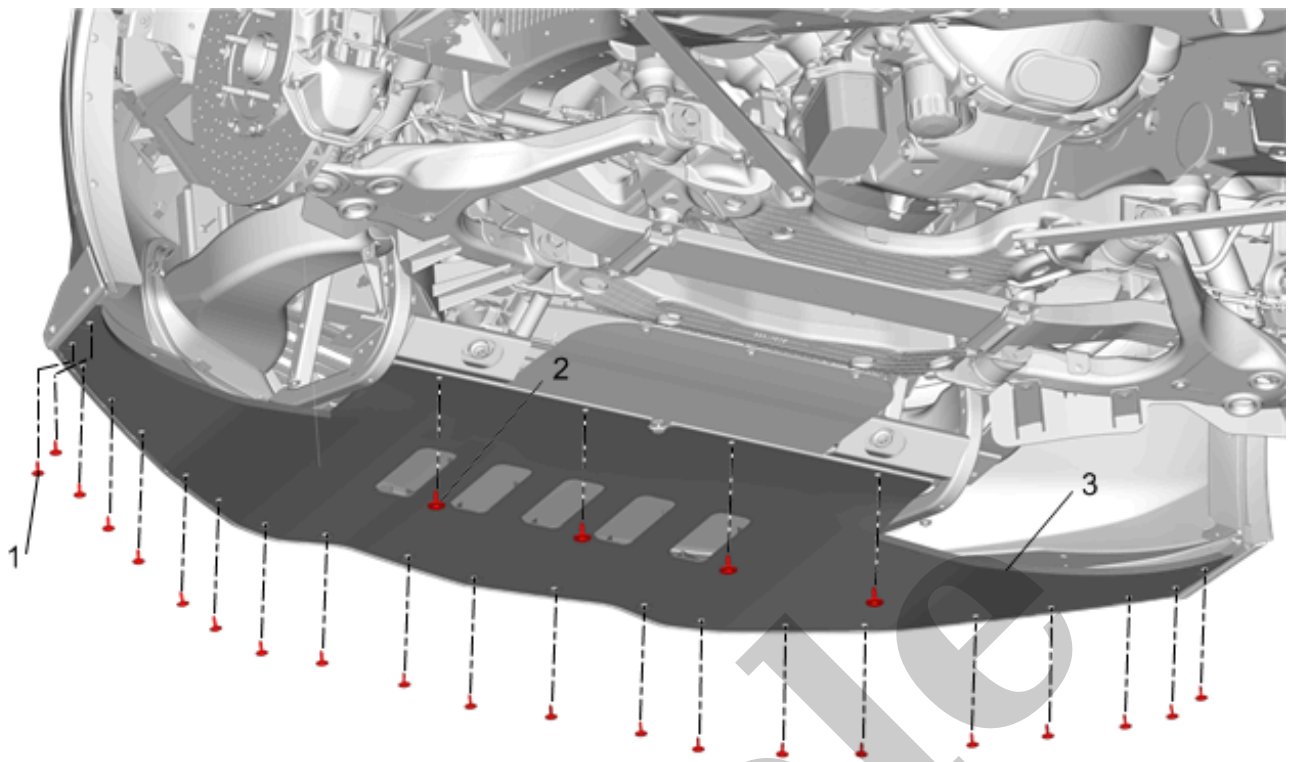

13.

{ If equipped }Front Bumper Fascia Air Deflector(1) »Install— [Front Bumper Fascia Air Deflector Replacement](#)

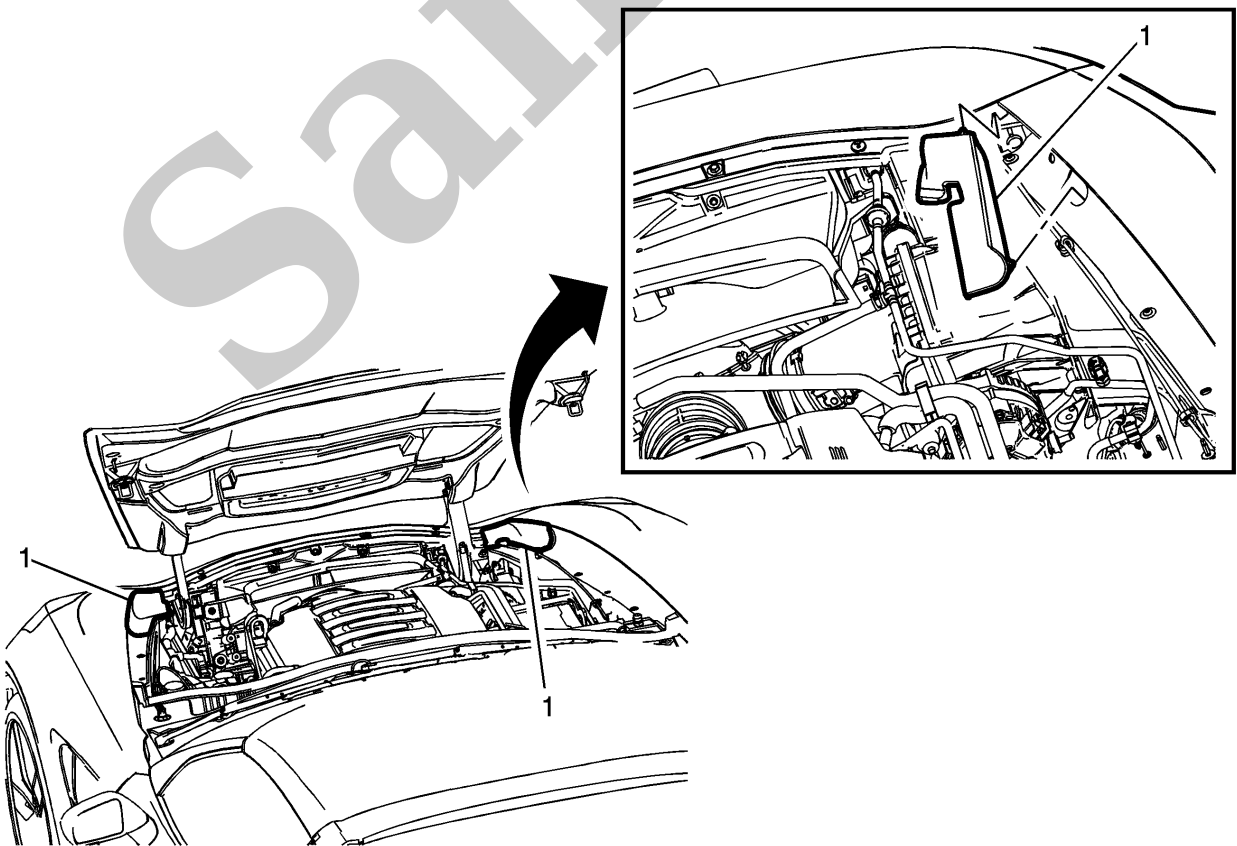

14.