

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1988 CHEVROLET Camaro OEM Service and Repair Workshop Manual

[Go to manual page](#)

3. Apply the tape stripe or the decals that wrap into the body openings or mount on flexible surfaces wet.

Use the following procedure for wet application of stripes and decals:

4. Using a 24 oz. spray bottle add 1–2 drops of unscented dishwashing soap for a wetting agent. If above 80°F you may use 2–3 drops of soap per 24 oz.

5. Spray a mist of solution onto the body area.

6. Peel the backing away from the decal.

7. Spray the adhesive backing of the decal in hot, humid weather with a mist of the wetting solution.

8. Position the decal in the desired location on the body surface.

9. Using a dampened squeegee, starting at the center of the decal, work from the center outward in both directions.

10. Squeegee the decal, in position, onto the body, removing any air bubbles along with the wetting solution.

11. Pull the decal back onto itself in order to remove the premask from the decal.

12. Squeegee the decal again.

13. Prick any air bubbles with a pin, if present. Never use a razor or knife as this may cause the cut to get larger over time.

14. If desired, heat can be applied to the edges of the stripe, decal or emblem to assure adhesion. 3 seconds at 140°F would be satisfactory.

NOTE

Important

Never use a wetting agent when installing an emblem.

Emblems should always be installed dry.

Rocker Panel Molding Bolt


2N·m(18 lb in)

Sample

YOUR CURRENT VEHICLE

Body Side Upper Front Applique Replacement

Body Side Upper Front Applique Replacement

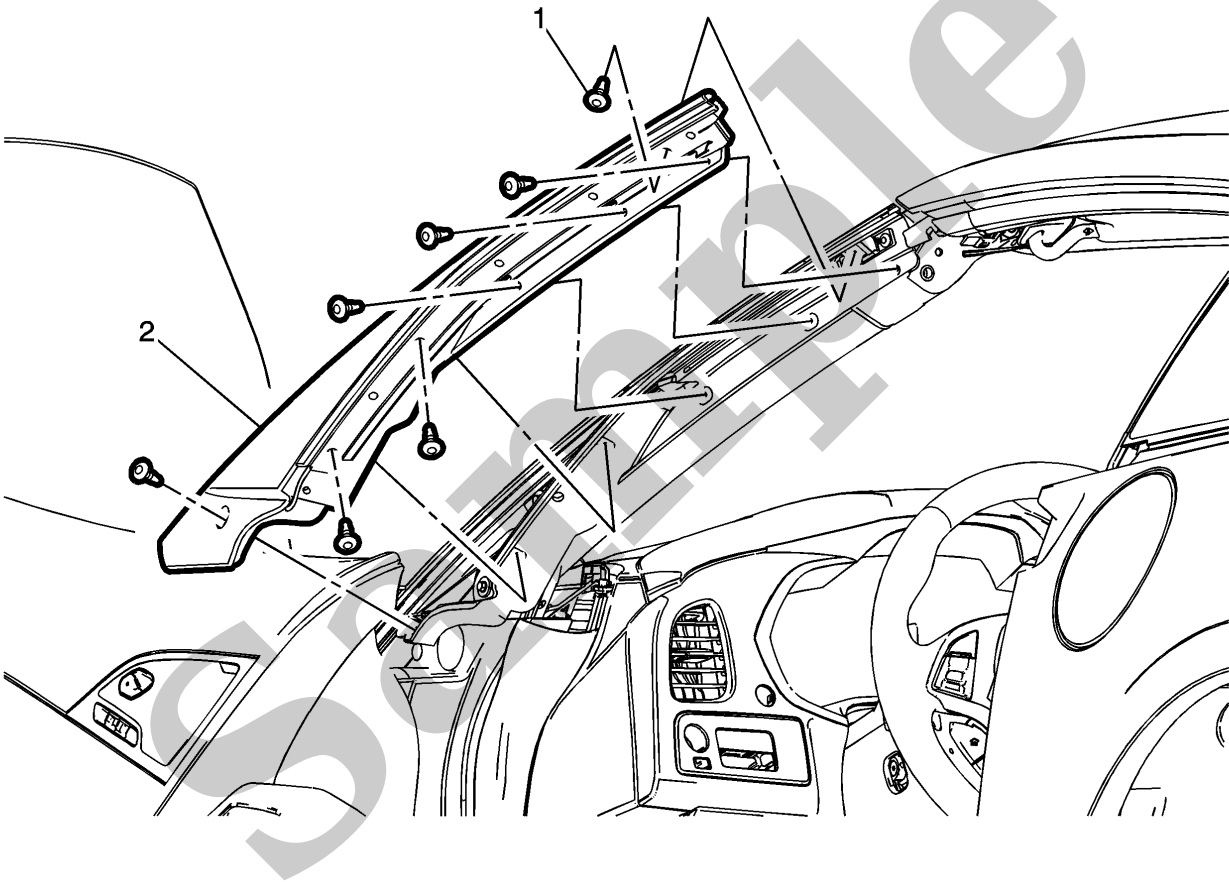

Body Side Upper Front Applique Replacement

Callout	Component Name
Preliminary Procedure 1. Starting from the bottom peel back the upper windshield frame weatherstrip all the way to the top. Refer to Windshield Frame Weatherstrip Replacement	
1	Body Side Upper Front Applique Bolt (Qty: 7)

Emblem/Nameplate Replacement

Emblem/Nameplate Replacement

1. CAUTION

Caution

Refer to [Exterior Trim Emblem Removal Caution](#).

The part and vehicle surface should be 21°C (70°F) prior to installation. The vehicle should remain inside in a temperature range of 21°C (70°F) for 1 hour after assembly to allow the adhesive to develop sufficient bond strength.

2. Using masking tape, mark two sides of the placement where the old emblem/nameplate was placed.
3. Use a heat gun or equivalent, to heat the adhesive backed emblem/nameplates.
4. A flat-bladed plastic tool can assist in the removal process.
5. Wipe the vehicle surface area with a 50/50 solution by volume of isopropyl alcohol and clean drinkable water.
6. Dry the area with a clean lint-free cotton cloth.
7. Close any doors, liftgates, endgates and rear compartment lids where emblem/nameplates are to be placed.
8. When removing protective liners from adhesive backed emblem/nameplates, be careful not to touch the adhesive tape or allow the tape to come in contact with dirt or any foreign matter prior to the placement and adhesion.
9. Remove the protective liner from the emblem/nameplate.
10. Position, align and press the emblem/nameplate to the previously marked location.