


# Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## **1995 CHEVROLET Tahoe 3 doors OEM Service and Repair Workshop Manual**

[Go to manual page](#)

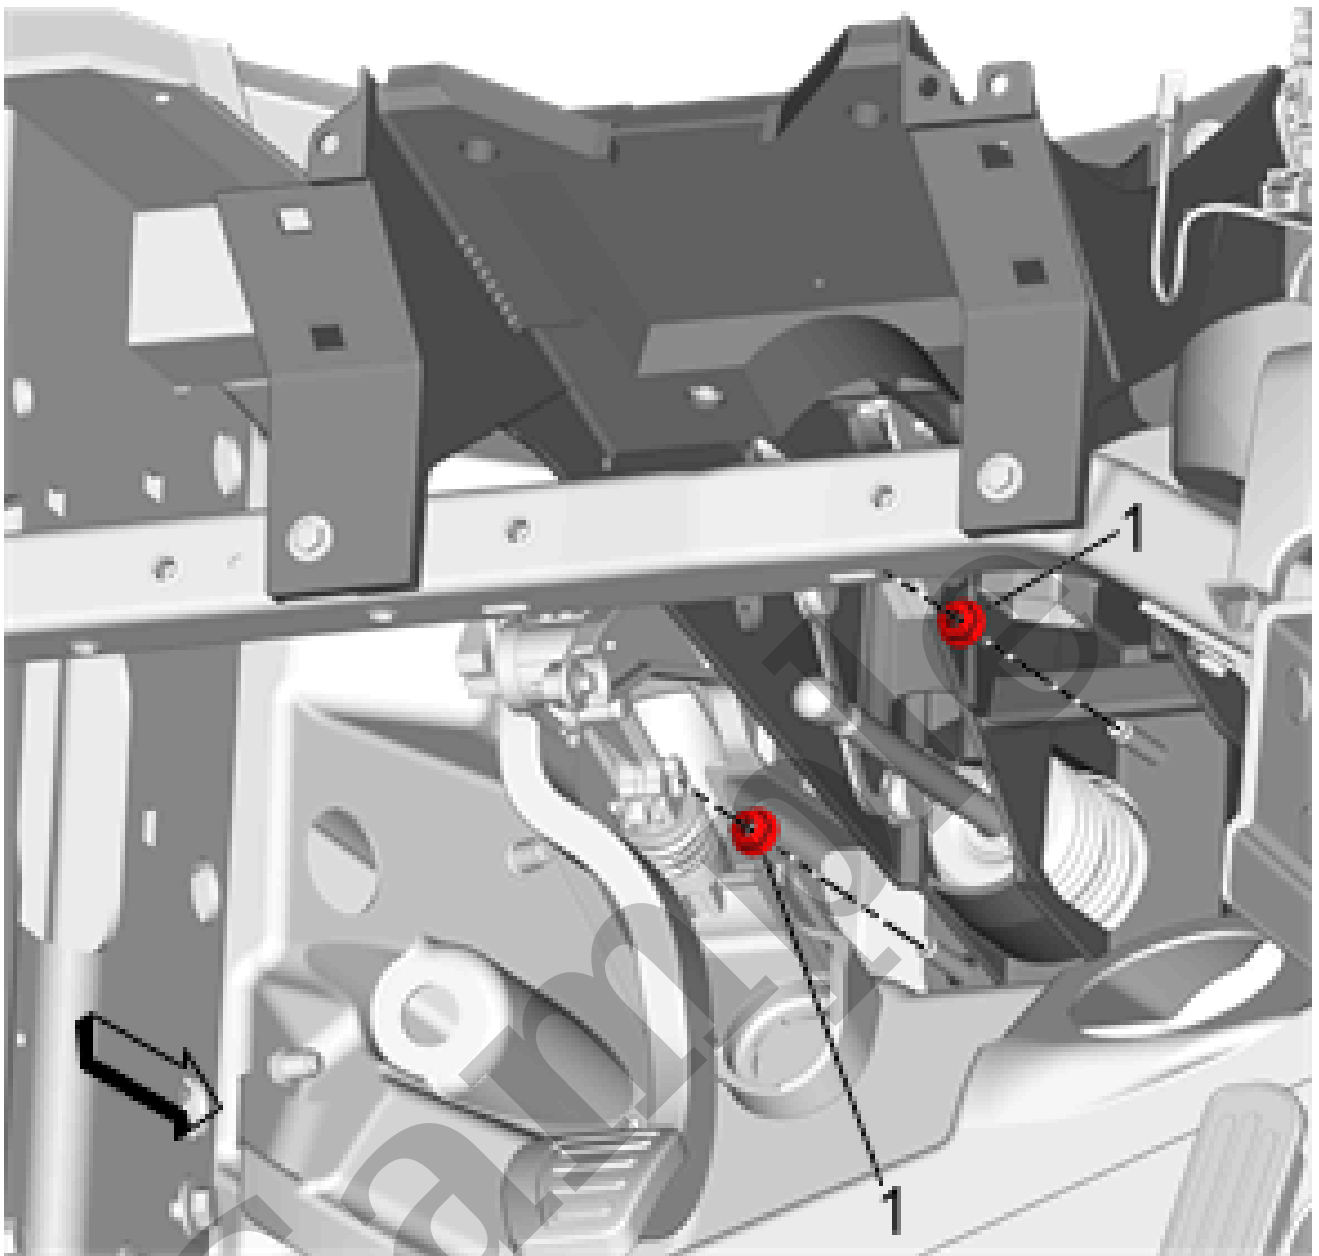

7. Remove the power brake booster nut (1).

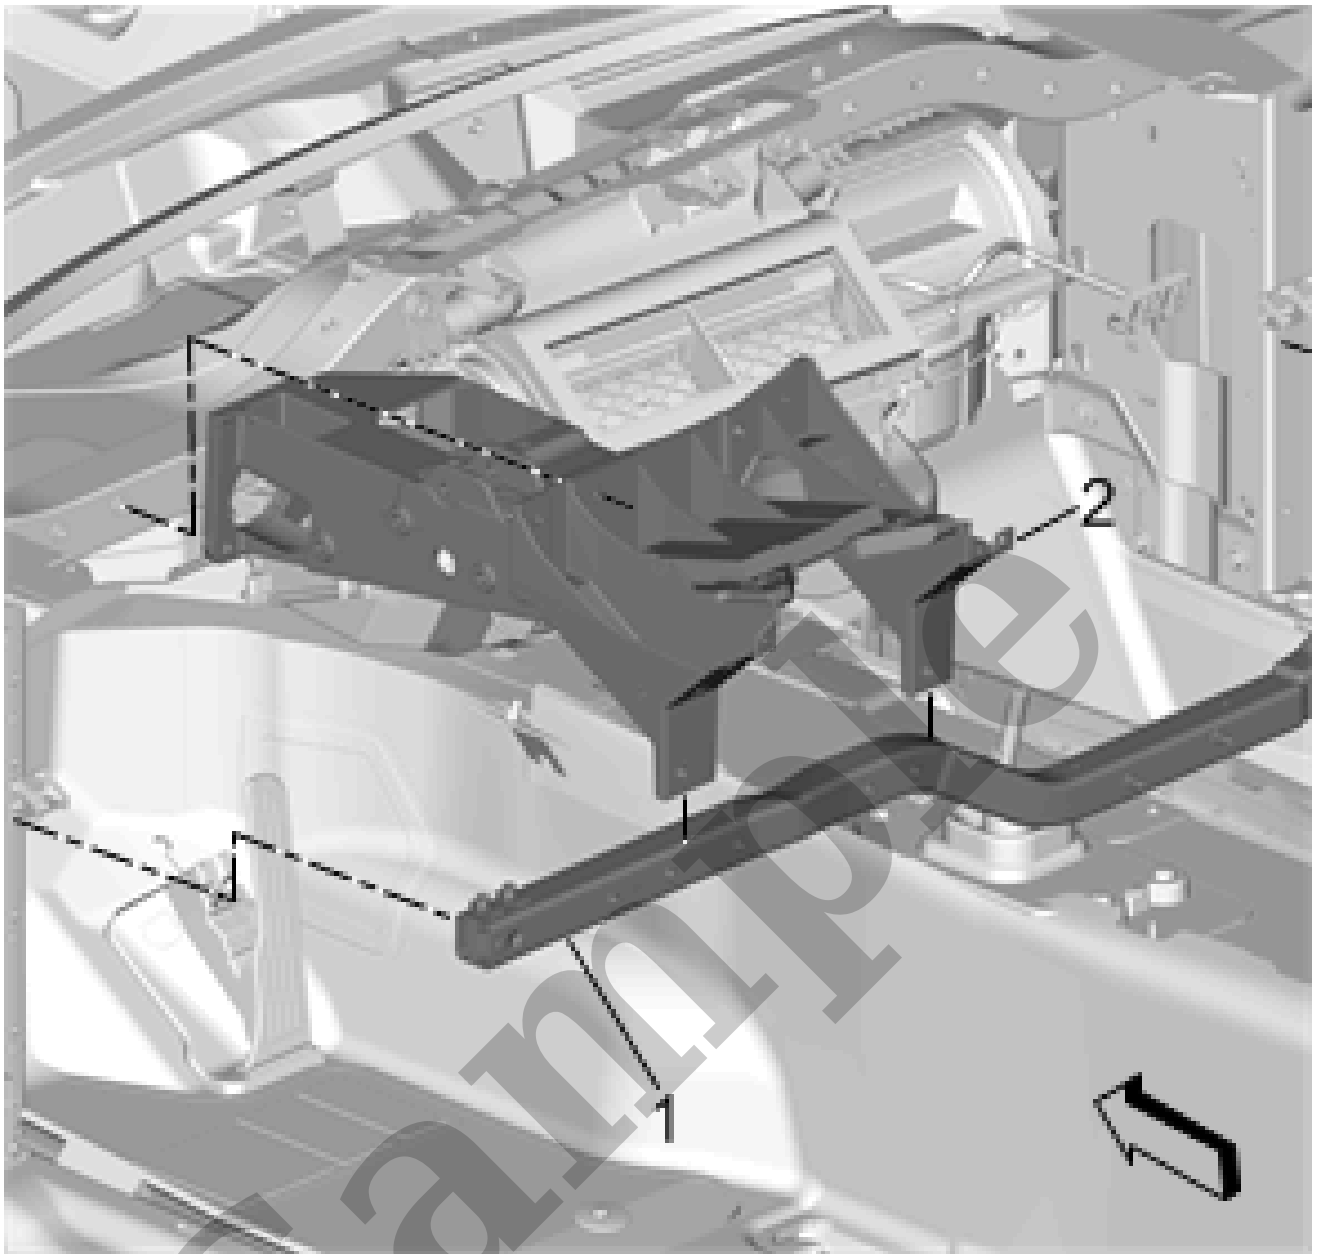

10.


Remove the instrument panel tie bar (1). Refer to [Instrument Panel Tie Bar Replacement](#).

11. Remove the steering column bracket (2).

12. Remove the clutch pedal assembly, if equipped. Refer to [Clutch Pedal Replacement](#).

### Installation Procedure

1. Install the clutch pedal assembly, if equipped. Refer to [Clutch Pedal Replacement](#).

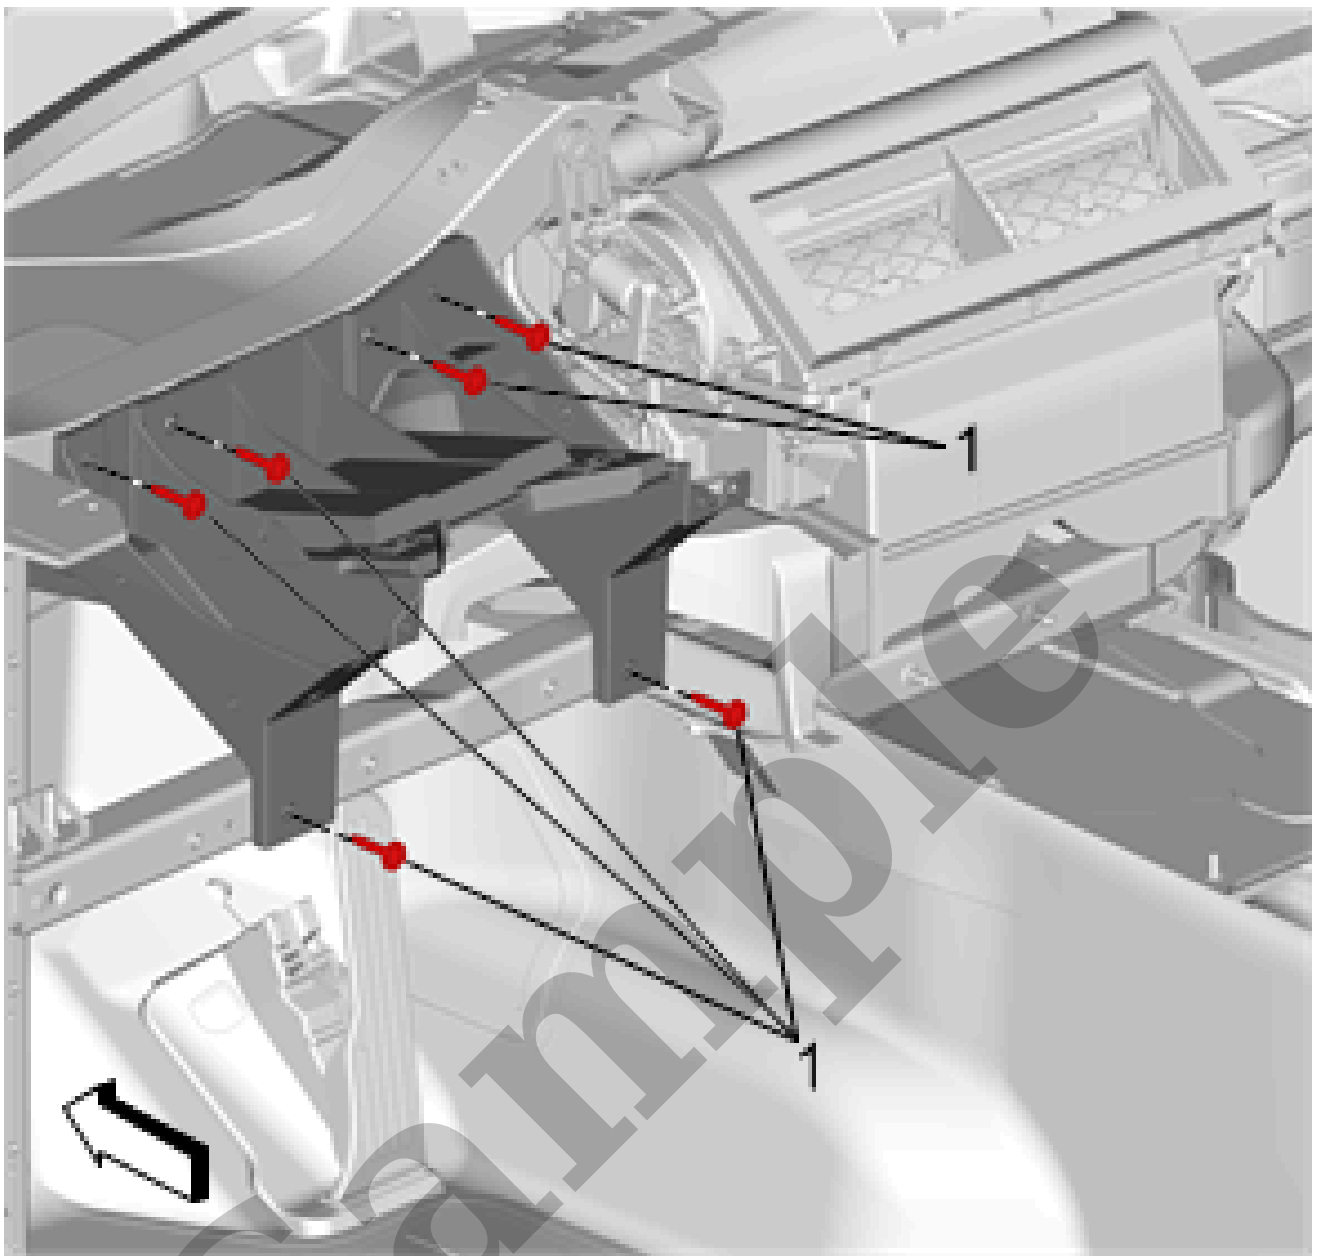

3.

Install the steering column bracket bolt (1) which secure the steering column bracket to the upper I/P tie bar. Do NOT tighten the bolts.

#### CAUTION

##### Caution

Refer to [Fastener Caution](#).

Install the steering column bracket bolt (1) which secure the steering column bracket to the lower I/P tie bar.

6. Install the brake pedal assembly. Refer to [Brake Pedal Assembly Replacement](#).
7. Install the left side window defogger outlet duct. Refer to [Side Window Defogger Outlet Duct Replacement - Left Side](#).
8. Install the I/P assembly. Refer to [Instrument Panel Assembly Replacement](#).
9. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#).
10. Enable the SIR system. Refer to [SIR Disabling and Enabling](#).

Sample