


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


1998 CHEVROLET Tahoe 3 doors OEM Service and Repair Workshop Manual

[Go to manual page](#)

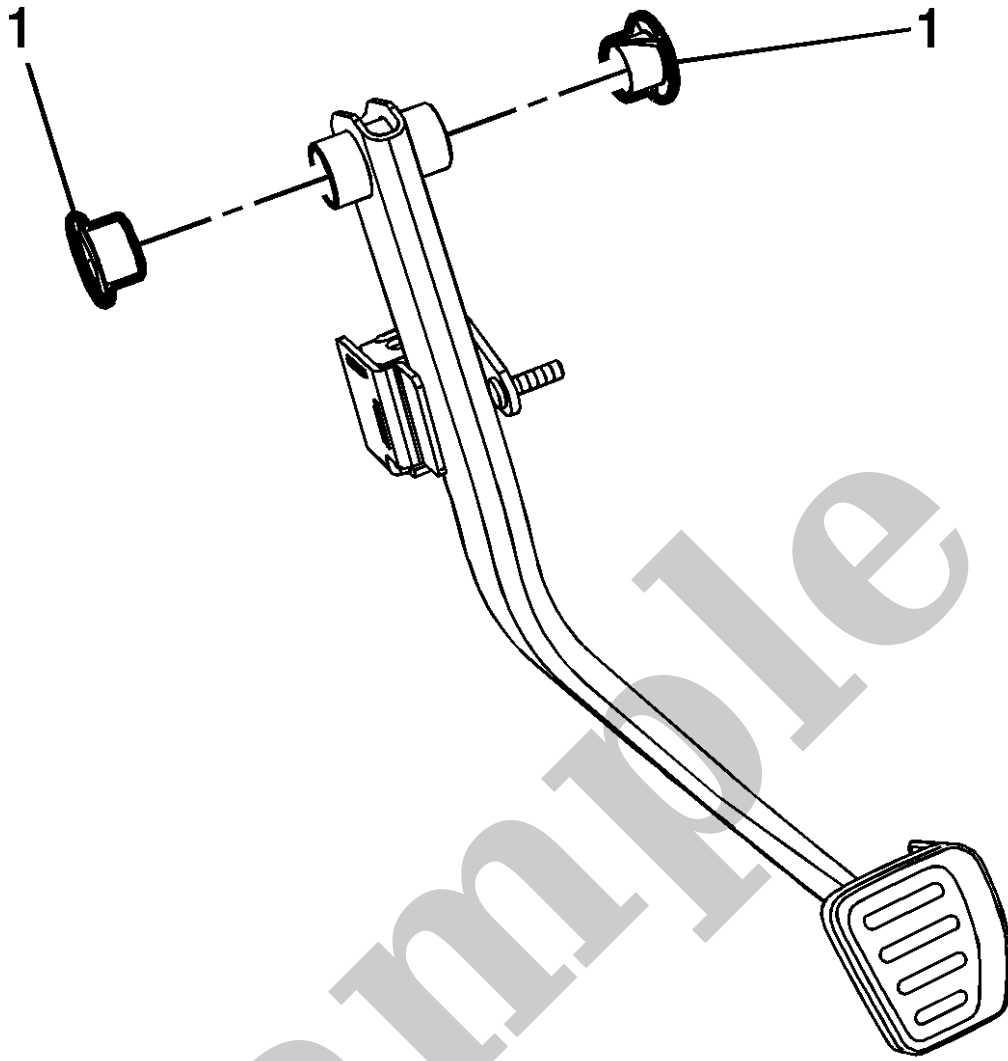



8.

Remove the brake pedal assembly pivot bushings (1).

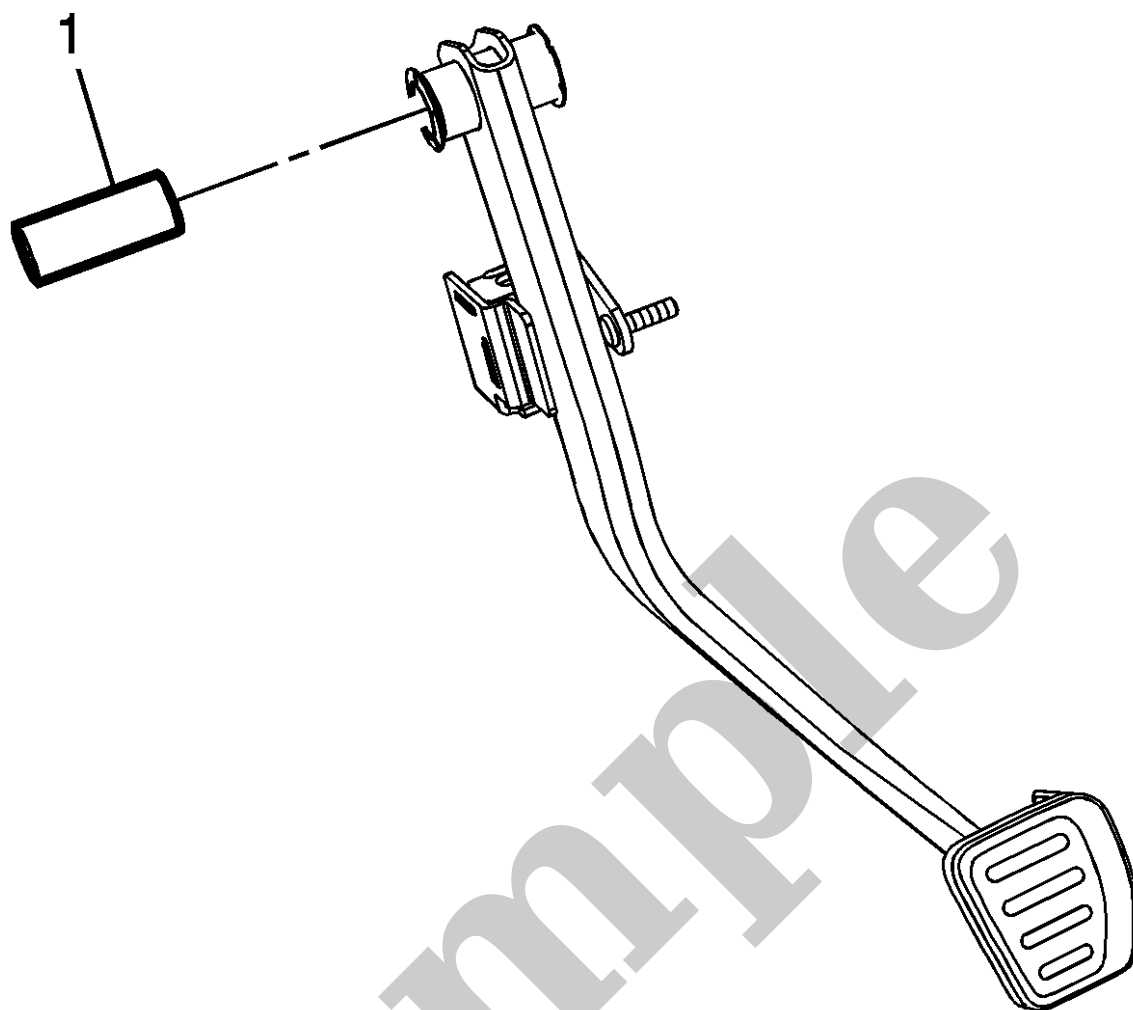

2.


Install the brake pedal assembly pivot spacer (1).

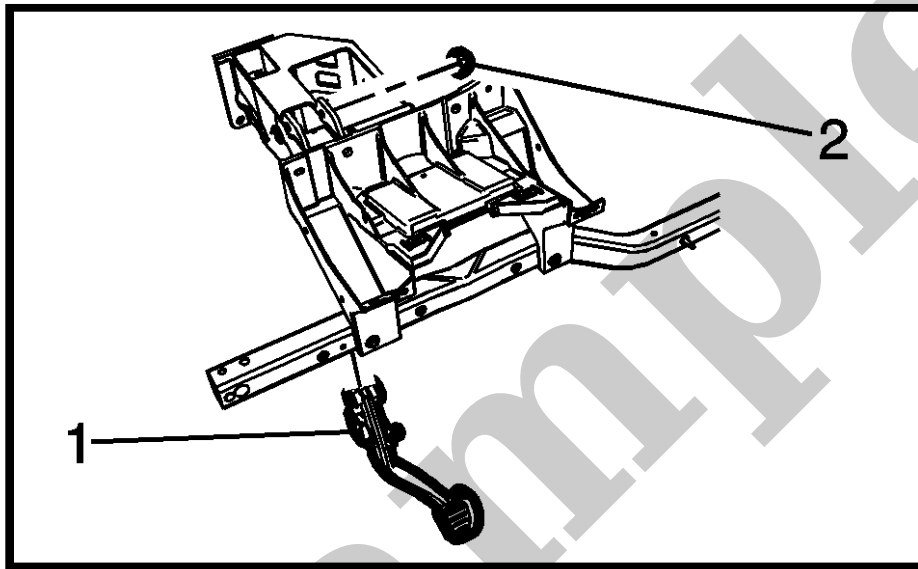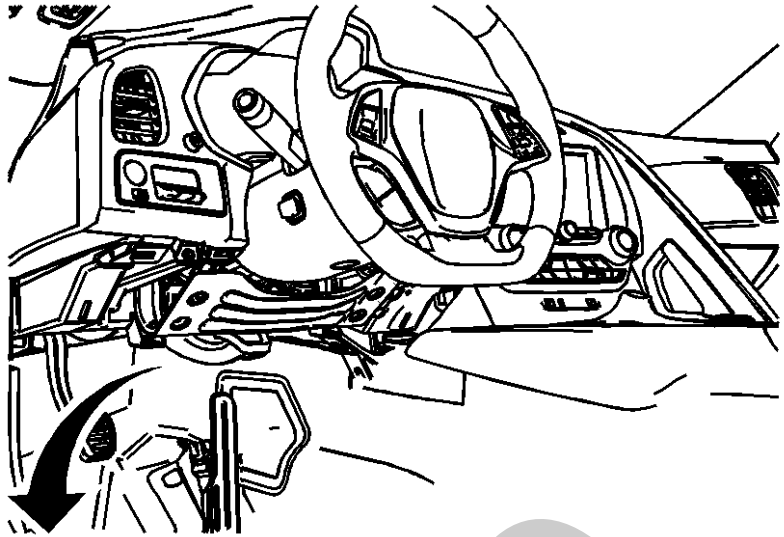

4.

Install the brake pedal assembly (1) to the steering column bracket.

5. Install the brake pedal pivot nut (2).

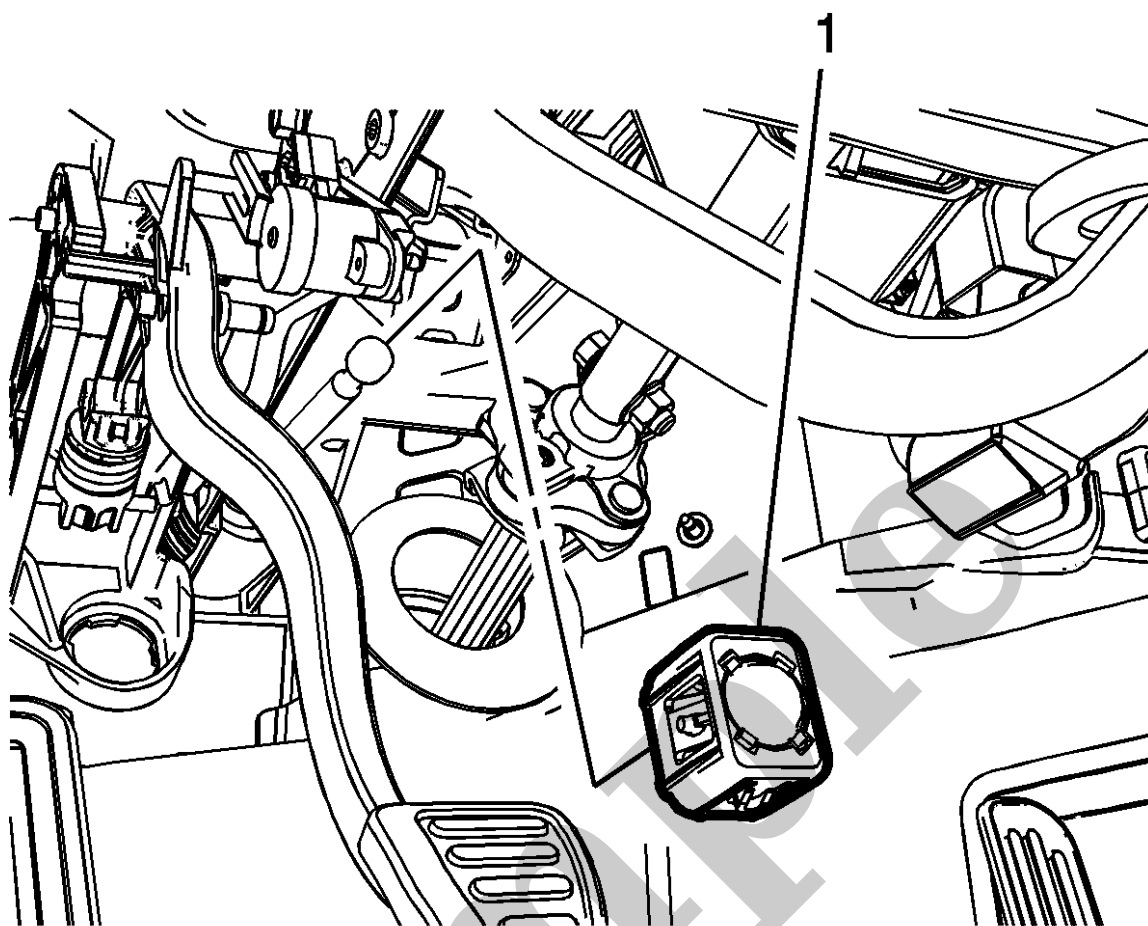

8.

Install the power vacuum brake booster pushrod retainer (1).