


Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2001 VOLVO S40 OEM Service and Repair Workshop Manual


Go to manual page

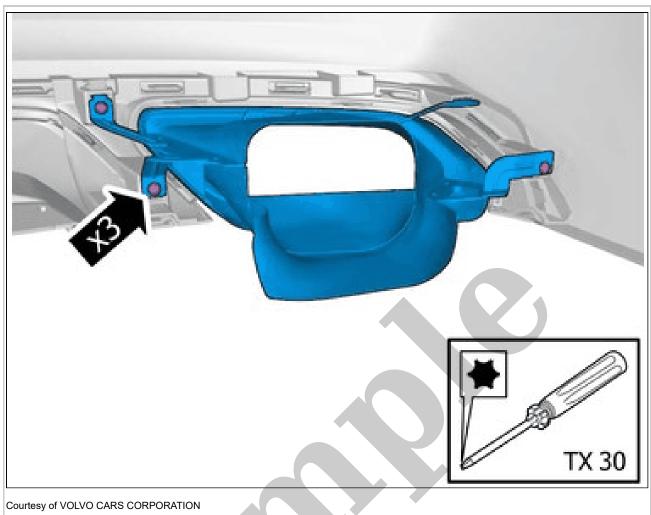

Remove the screws. Remove the marked part. Repeat on the other side.

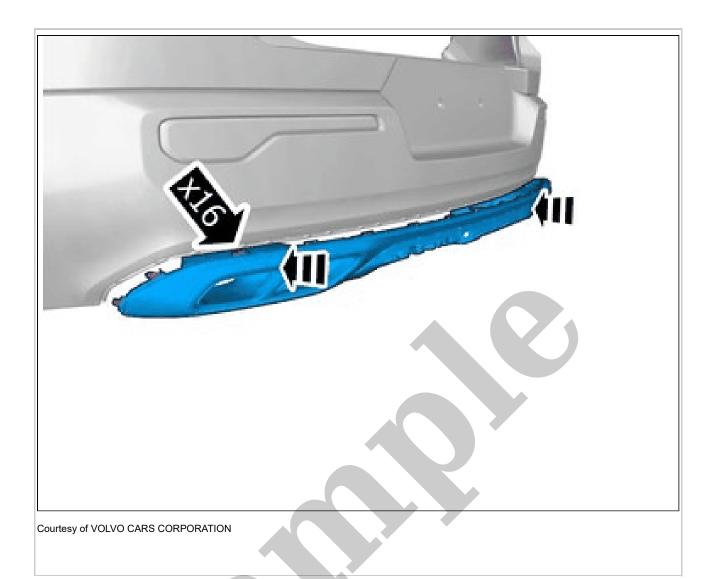


Request the aid of a colleague for this procedure. Install component that comes with the accessory kit. Ensure that all clips engage.

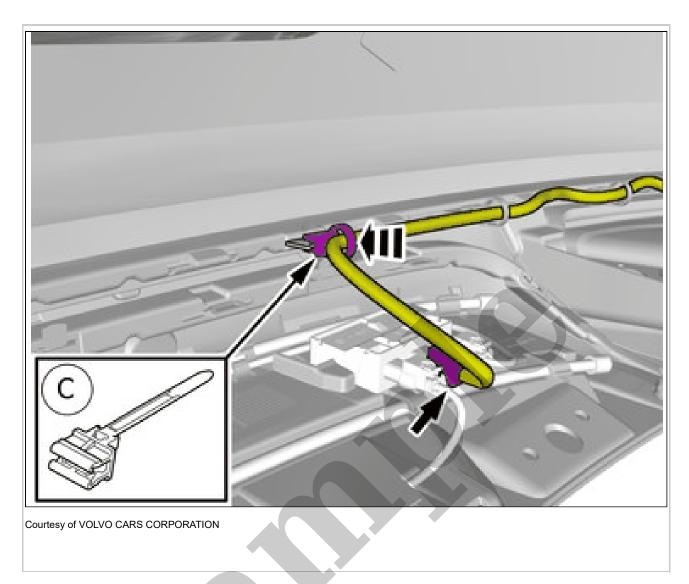


Connect the connector.

Install component that comes with the accessory kit. **VEHICLES WITH FOLDING TOWBAR**

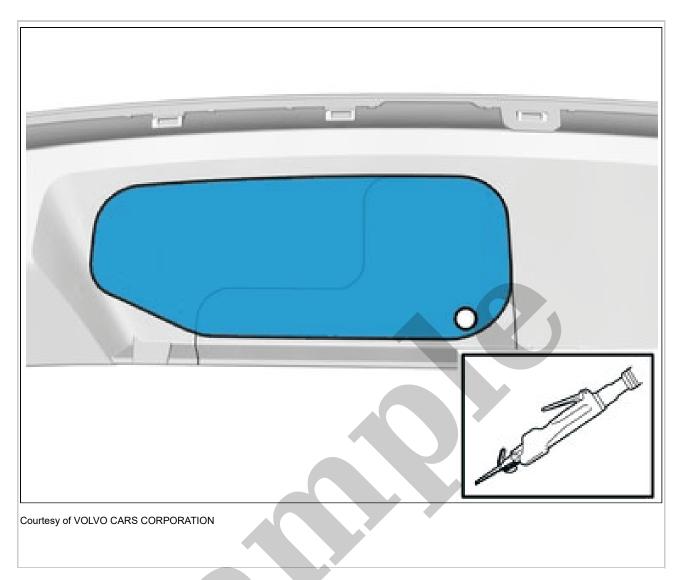


Remove the marked part. **Use:** Air-powered air saw

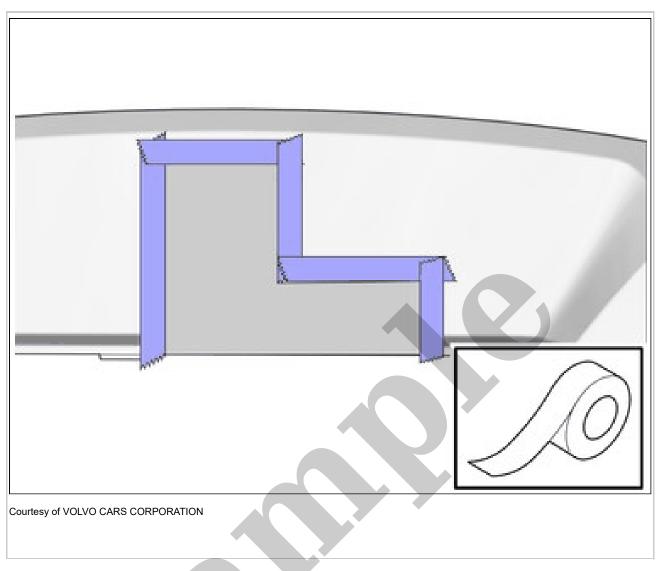


Apply tape to the other side, opposite the marking lines.


Use: Masking tape,

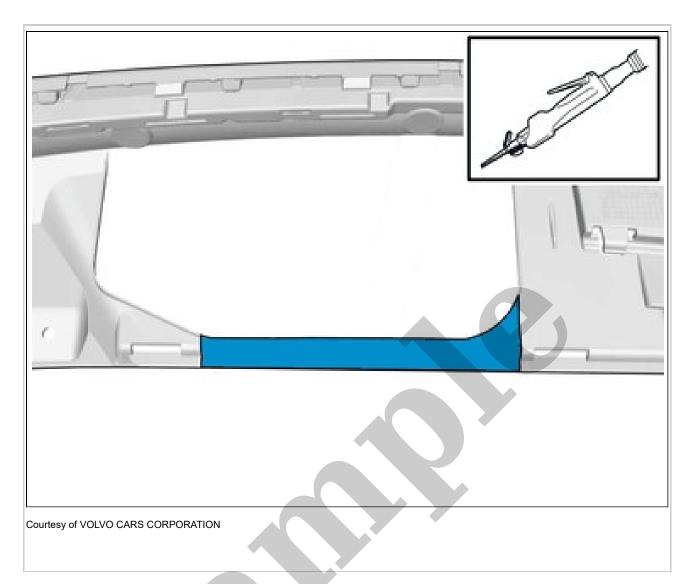

Remove the marked part. **Use:** Air-powered air saw

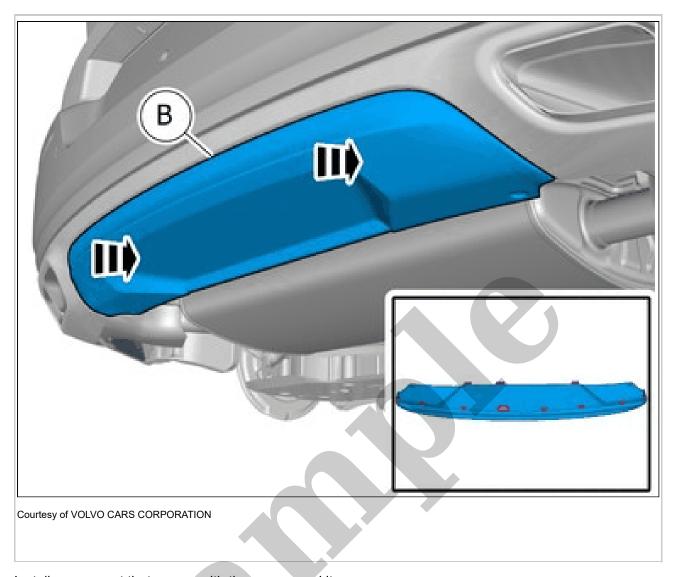


Install component that comes with the accessory kit. Ensure that all clips engage.

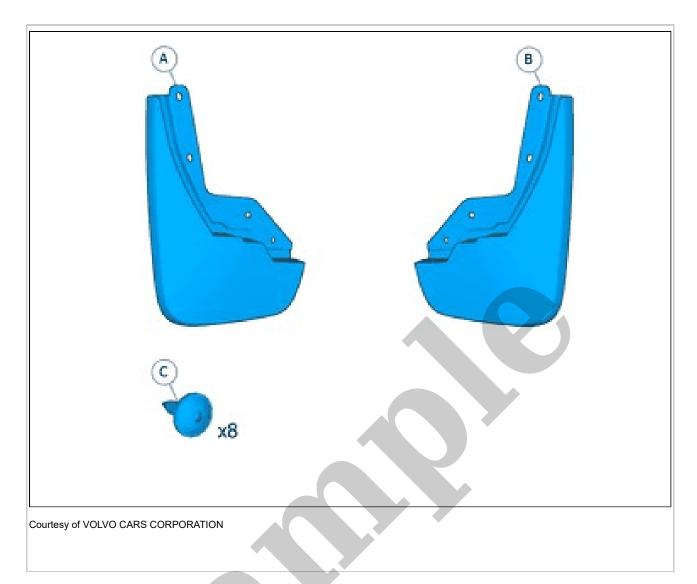

INFORMATION

- Read through all of the instructions before starting installation.
- Notifications and warning texts are for your safety and to minimize the risk of something breaking during installation.
- Ensure that all tools stated in the instructions are available before starting installation.
- Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
- In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

COLOR SYMBOLS

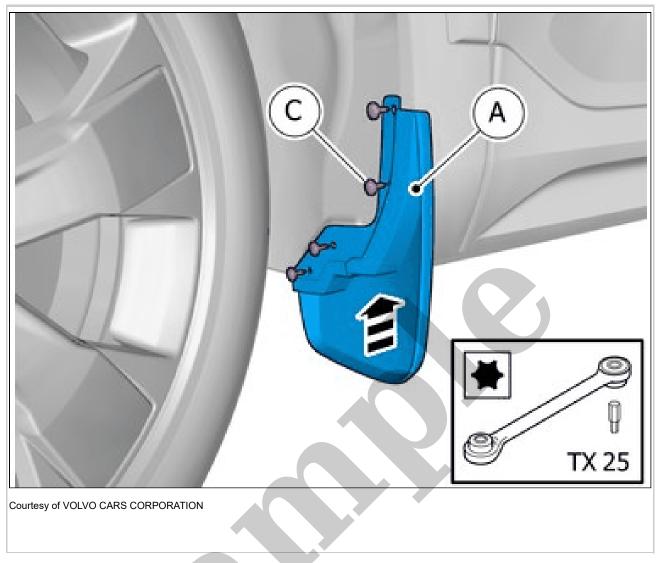

Install component that comes with the accessory kit. Repeat all method steps for the other side.

MUDFLAPS, REAR > MUDFLAPS, REAR [2018-2022] > ACCESSORY INSTALLATION Equipment