


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2003 CHEVROLET Suburban OEM Service and Repair Workshop Manual


[Go to manual page](#)

Detach the vacuum hose from the vacuum gauge assembly.

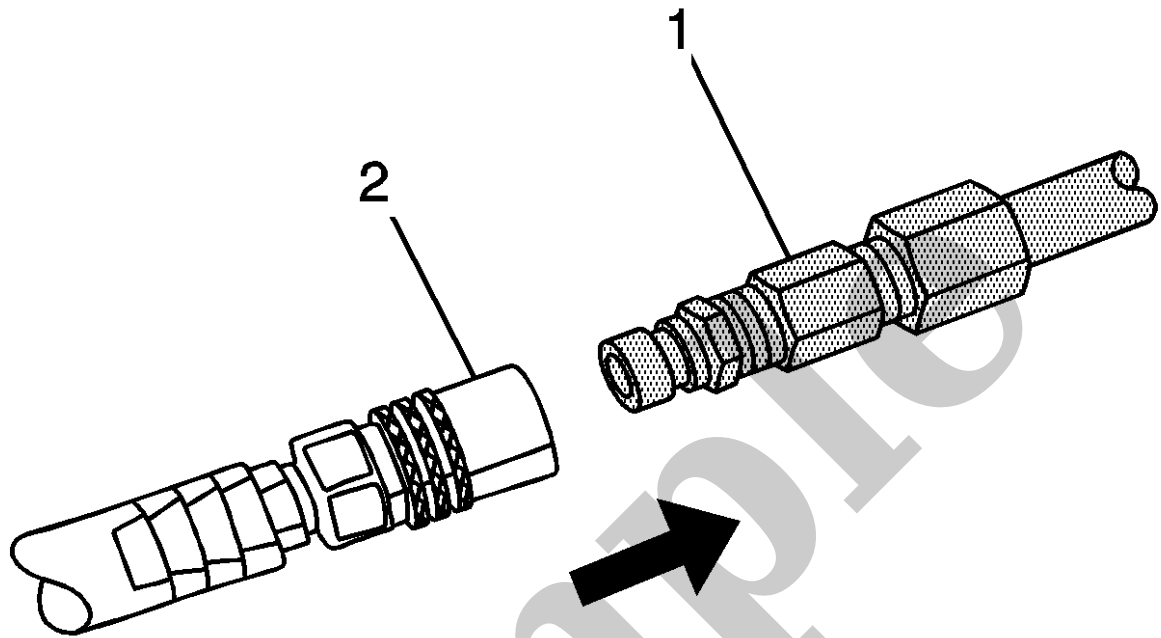

24.

Attach the extraction hose (1) to the vacuum hose (2).

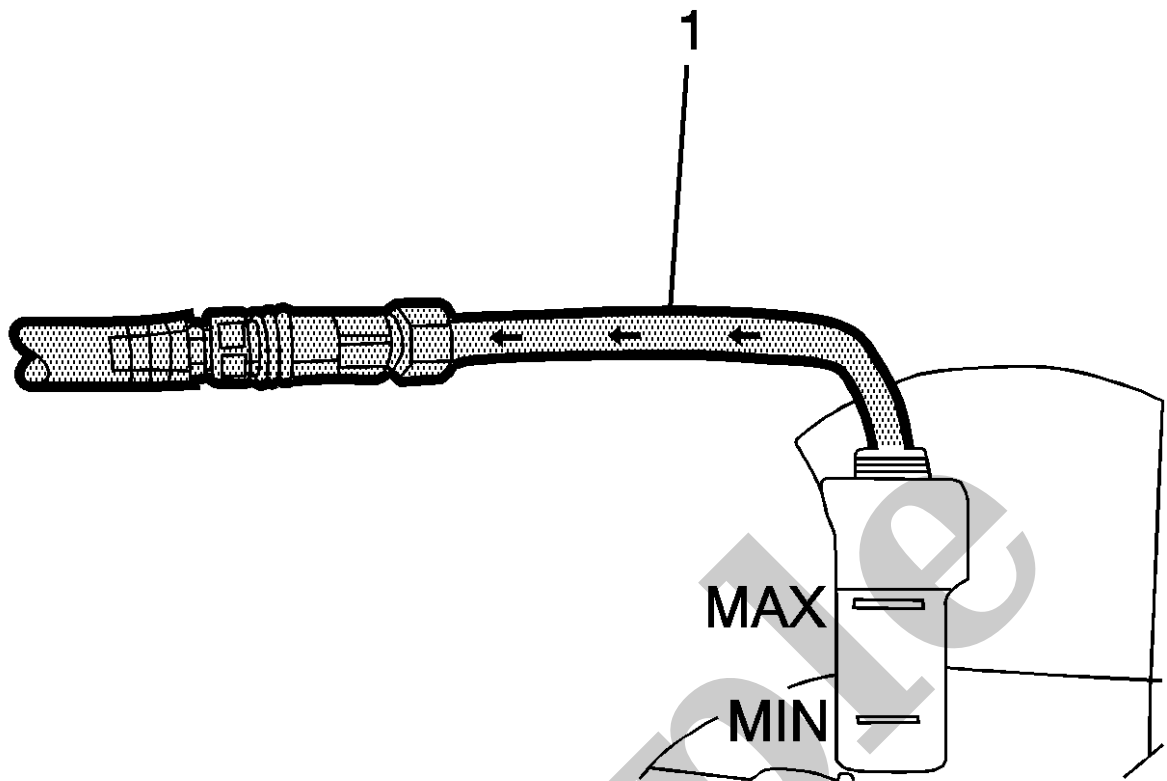


26.

Use the extraction hose (1) to draw out coolant to the proper level.

27. The vacuum tank has a drain valve on the bottom of the tank. Open the valve to drain coolant from the vacuum tank into a suitable container for disposal.

28. Install the surge tank cap.

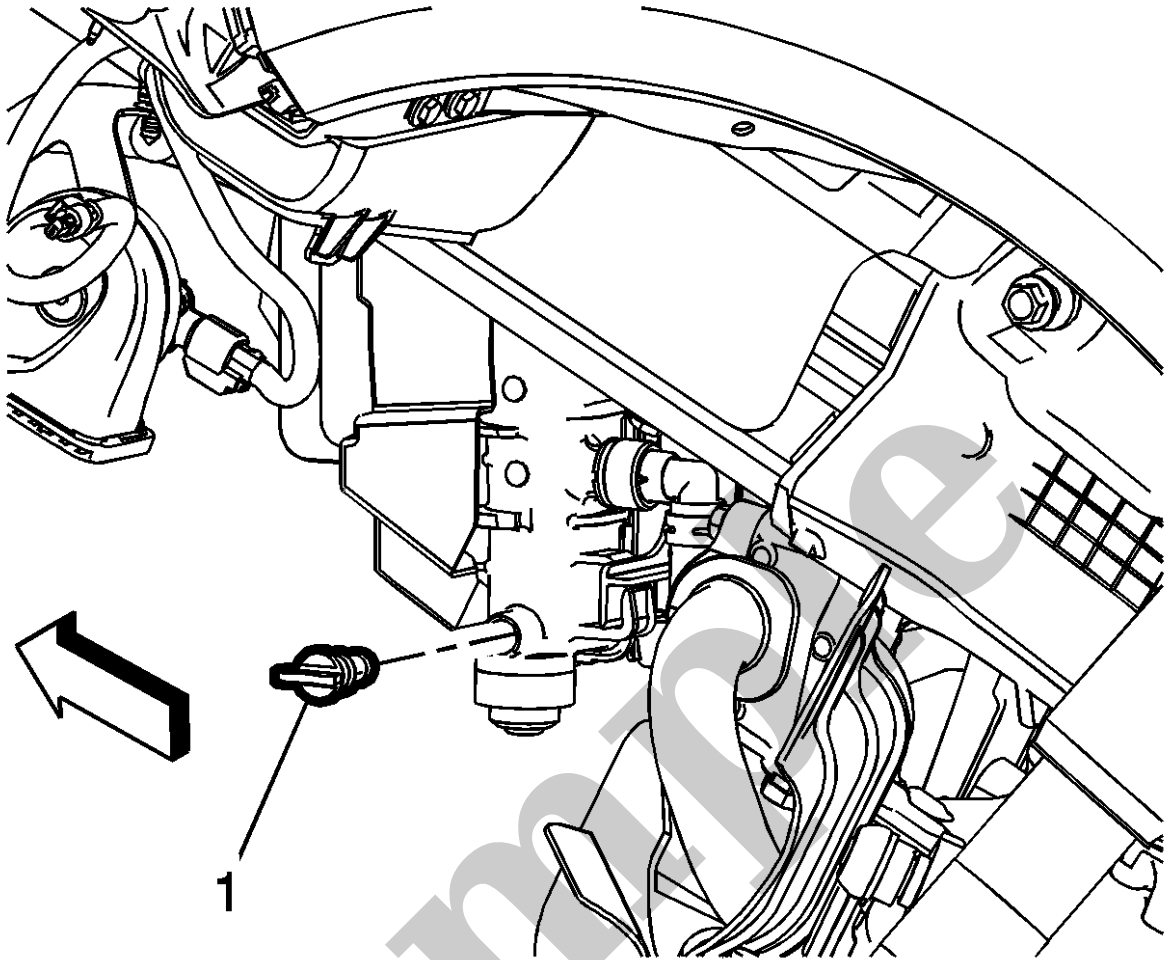

4.  
Open the radiator drain cock (1). [Radiator Drain Cock Replacement](#)
5. Drain the cooling system.
6. Lower the vehicle.
7. Inspect the coolant.
8. Follow the appropriate procedure based on the condition of the coolant.
  - Normal in appearance—Follow the filling procedure.
  - Discolored—Follow the flush procedure. [Flushing](#)

### Filling Procedure

1. **CAUTION**


## CAUTION

### Caution

Refer to [Fastener Caution](#).

Close the radiator drain cock (1). [Radiator Drain Cock Replacement](#)

4. Lower the vehicle.

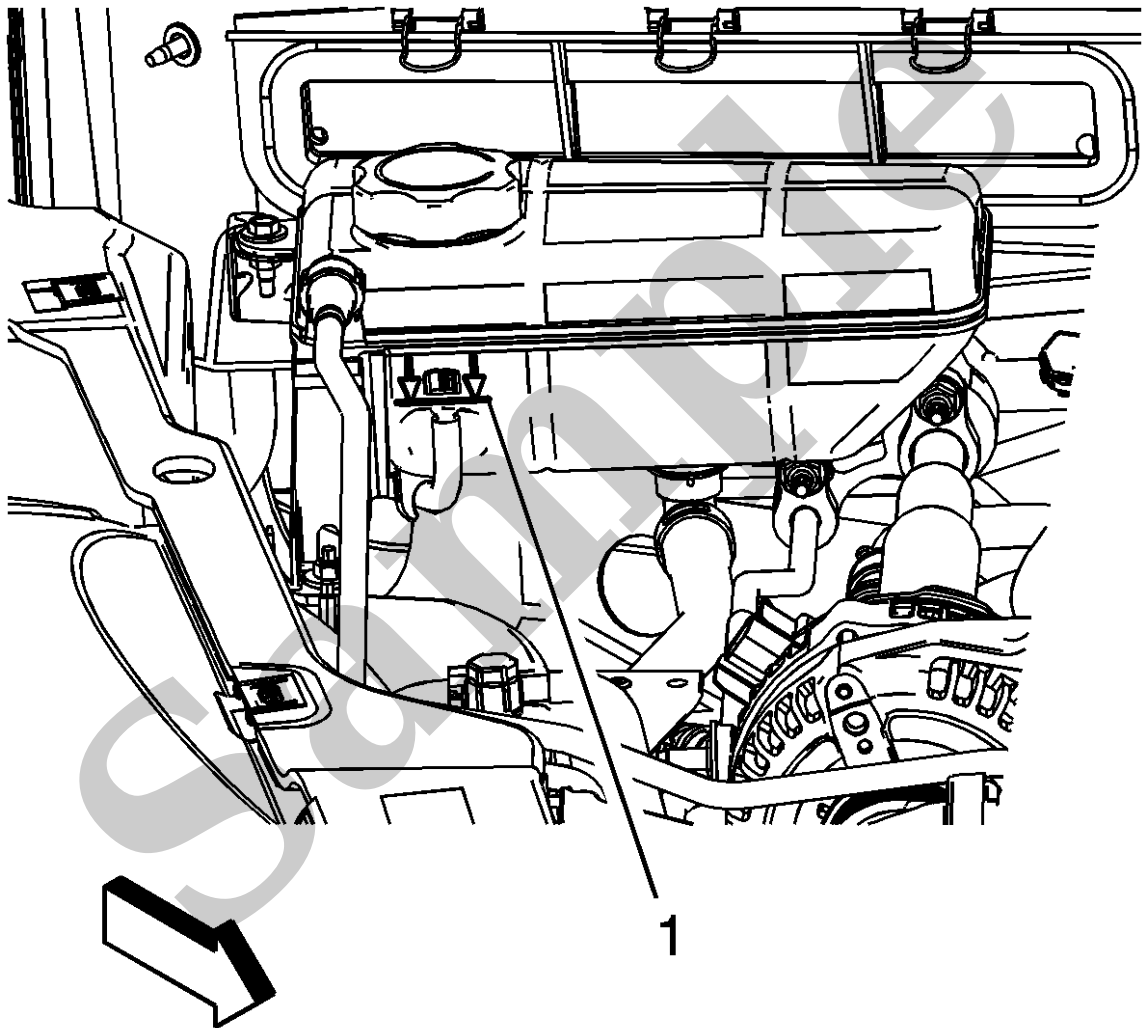

5.

## NOTE

### Note

Use a mixture of 40% DEX-COOL antifreeze and 60% clean drinkable water.