


Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

Toyota Camry 2018 Manual - Complete Service & Repair


[Go to manual page](#)

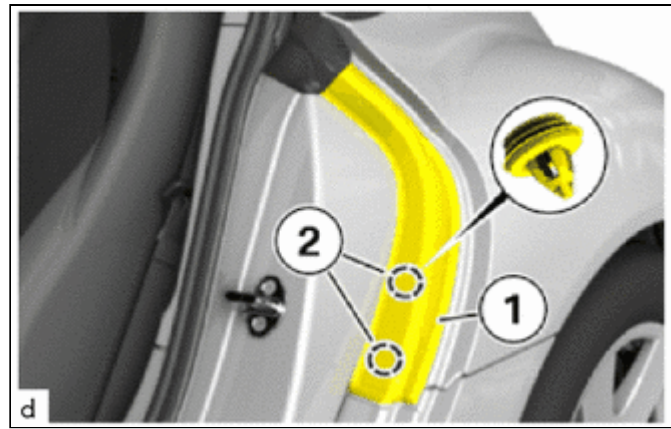


(b) Remove the screws (1).

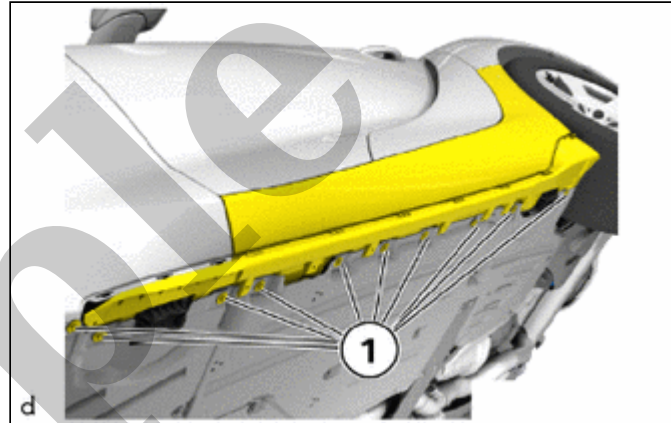


(c) Disengage the claws and separate the double-sided tape to remove the No. 1 side panel moulding (1).

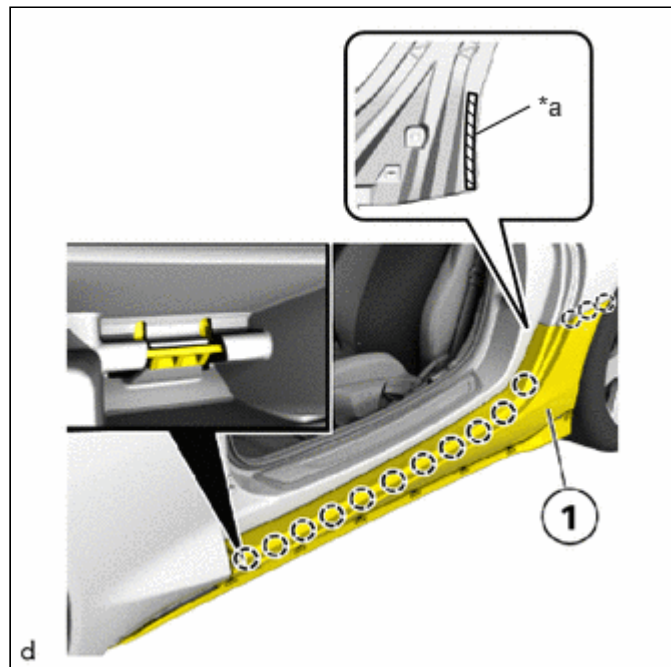

*a	Double-sided Tape
----	-------------------

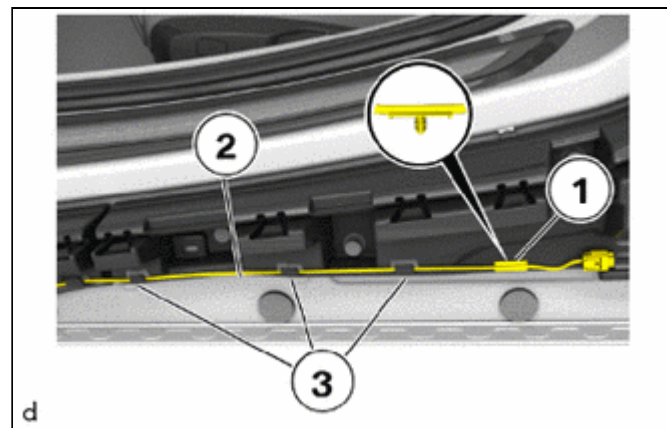

(b) Disconnect the floor wire (2) from holders (3).

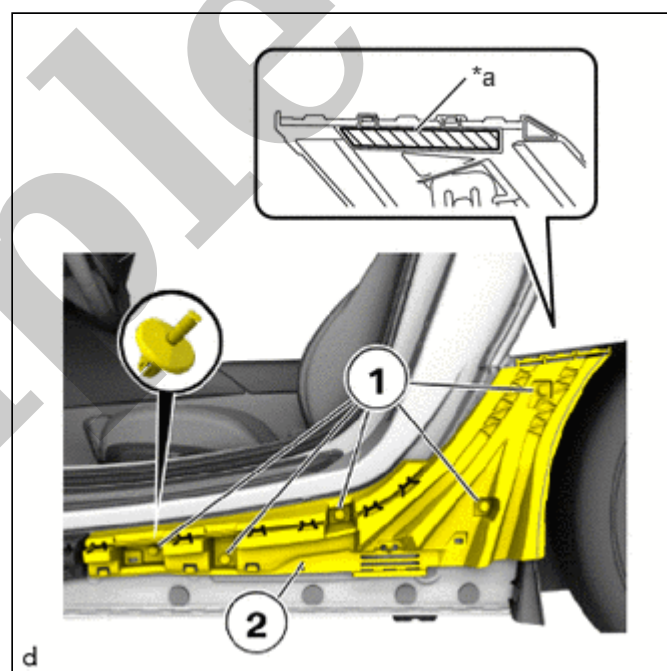

(c) Remove the clips (1).

*a	Double-sided Tape
----	-------------------


(d) Separate the double-sided tape to remove the No. 4 body outside moulding pad (2).



NOTICE:

After removing the release paper, keep the exposed adhesive free from foreign matter.

- (e) Install a new 20 mm (0.787 in.) double-sided tape as shown in the illustration.

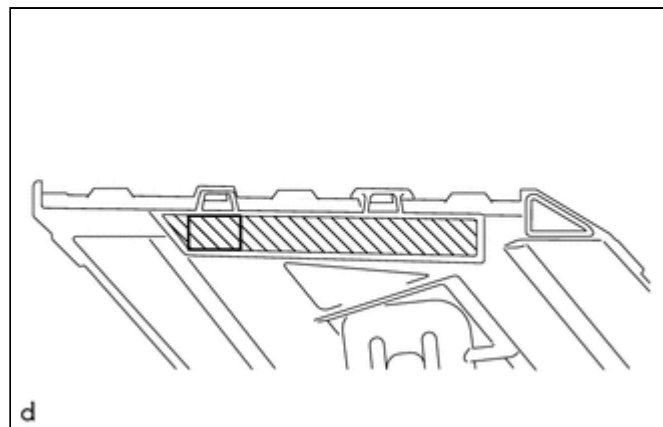

- (f) Remove the release paper from the 20 mm (0.787 in.) double-sided tape.


NOTICE:

After removing the release paper, keep the exposed adhesive free from foreign matter.

- (g) Install the No. 4 body outside moulding pad (2) with the clips (1).

NOTICE:

Press the No. 4 body outside moulding pad to install it.

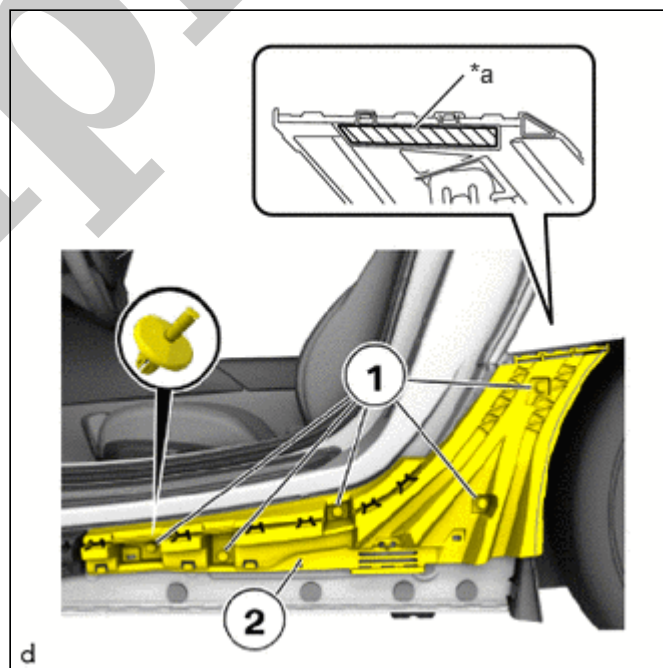

*a

Double-sided Tape

- (h) Connect the wiring harness (2) to the holders (3).

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001JCN3
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: EXTERIOR PANELS / TRIM: ROCKER PANEL MOULDING: INSTALLATION; 2020 - 2025 MY Supra [03/2019 -]		

INSTALLATION

CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for both the LH and RH sides.
- The procedure described below is for the LH side.

PROCEDURE

1. INSTALL NO. 1 SIDE PANEL MOULDING

- (a) Clean the surface of the No. 1 side panel moulding.
- (1) Remove any remaining double-sided tape from the No. 1 side panel moulding.
- (2) Wipe off any adhesive residue with cleaner.

Cleaner:


Cleaner R2

- (b) Remove the release paper from the 150 mm (5.91 in.) double-sided tape.

NOTICE:

After removing the release paper, keep the exposed adhesive free from foreign matter.

- (c) Install the No. 1 side panel moulding (1) under the front side panel (2) in the direction of the arrow.

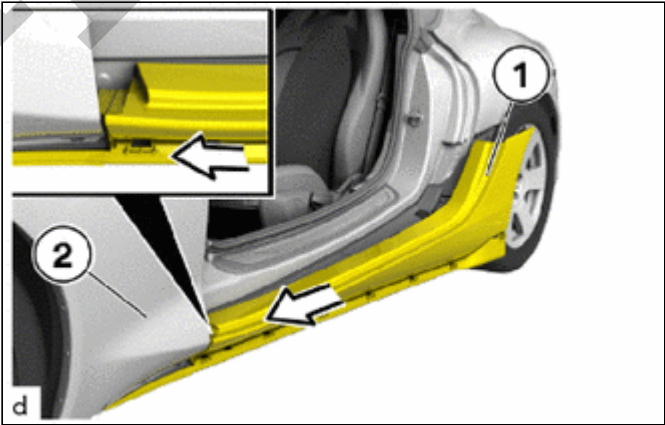

- (d) Engage the No. 1 side panel moulding (1) and the claws.

NOTICE:

Press the No. 1 side panel moulding to install it.