


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1987 JEEP Cherokee OEM Service and Repair Workshop Manual


[Go to manual page](#)

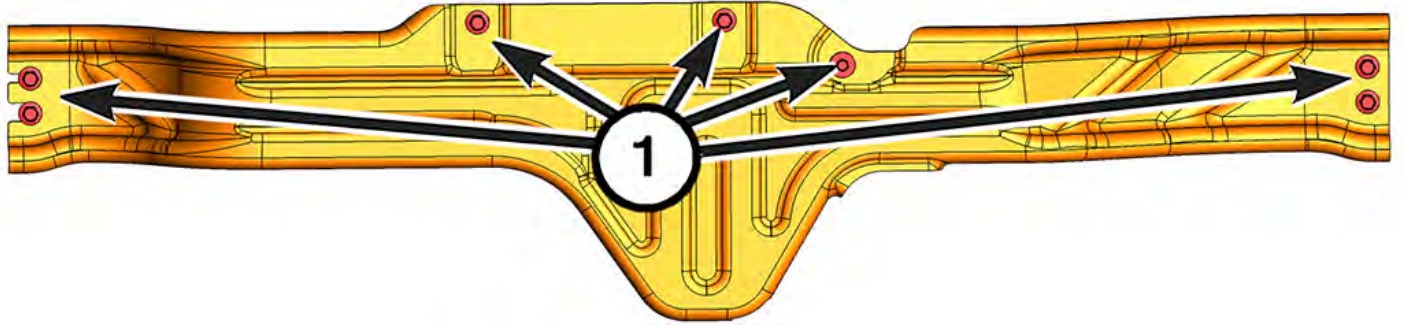

1301189053


CALLOUT	DESCRIPTION	SPECIFICATION	COMMENT
1	Transfer Case Skid Plate bolts - 5.7L	20 N·m (15 Ft. Lbs.)	—
2	Transfer Case Skid Plate bolts - 3.6L	20 N·m (15 Ft. Lbs.)	—
3	Battery Skid Plate to Rail Bolts	35 N·m (26 Ft. Lbs.)	—

1	Sway Bar Skid Plate bolts	18 N·m (13 Ft. Lbs.)	—
2	Transmission Skid Plate bolts	18 N·m (13 Ft. Lbs.)	—
3	IDCM Skid Plate bolts	18 N·m (13 Ft. Lbs.)	—

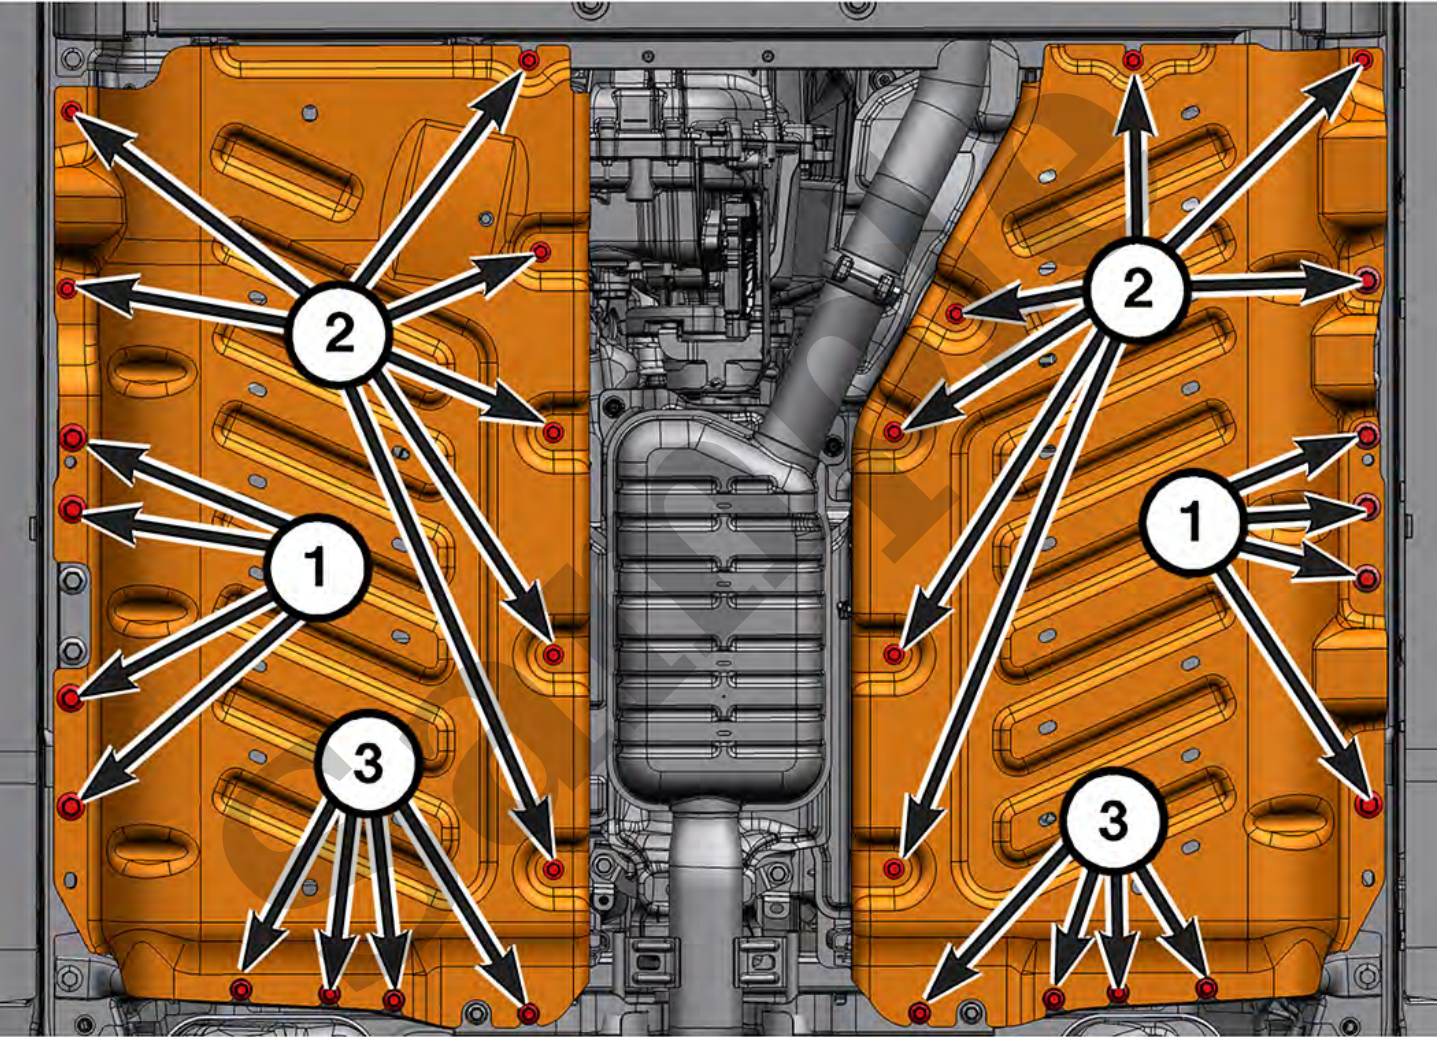

1301189049

CALLOUT	DESCRIPTION	SPECIFICATION	COMMENT
1	Battery Skid Plate to Underbody bolts	80 N·m (60 Ft. Lbs.)	—
2	Battery Skid Plate to Sill Brace bolts	25 N·m (18 Ft. Lbs.)	—

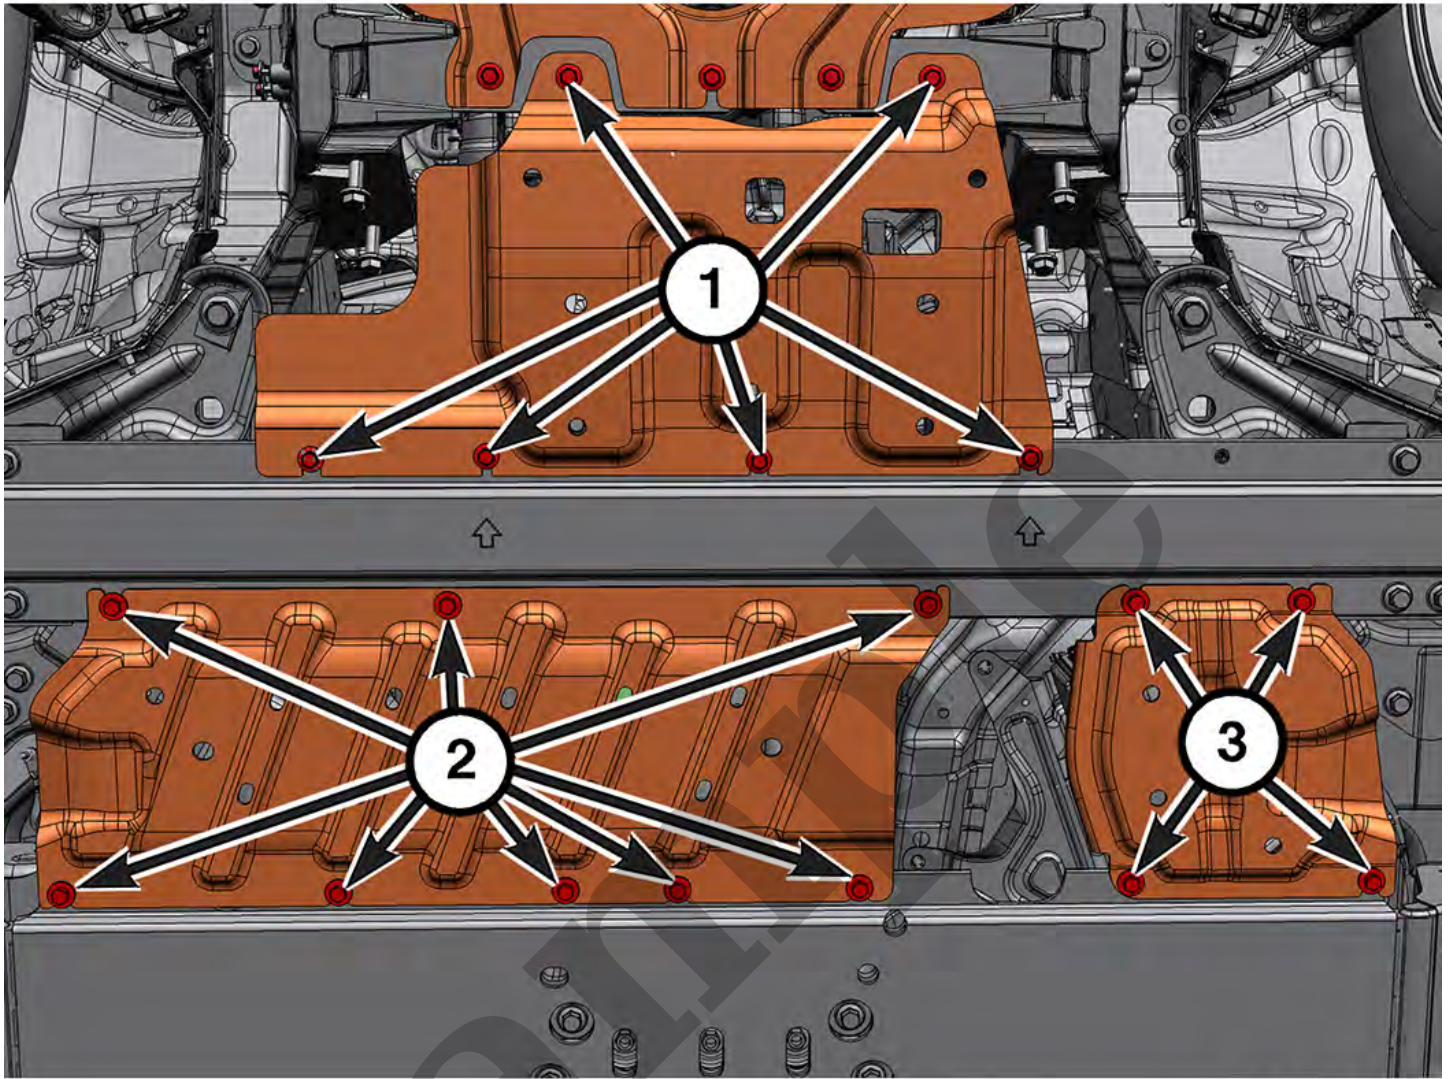

1301189050

CALLOUT	DESCRIPTION	SPECIFICATION	COMMENT
1	Sway Bar Skid Plate bolts	18 N·m (13 Ft. Lbs.)	—
2	Transmission Skid Plate bolts	18 N·m (13 Ft. Lbs.)	—
3	IDCM Skid Plate bolts	18 N·m (13 Ft. Lbs.)	—

1 - Battery Skid Plate to Underbody Fasteners
2 - Battery Skid Plate to NVH Bracket Fasteners
3 - Battery Skid Plate to Battery Z-Bracket Fasteners
4 - Secondary Battery Skid Plate

2. Remove the battery skid plate to underbody fasteners.
3. Remove the battery skid plate to NVH bracket fasteners.
4. Remove the battery skid plate to battery Z-bracket fasteners.
5. Remove the secondary battery skid plate.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle.

TORQUE SPECIFICATIONS - SKID PLATES - PHEV


YOUR CURRENT VEHICLE

PHEV - Stabilizer Bar SKID Plate

PHEV - STABILIZER BAR SKID PLATE

REMOVAL

1. Raise and support the vehicle ([Refer to Vehicle Quick Reference/Hoisting/Standard Procedure](#)).

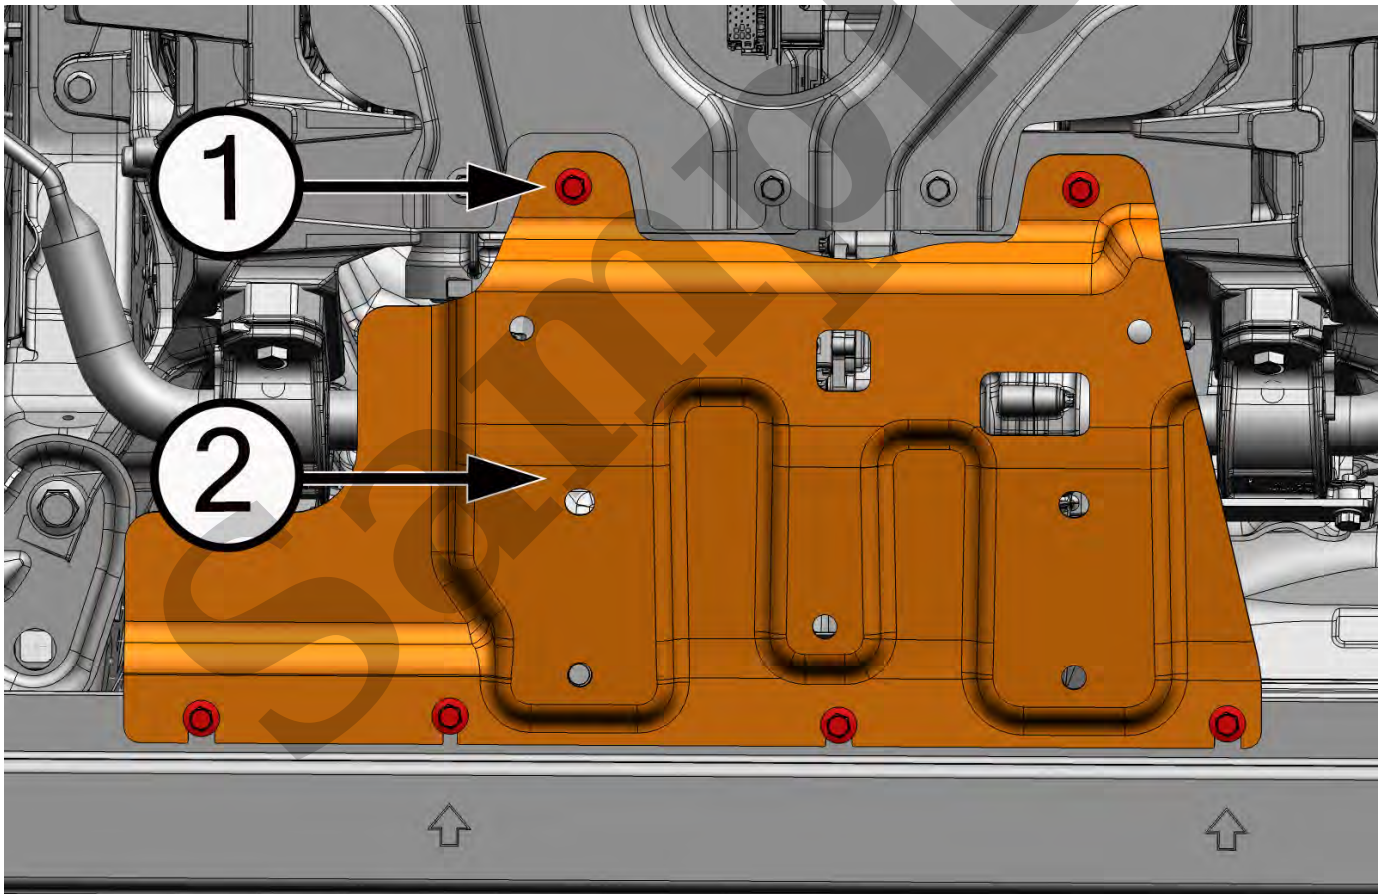

1 - Stabilizer Bar Skid Plate Fasteners

2 - Stabilizer Bar Skid Plate

2. Remove the front suspension skid plate fasteners.


YOUR CURRENT VEHICLE

PHEV - Transfer Case SKID Plate

PHEV - TRANSFER CASE SKID PLATE

REMOVAL

1. Raise and support the vehicle ([Refer to Vehicle Quick Reference/Hoisting/Standard Procedure](#)).

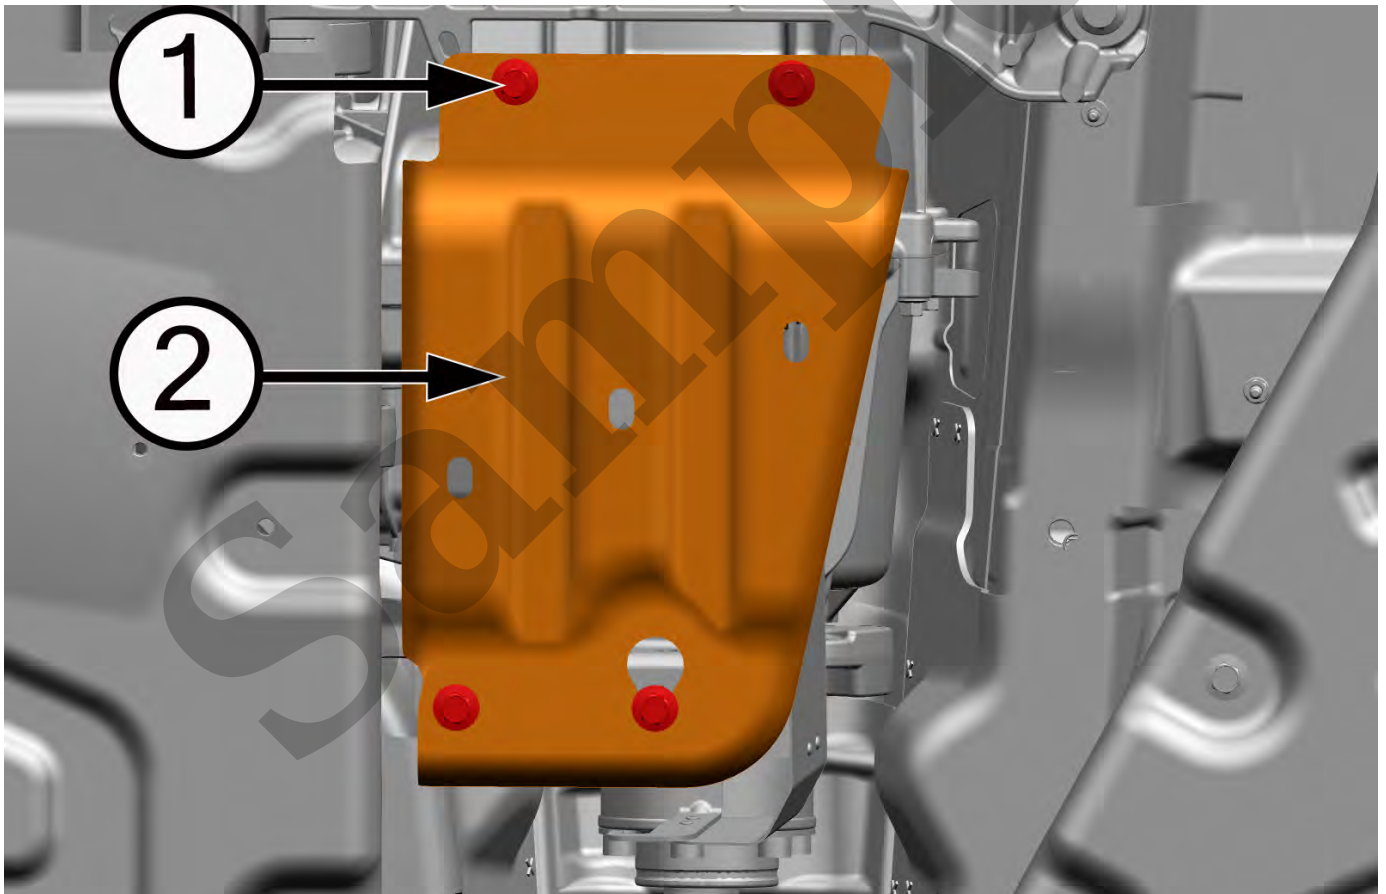

1 - Transfer Plate Skid Plate Fasteners

2 - Transfer Plate Skid Plate

2. Remove the transfer skid plate fasteners.


YOUR CURRENT VEHICLE

PHEV - Transmission SKID Plate

PHEV - TRANSMISSION SKID PLATE

REMOVAL

1. Raise and support the vehicle ([Refer to Vehicle Quick Reference/Hoisting/Standard Procedure](#)).

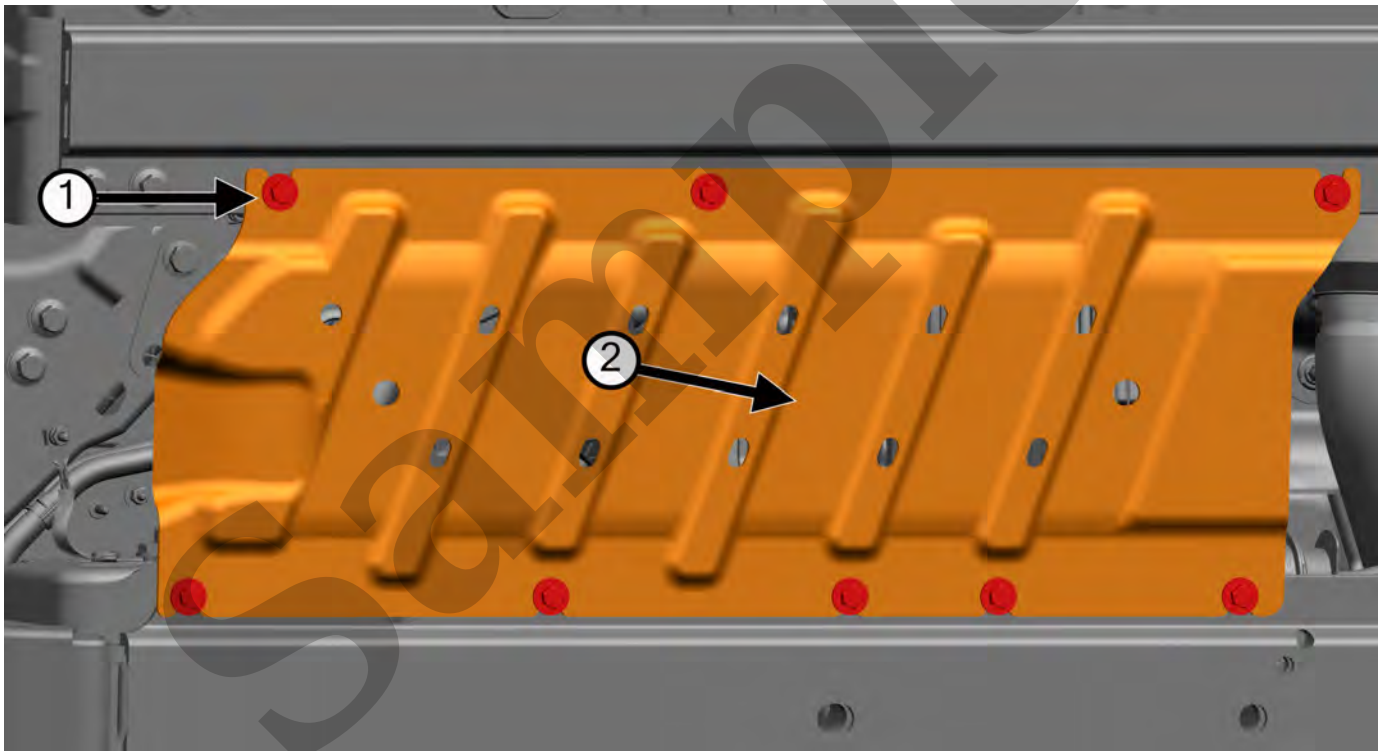

1 - Transmission Belly Pan

2 - Transmission Skid Plate Fasteners

2. Remove the transmission skid plate fasteners that retain the belly pan.
3. Remove the transmission belly pan.


INSTALLATION

YOUR CURRENT VEHICLE

Transfer Case SKID Plate - 3.6L

TRANSFER CASE SKID PLATE - 3.6L

REMOVAL

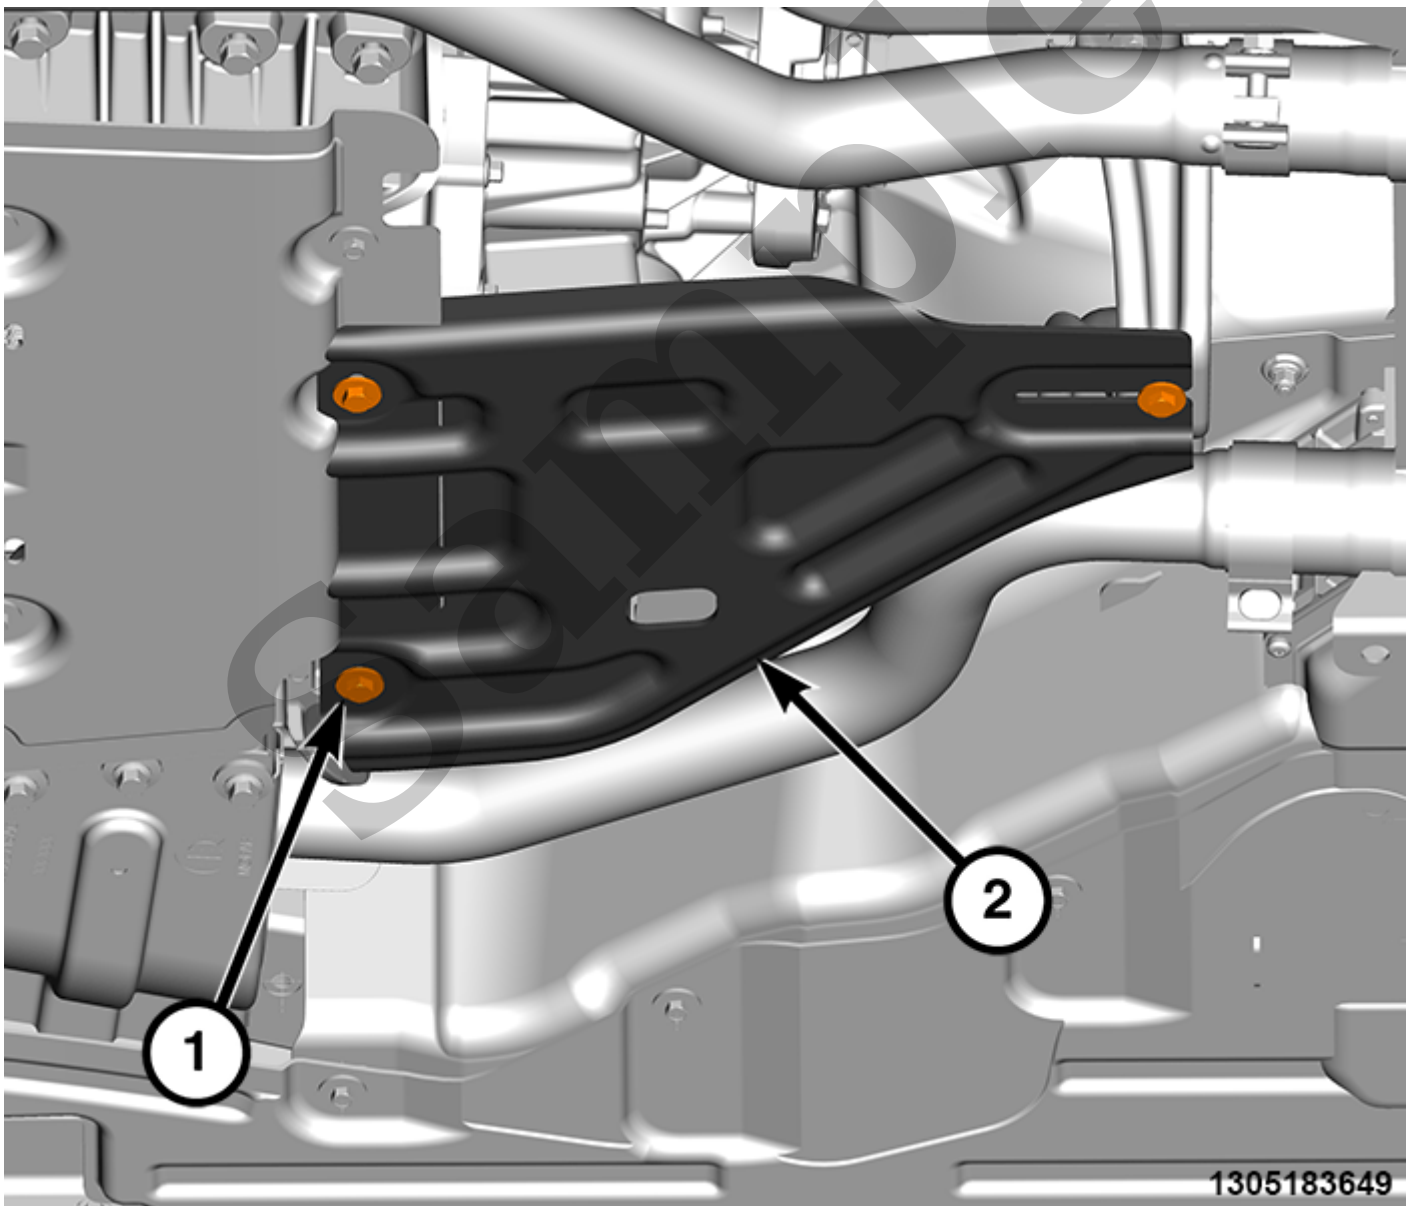

YOUR CURRENT VEHICLE

Transfer Case SKID Plate - 5.7L

TRANSFER CASE SKID PLATE - 5.7L

REMOVAL

