


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1991 JEEP Cherokee OEM Service and Repair Workshop Manual

[Go to manual page](#)

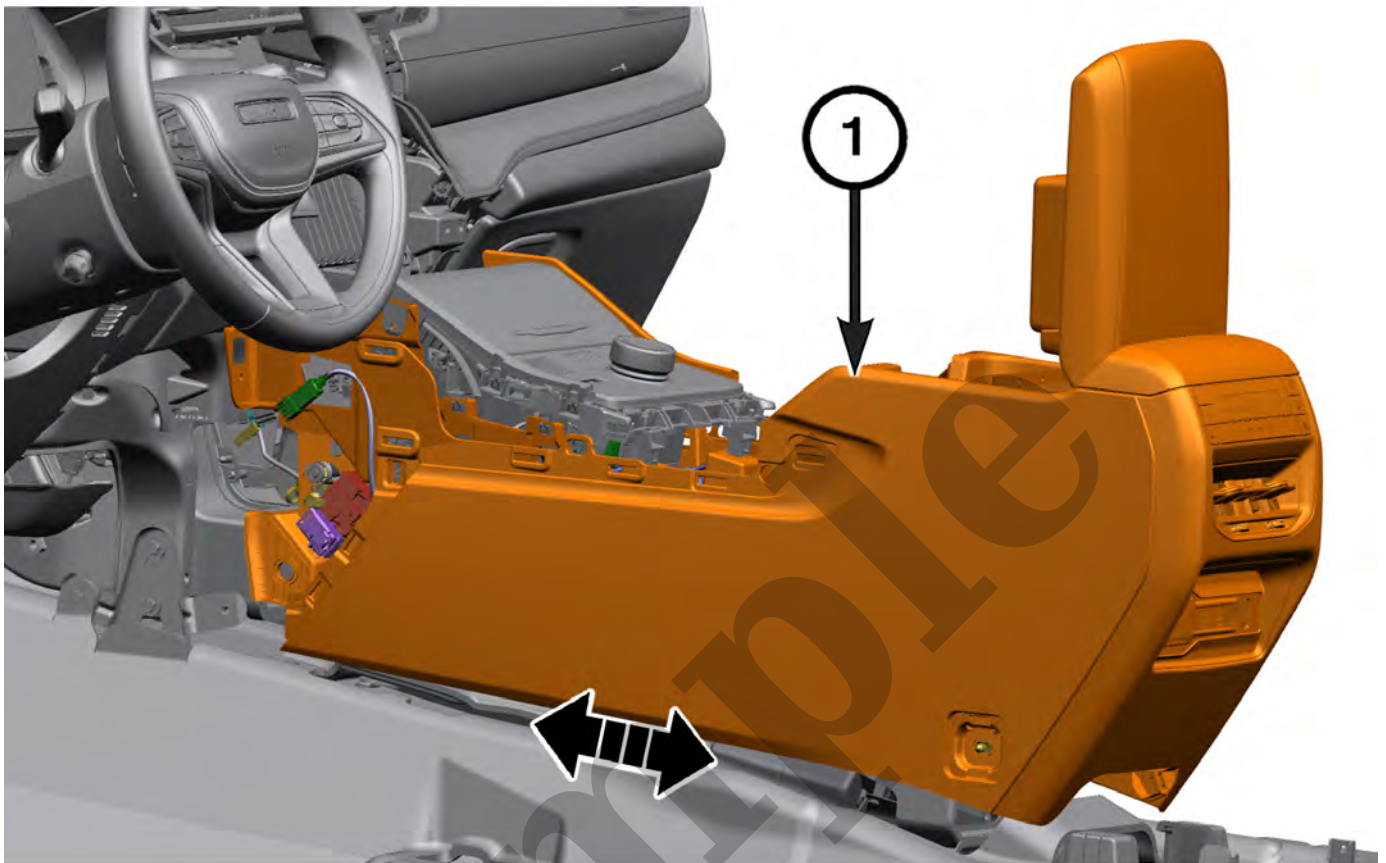

2316167358

1 - Floor Console

8. Slide the floor console back and up and remove the console from the vehicle.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Trim screws are tighten securely.

TORQUE SPECIFICATIONS - INTERIOR


DESCRIPTION	SPECIFICATION	COMMENT
Floor Console Floor Bracket Screws	5 N·m (44 In. Lbs.)	—


YOUR CURRENT VEHICLE

Floor Console End CAP

FLOOR CONSOLE END CAP

REMOVAL

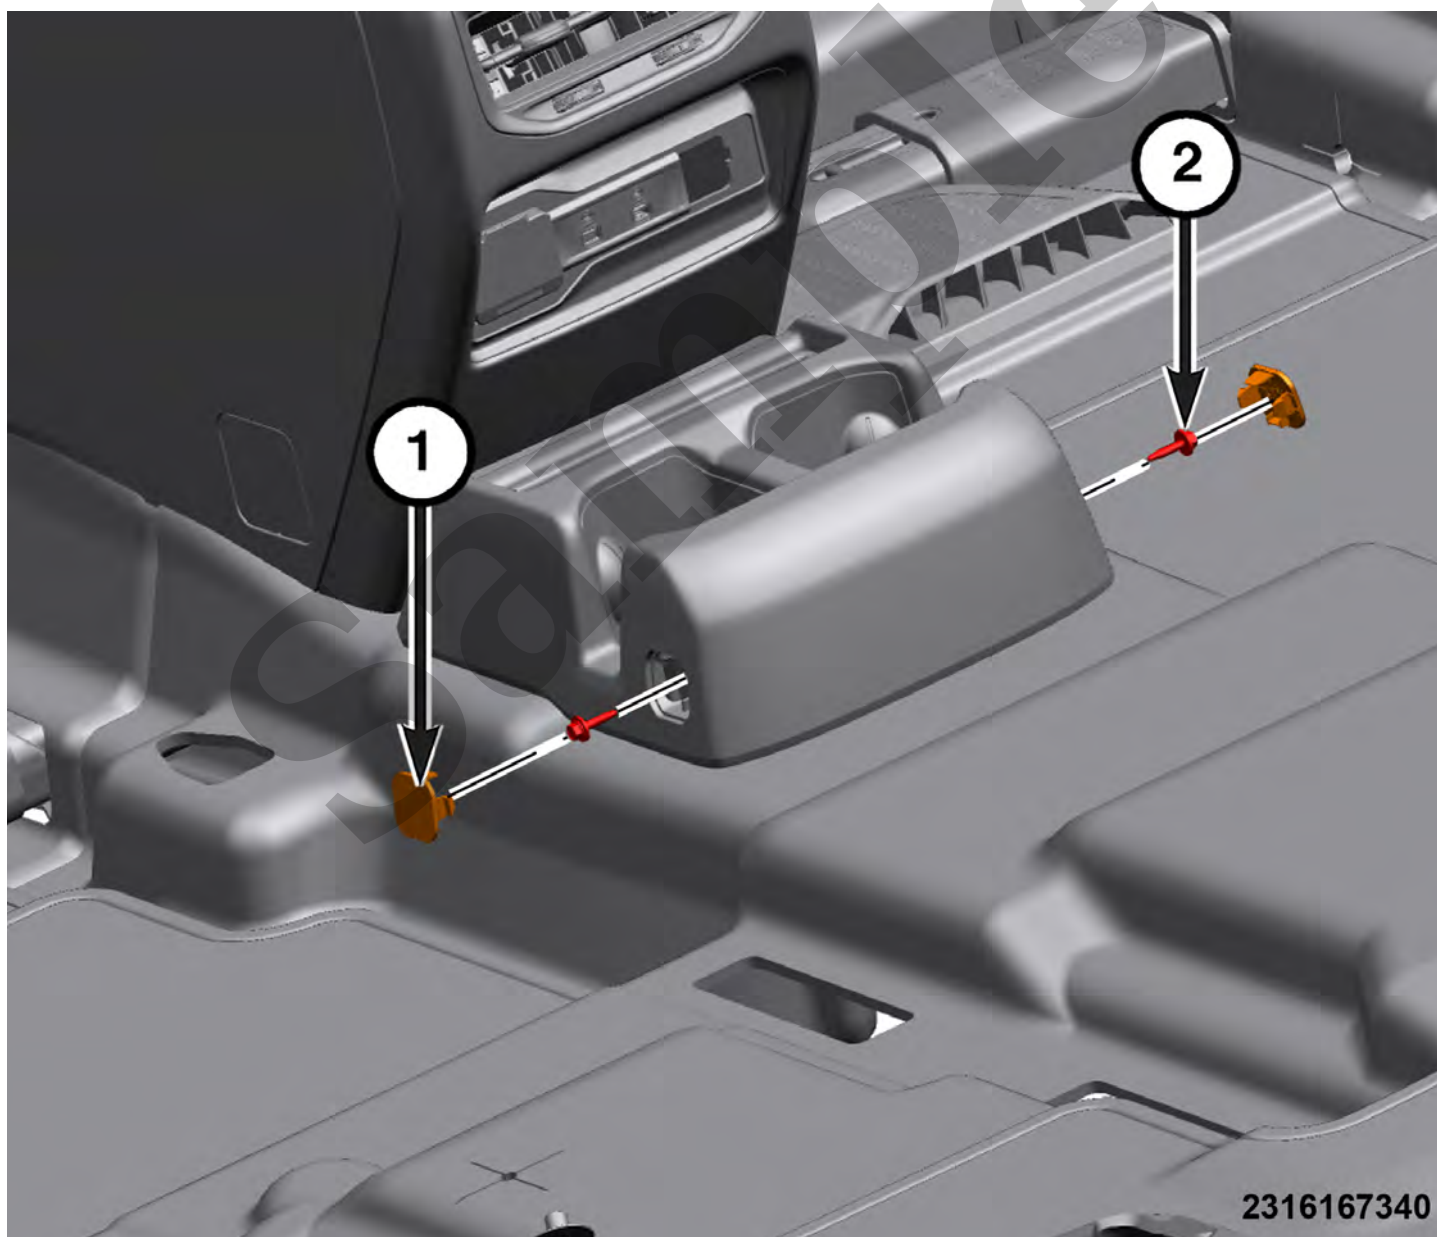

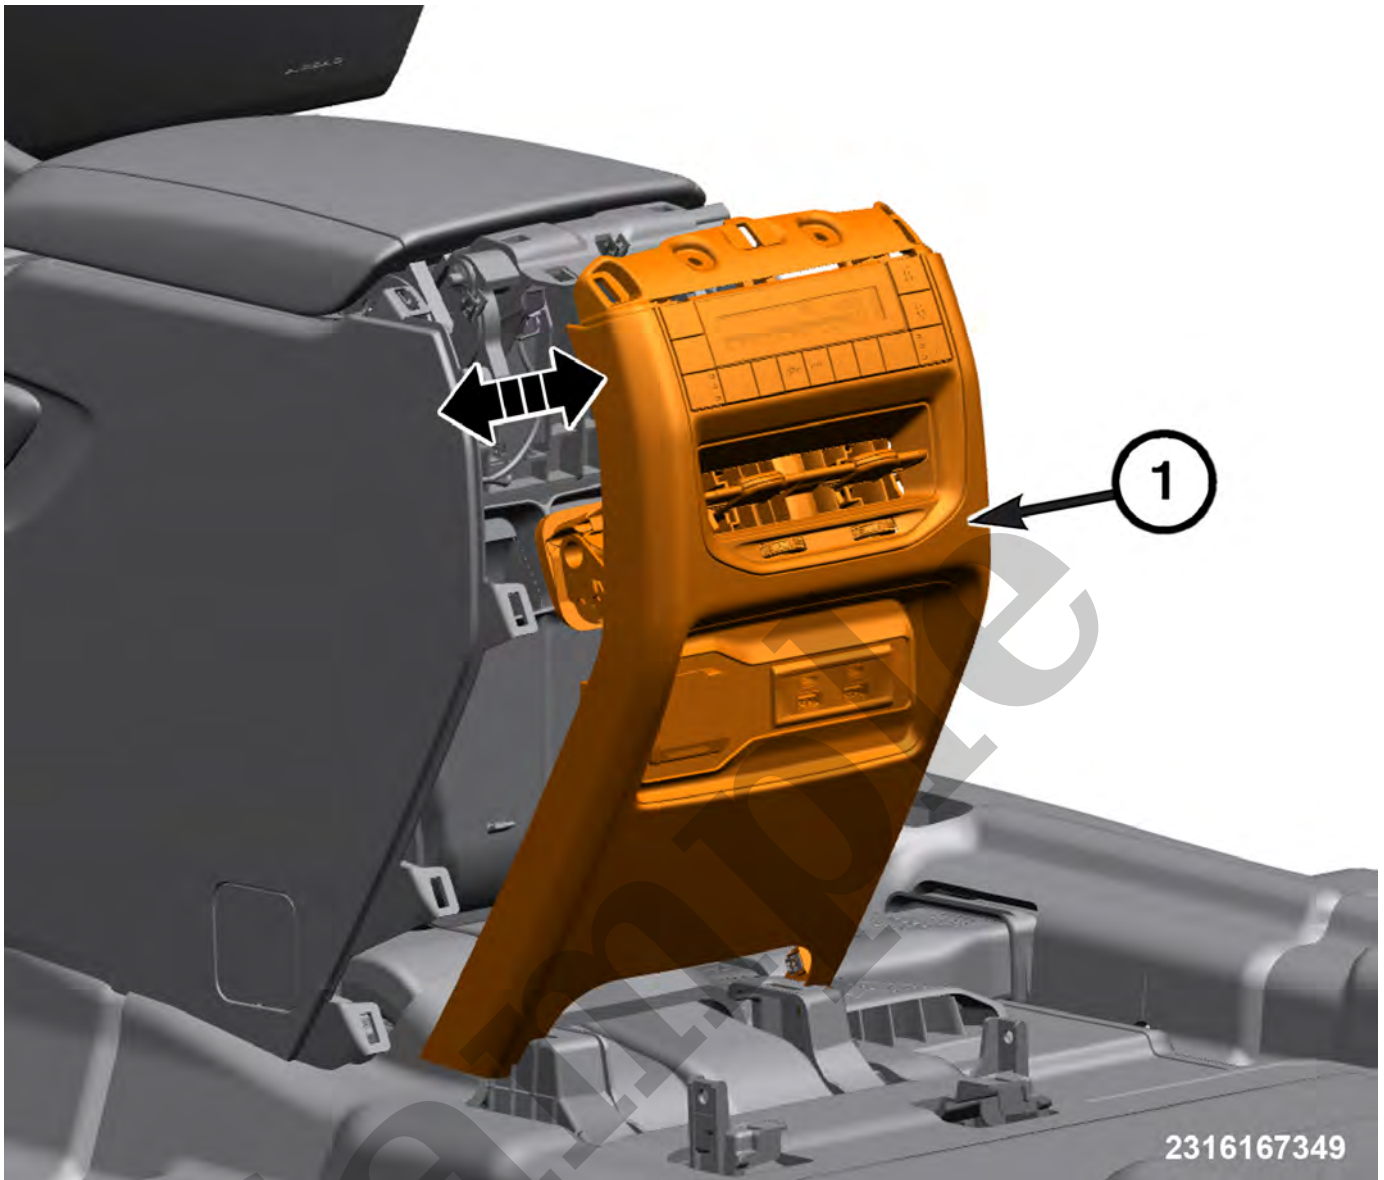

1 - Floor Console End Cap

5. Using a trim stick or equivalent, release the floor console end cap from the floor console.
6. Disconnect all of the wire harness connectors.
7. Remove the console end cap from the vehicle.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Install all fasteners and tighten securely.
- Replace the front floor console armrest hinge cover with a **NEW** part.

1 - Floor Console Lower Side Trim Panel

1. Using a trim stick or equivalent, release and remove the floor console lower side trim panel.

INSTALLATION


Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Hand tap to fully engage the retaining clips.

1 - Compartment Door

2 - Fastener

1. Open the compartment door in the overhead console and remove the fasteners.

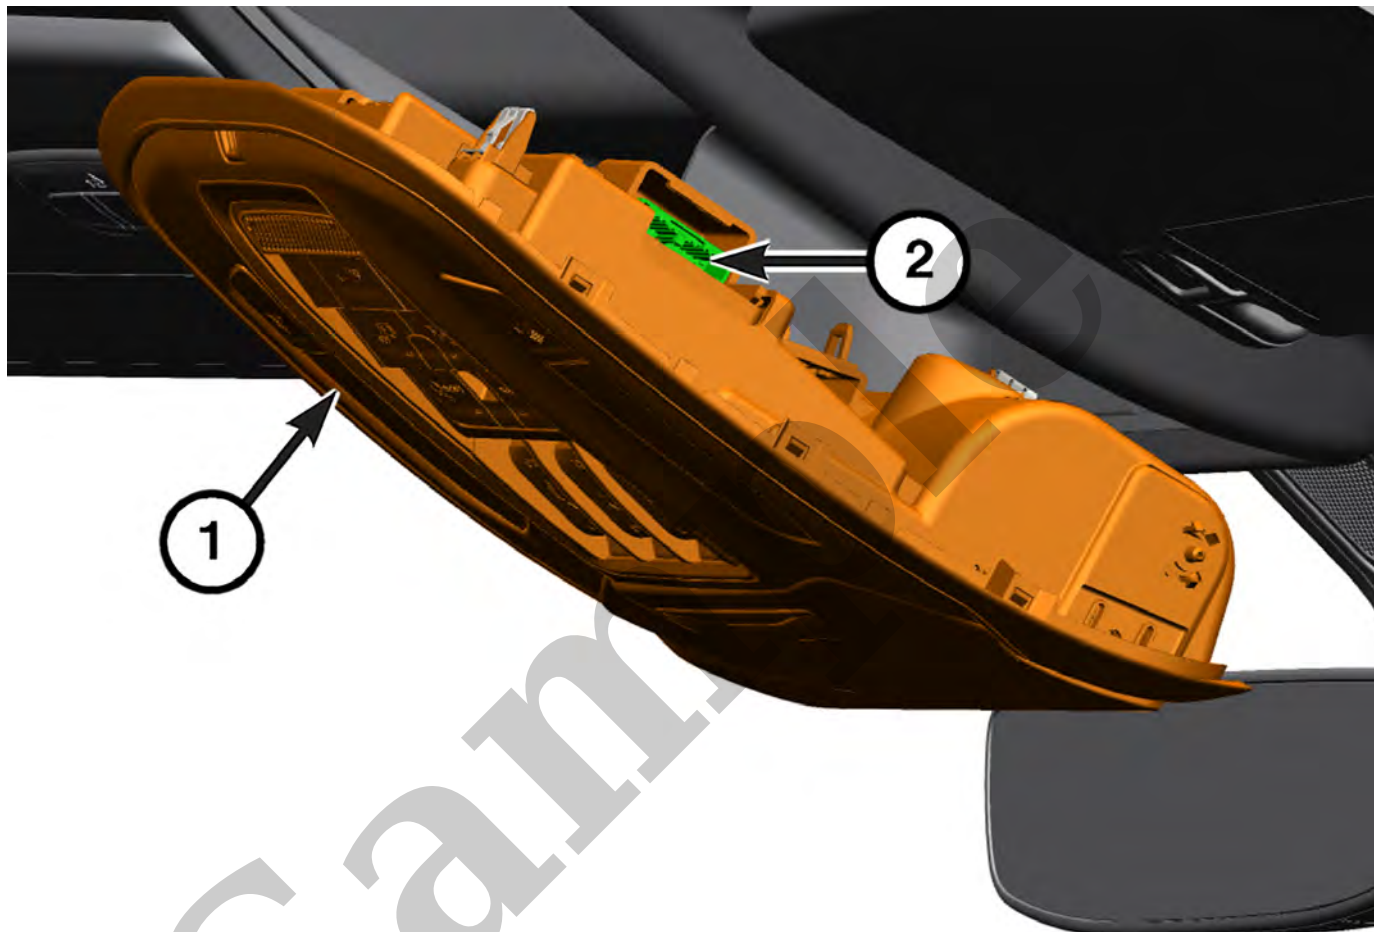


2316167325

1 - Overhead Console

2 - Wire Harness Connector

2. Using a trim stick or equivalent, open a gap large enough to grasp both of the sides of the overhead console and disengage the retaining clips.

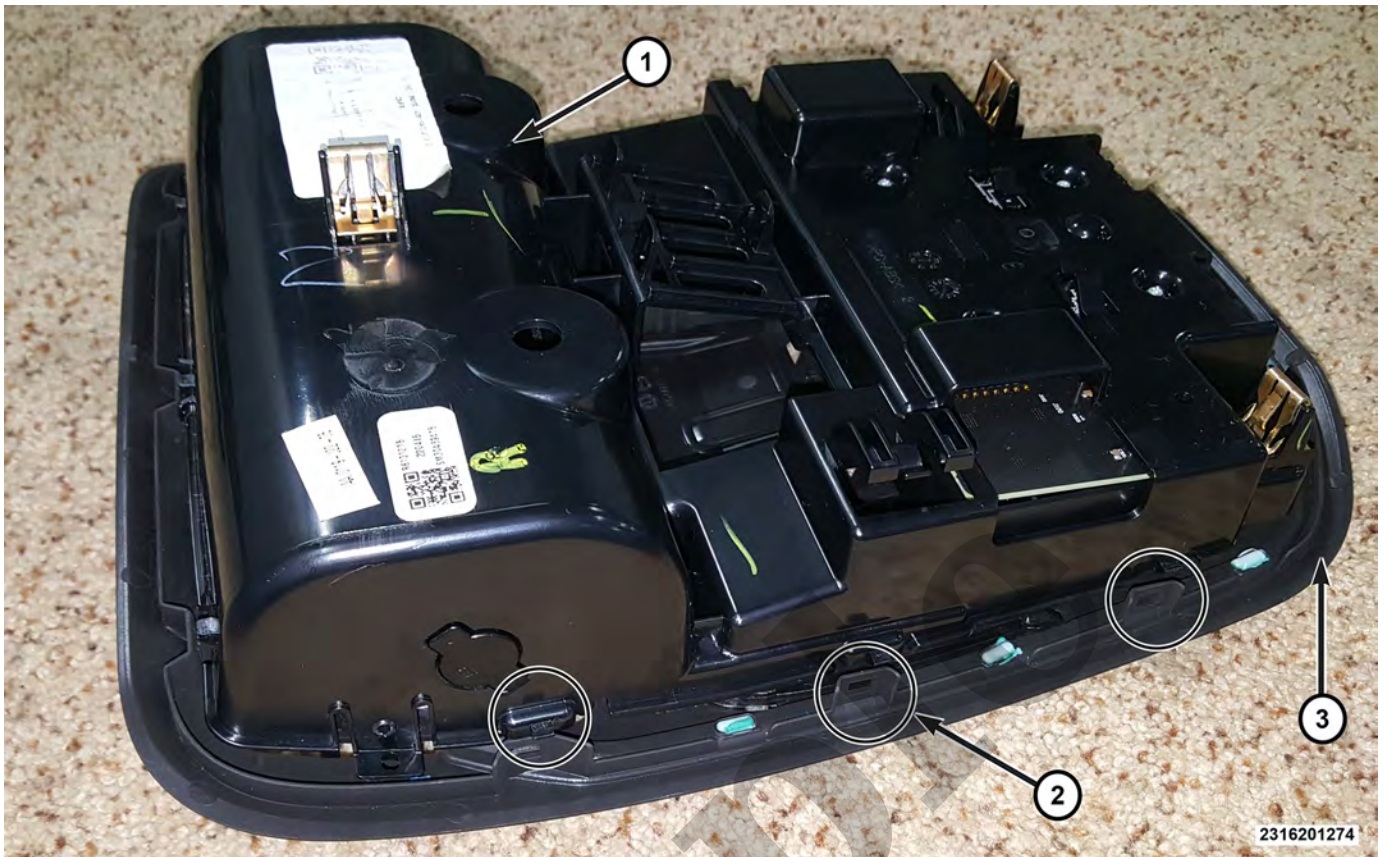


1 - Blackplate

2 - Retaining Tabs

3 - Main Bezel

3. Disengage the retaining tabs from around the perimeter of the overhead console and carefully separate the main bezel from the backplate.

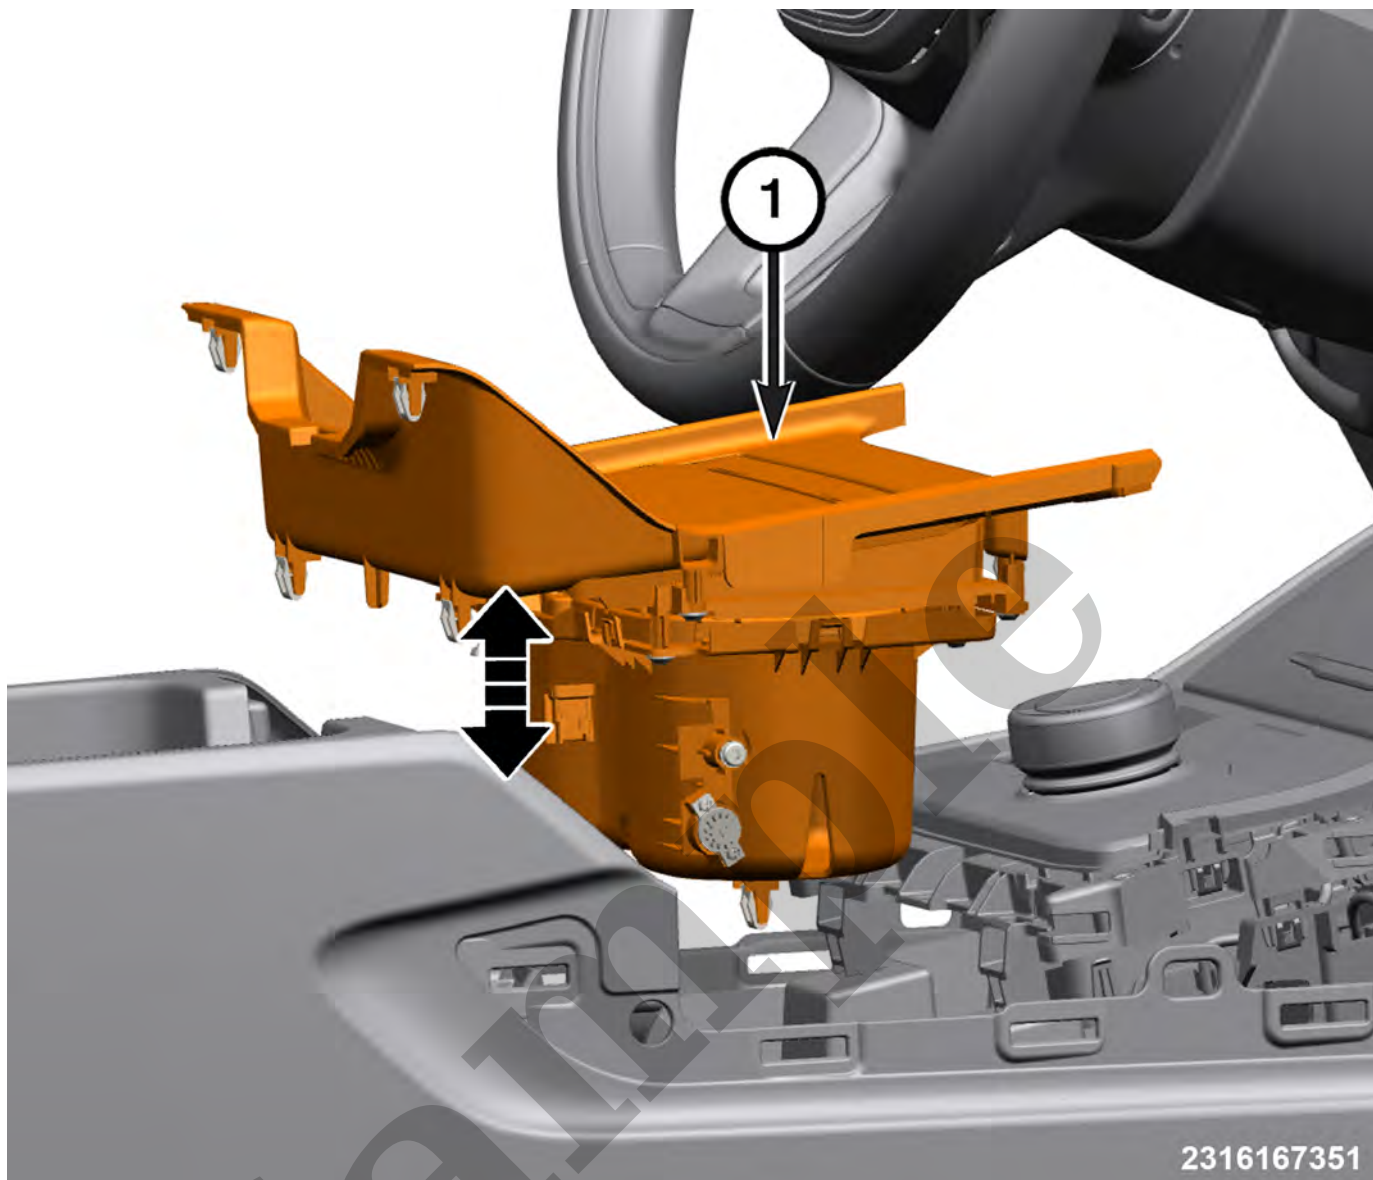

1 - Cup Holder Assembly

3. Using a trim stick or equivalent, release the cup holder assembly from the floor console and lift up to remove.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Press firmly to fully engage the cup holder retaining tabs into the floor console.

Refer To List:

List 1

- [23 - Body / Interior / CONSOLE, Floor / Removal and Installation](#)

Headliner

HEADLINER

REMOVAL

CAUTION

Hands should be clean or clean cloth gloves used when handling the headliner to avoid damage to the headliner.

1. Disconnect and isolate the negative battery cable(s) ([Refer to Electrical/Battery System/Standard Procedure](#)).
2. Remove the right front seat ([Refer to Body/Seats/SEAT Front/Removal and Installation](#))([Refer To List 1](#)).
3. Position the second row seats to the down position.
4. If equipped, position the third row seats to the down position.
5. Remove the visors ([Refer to Body/Interior/VISOR/Removal and Installation](#)).
6. Remove the visor supports ([Refer to Body/Interior/SUPPORT, Visor/Removal and Installation](#)).
7. Remove the overhead console ([Refer to Body/Interior/CONSOLE, Overhead/Removal and Installation](#)).
8. If equipped, remove the rear interior camera ([Refer to Electrical/8A - Audio and Video/CAMERA, Rear Interior/Removal and Installation](#)).
9. If equipped, remove the rear view mirror upper and lower covers ([Refer to Body/Interior/MIRROR, Rearview/Removal and Installation](#)) to gain access to the rear view mirror wire harness connector(s). Disconnect the wire harness connector(s).
10. Remove the A-pillar trim panels ([Refer to Body/Interior/PANEL, A-Pillar Trim/Removal and Installation](#)).
11. Remove the upper B-pillar trim panels ([Refer to Body/Interior/PANEL, B-Pillar Trim/Removal and Installation](#))([Refer To List 2](#)).

CAUTION

Hands should be clean or clean cloth gloves used when handling the headliner to avoid damage to the headliner.

- Press firmly to engage hook and loop fasteners.

Refer To List:

List 1

- [23 - Body / Seats, Front / SEAT, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / SEAT, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / SEAT, Third Row / Removal and Installation](#)

List 2

- [23 - Body / Interior / PANEL, B-Pillar Trim, Lower / Removal and Installation](#)
- [23 - Body / Interior / PANEL, B-Pillar Trim, Upper / Removal and Installation](#)