


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 1993 JEEP Cherokee OEM Service and Repair Workshop Manual

[Go to manual page](#)

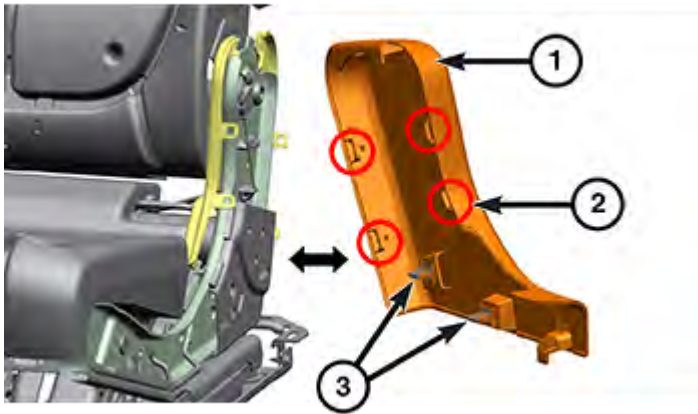

2319190700

1 - Inner Side Shield

2 - Molded Tabs

3 - Retaining Clips

3. Disengage the molded tabs and the retaining clips from the inner side shield. Pull up and outward to remove the inner side shield.


## INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle.

### Refer To List:

#### List 1

- [23 - Body / Interior / CONSOLE, Floor / Removal and Installation](#)
- [23 - Body / Interior / CONSOLE, Floor, End Cap / Removal and Installation](#)
- [23 - Body / Interior / CONSOLE, Floor, Lid / Removal and Installation](#)
- [23 - Body / Interior / CONSOLE, Floor, Side Panel / Removal and Installation](#)

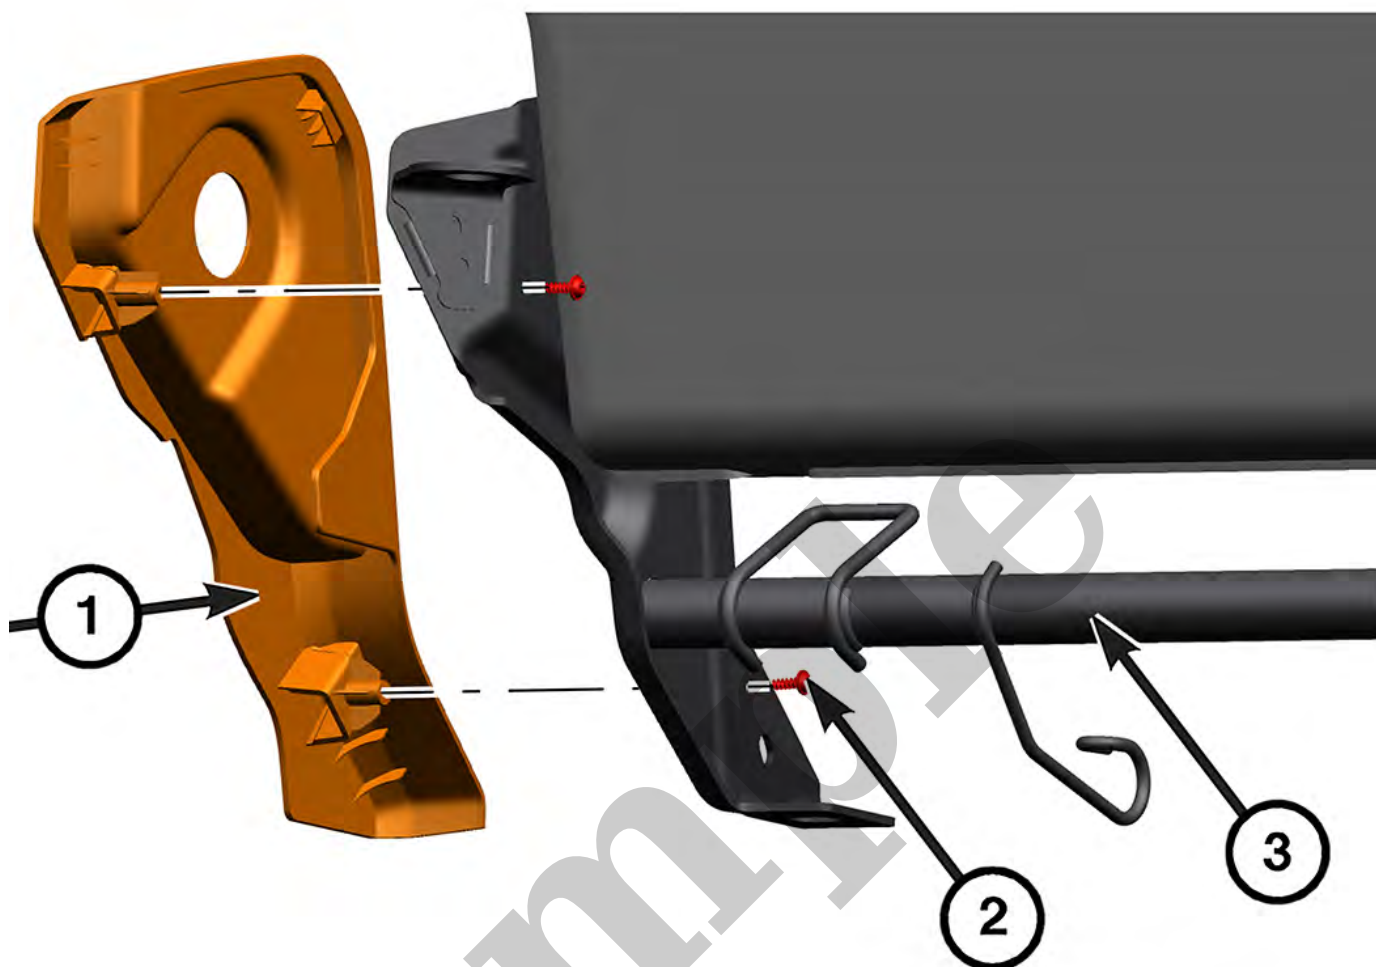

2319191044

1 - Side Shield

2 - Fasteners

3 - Seat Frame

3. Remove the fasteners and lift up to remove the outer side shield from the seat frame.

## INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle.

### Refer To List:

List 1

- [23 - Body / Seats, Front / SEAT, Front / Removal and Installation](#)

## **WARNING**

To avoid serious or fatal injury when handling a seat belt tensioner retractor. Exercise proper care to keep fingers out from under the retractor cover and away from the seat belt webbing where it exits from the retractor cover. Failure to follow these instructions may result in possible serious or fatal injury.

## **WARNING**

To avoid serious or fatal injury, replace all Supplemental Restraint System (SRS) components only with parts specified in the Mopar® Parts Catalog. Substitute parts may appear interchangeable, but internal differences may result in inferior occupant protection.

## **WARNING**

To avoid serious or fatal injury, the fasteners, screws, and bolts originally used for the Supplemental Restraint System (SRS) components must never be replaced with any substitutes. These fasteners have special coatings and are specifically designed for the SRS. Anytime a new fastener is needed, replace it with the correct fasteners provided in the service package or specified in the Mopar® Parts Catalog.

## **WARNING**

To avoid serious or fatal injury when a steering column has an airbag unit attached, never place the column on the floor or any other surface with the steering wheel or airbag unit face down. Failure to follow these instructions may result in possible serious or fatal injury.

YOUR CURRENT VEHICLE

## Manual Seat

### MANUAL SEAT

#### REMOVAL

1. Remove the seat from the vehicle ([Refer to Body/Seats/SEAT/Removal and Installation](#))(Refer To List 1).



2319181032

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- If the seat back cover was separated from the seat back foam, the use of **NEW** hog ring will be required for installation.

#### Refer To List:

##### List 1

- [23 - Body / Seats, Front / SEAT, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / SEAT, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / SEAT, Third Row / Removal and Installation](#)

##### List 2

- [23 - Body / Seats, Front / HEADREST, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / HEADREST, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / HEADREST, Third Row / Removal and Installation](#)

## Refer To List:

### List 1

- [23 - Body / Seats, Front / SEAT, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / SEAT, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / SEAT, Third Row / Removal and Installation](#)

### List 2

- [23 - Body / Seats, Front / HEADREST, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / HEADREST, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / HEADREST, Third Row / Removal and Installation](#)

Sample

## Third Row Seat Back Frame


### THIRD ROW SEAT BACK FRAME

#### REMOVAL

1. Remove the seat from the vehicle ([Refer to Body/Seats/SEAT/Removal and Installation](#))(Refer To List 1).

#### NOTE

Power seat must remain in the upright / locked position while servicing the seat.

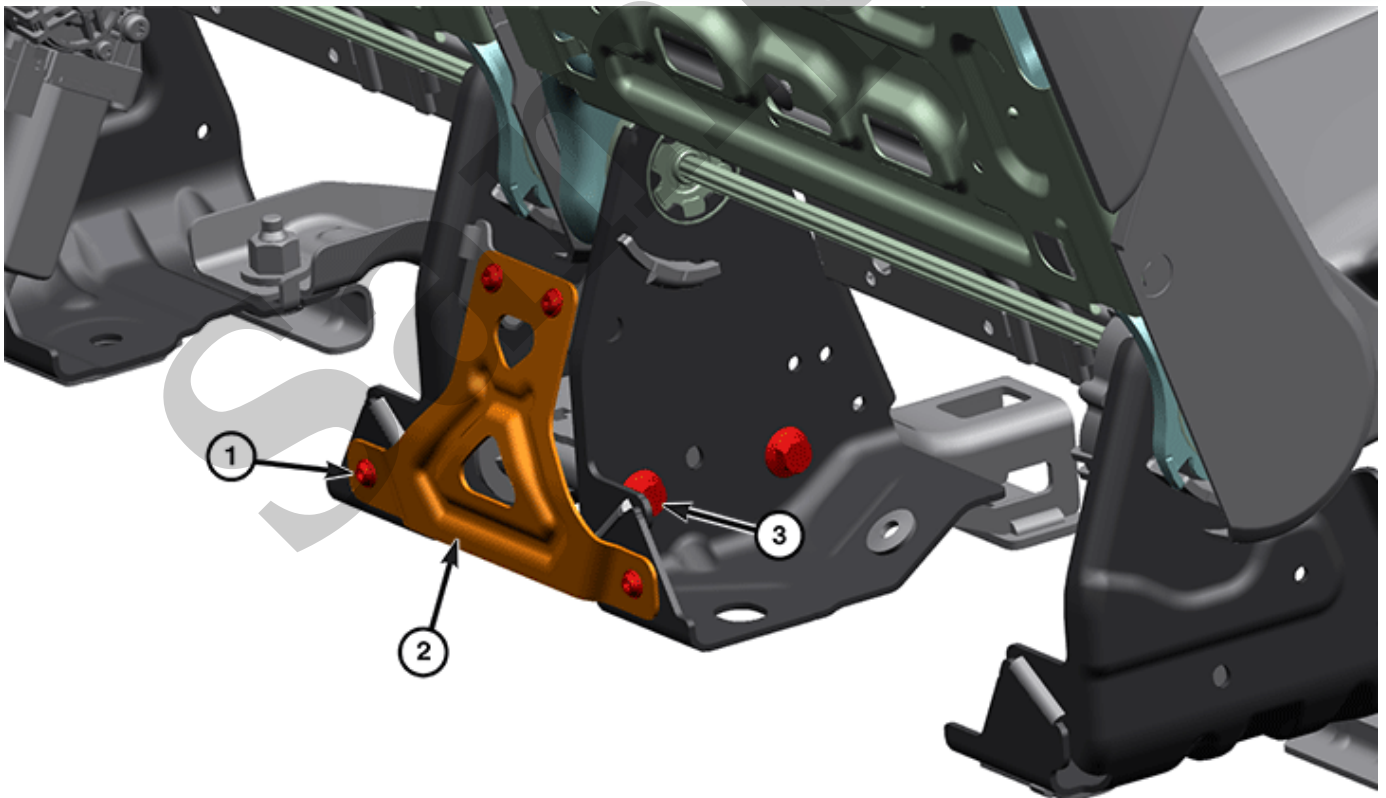

2319201538

1 - Marriage Bracket Bolts



- [23 - Body / Seats, Second Row / SIDE SHIELDS / Removal and Installation](#)
- [23 - Body / Seats, Third Row / SIDE SHIELDS / Removal and Installation](#)

Sample

- [23 - Body / Seats, Second Row / SEAT, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / SEAT, Third Row / Removal and Installation](#)

#### List 2

- [23 - Body / Seats, Front / COVER, Seat Back, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / COVER, Seat Back, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / COVER, Seat Back, Third Row / Removal and Installation](#)

#### List 3

- [23 - Body / Seats, Front / COVER, Seat Cushion, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / COVER, Seat Cushion, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / COVER, Seat Cushion, Third Row / Removal and Installation](#)

#### List 4

- [23 - Body / Seats, Front / SIDE SHIELDS, Seat Cushion, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / SIDE SHIELDS / Removal and Installation](#)
- [23 - Body / Seats, Third Row / SIDE SHIELDS / Removal and Installation](#)