


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1998 FORD Mondeo Sedan OEM Service and Repair Workshop Manual

[Go to manual page](#)

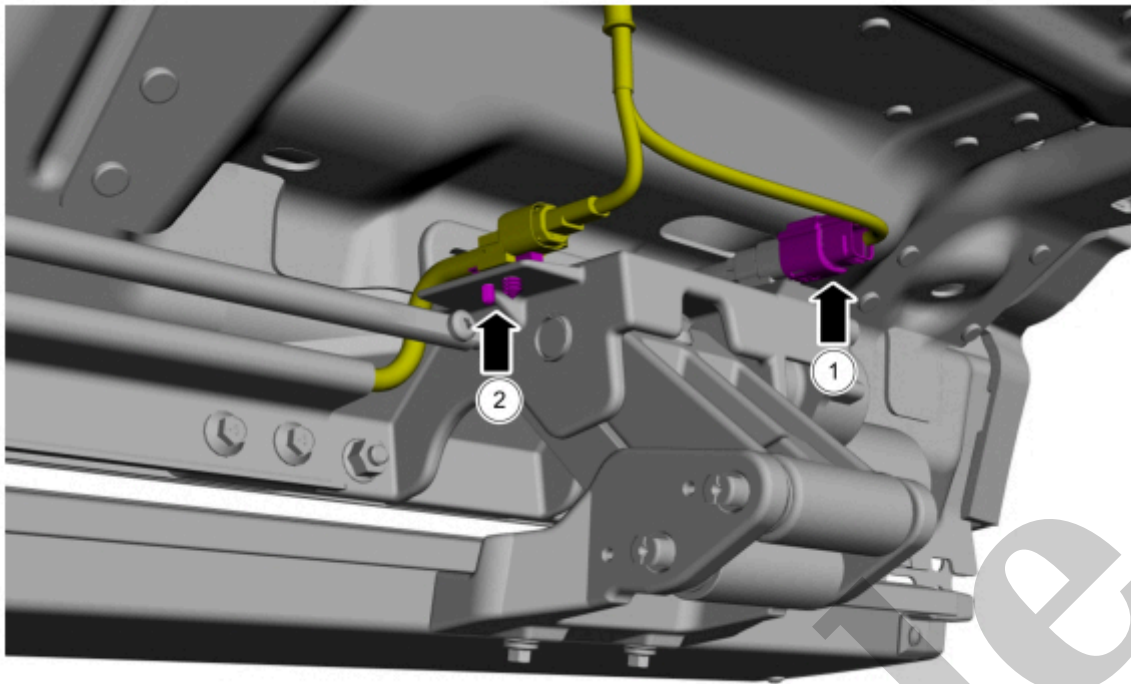

E337701

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. NOTE


Support the running board with a jackstand.

Remove the bolts.

Torque : 97 lb.in (11 Nm)

5. Remove the nuts and remove the motor and bracket assembly.

Torque : 16 lb.ft (22 Nm)

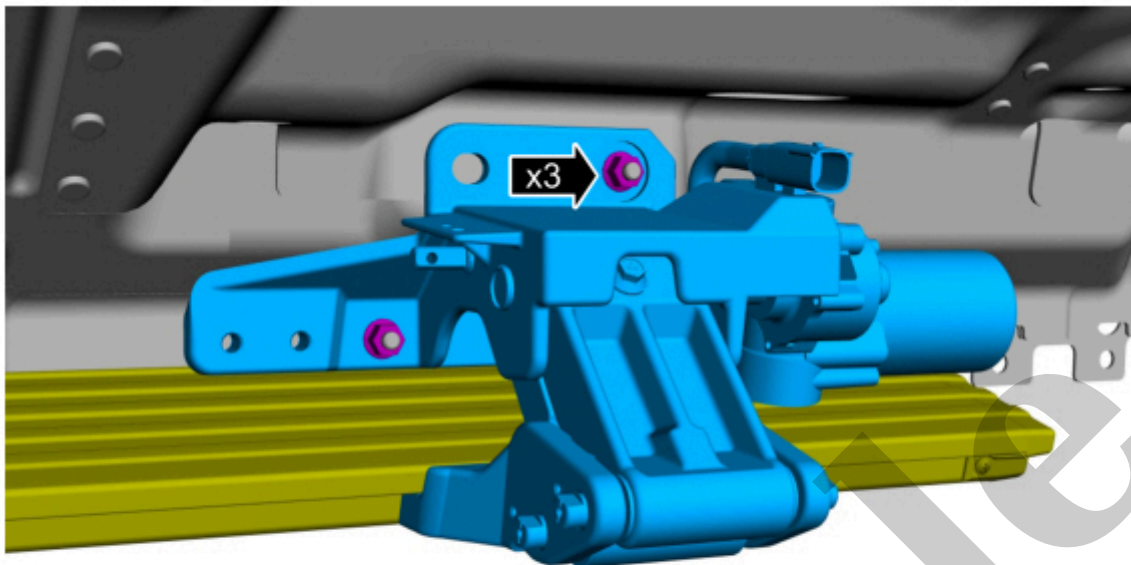


E337704

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

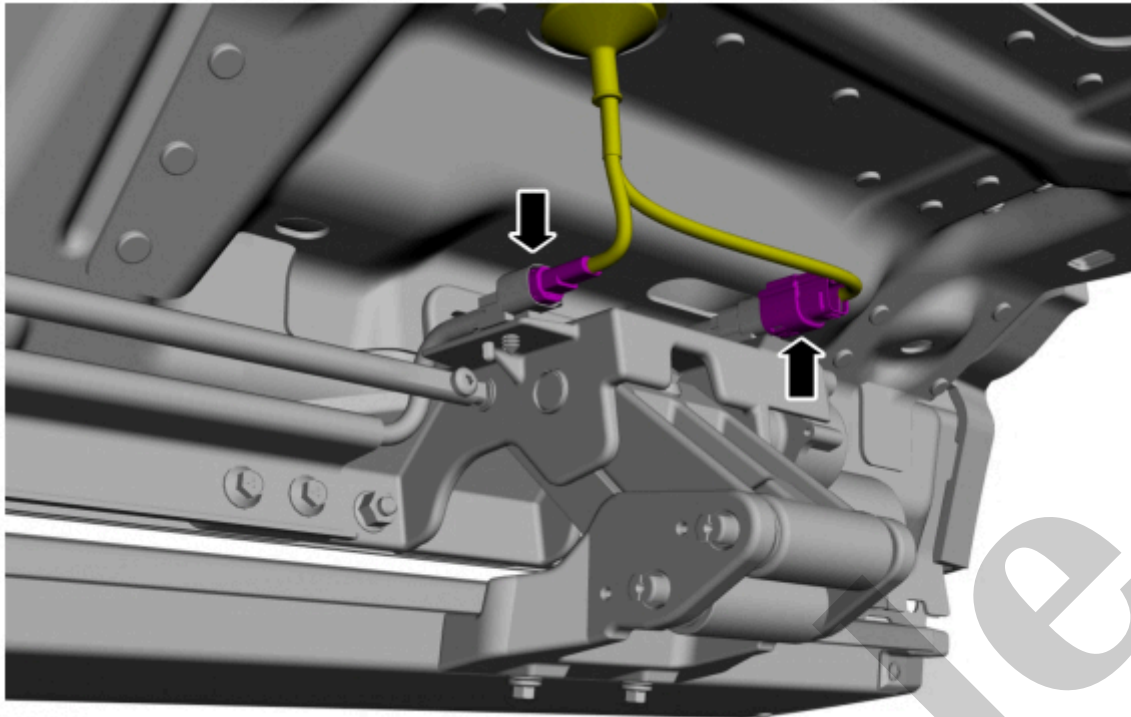

E337681


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. NOTE

This step requires the aid of another technician.

Remove the nuts from the attachment brackets and remove the power running board assembly.

Torque : 16 lb.ft (22 Nm)

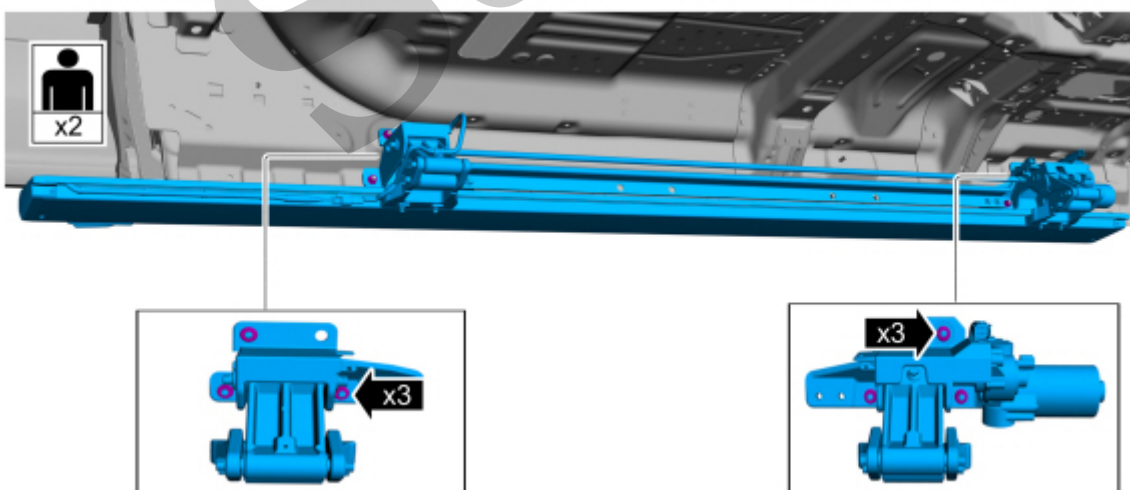

E337682

[Click here to learn about symbols, color coding, and icons used in this manual.](#)



Radiator Grille - Electric

<i>501-08 Exterior Trim and Ornamentation</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 04/22/2022</i>


Radiator Grille - Electric


Removal

NOTE

Removal steps in this procedure may contain installation details.

- 1. Open the power hood.

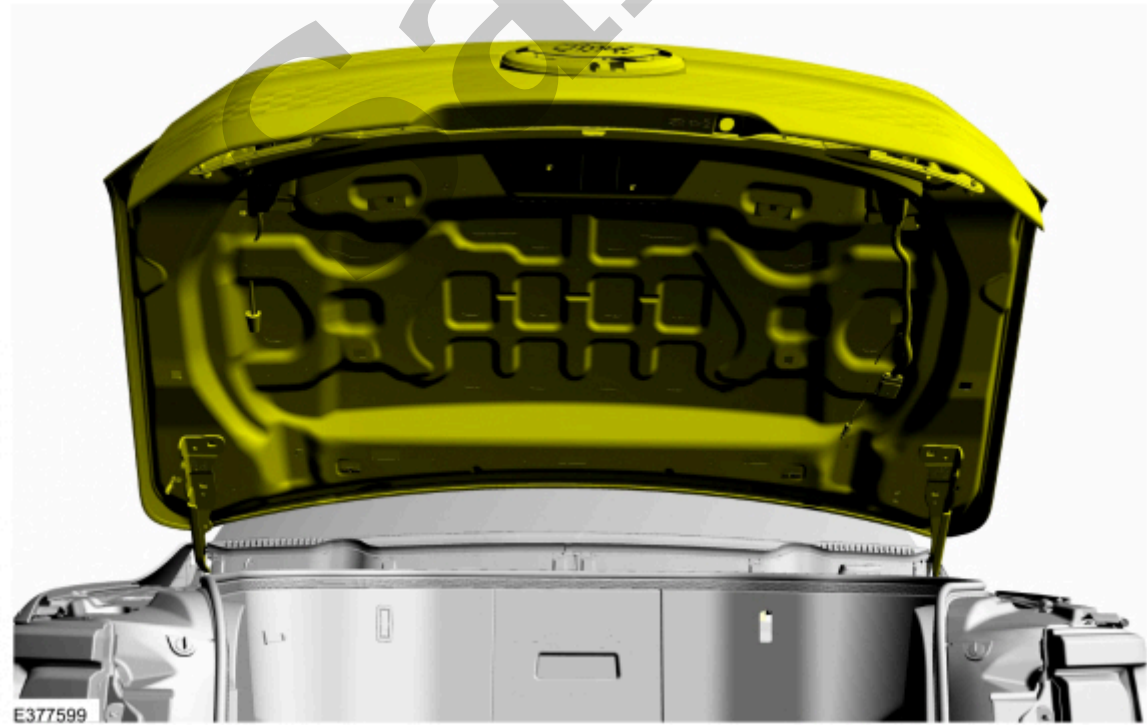


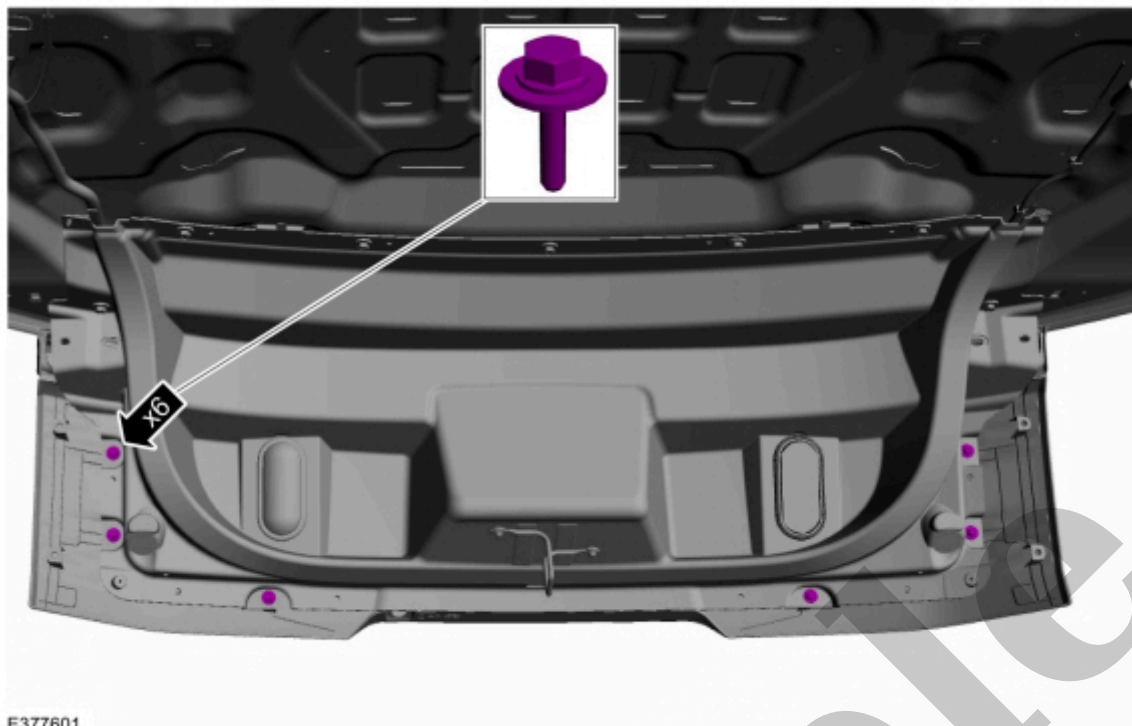

E377601

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


4. Pull forward on center of the grille to disengage the clips.

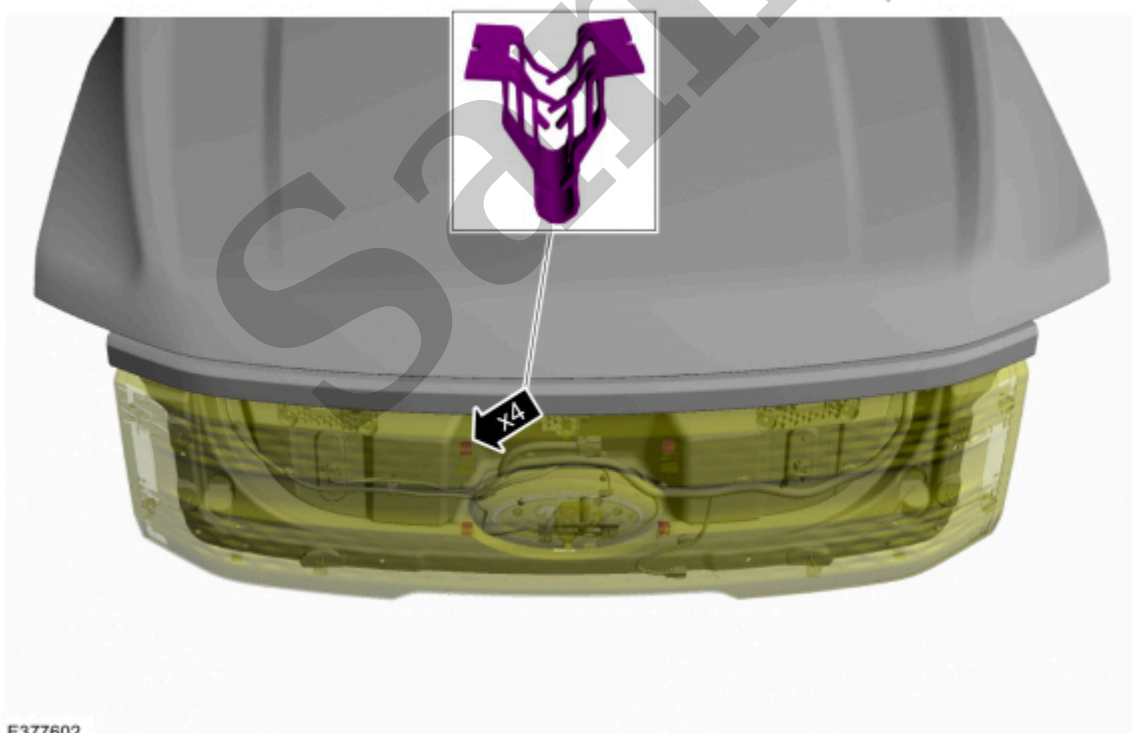

E377602

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


5. Remove the radiator grille.

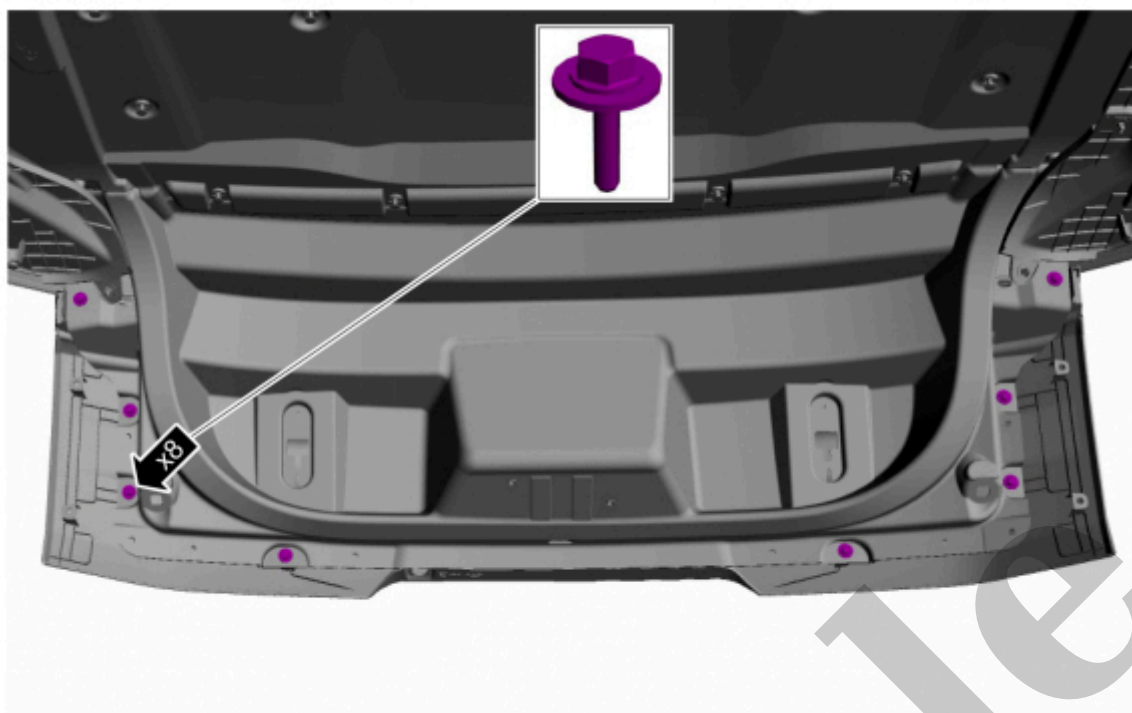

E377855


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. Pull forward on center of the grille to disengage the radiator grille clips. Disconnect the hood switch electrical connector.

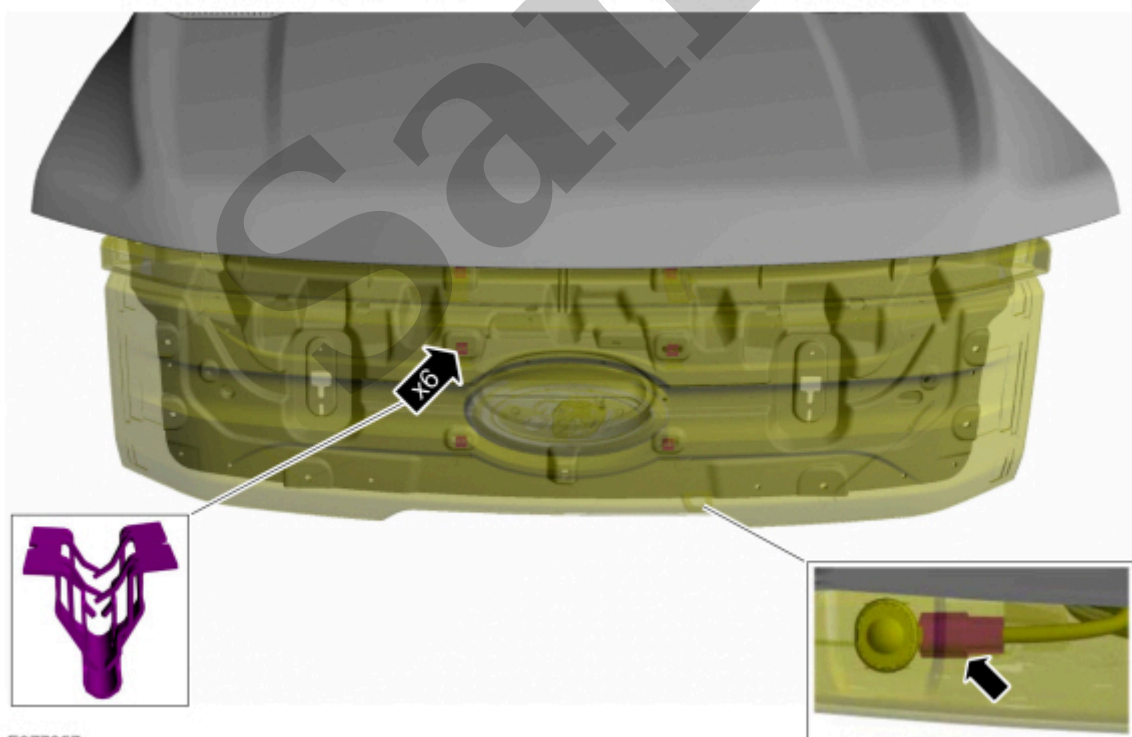

E377857

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

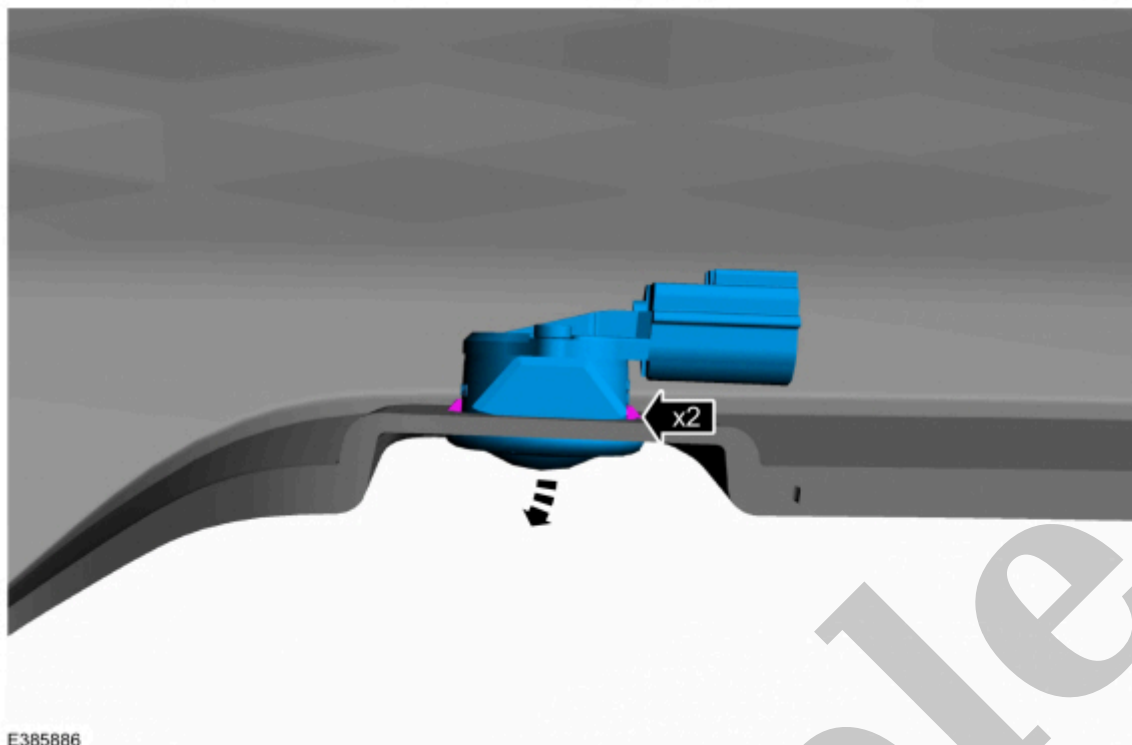


E385886

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


10. If required.

Remove the retainers and power hood insulation.

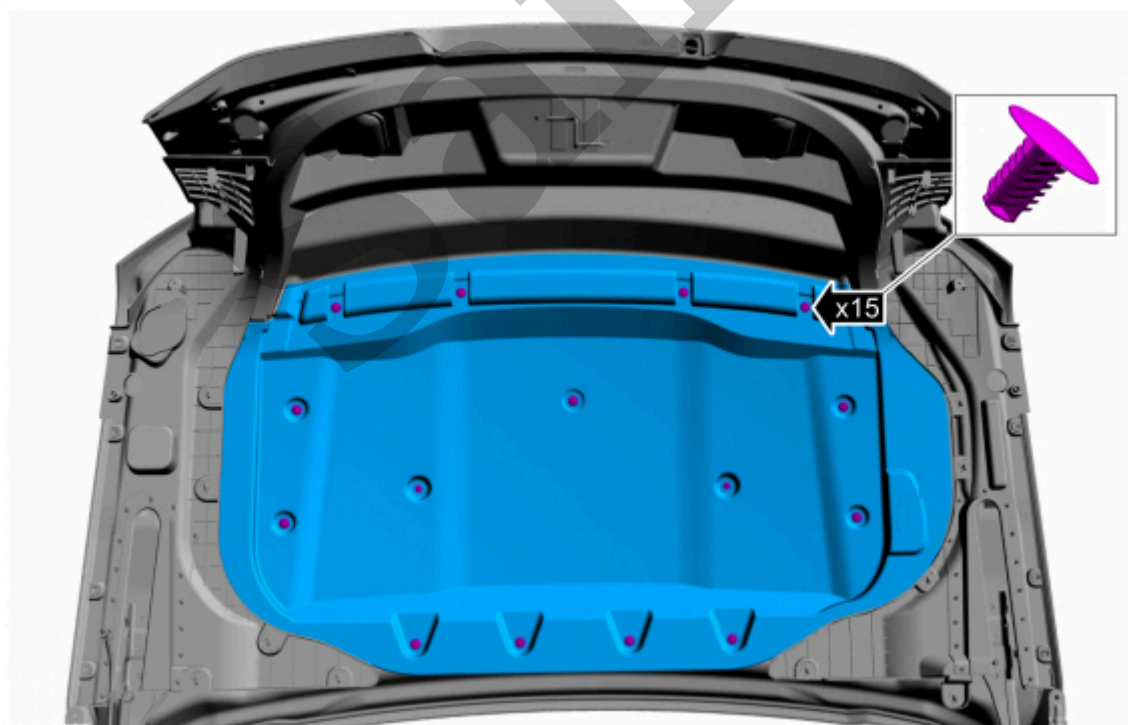

E379974

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

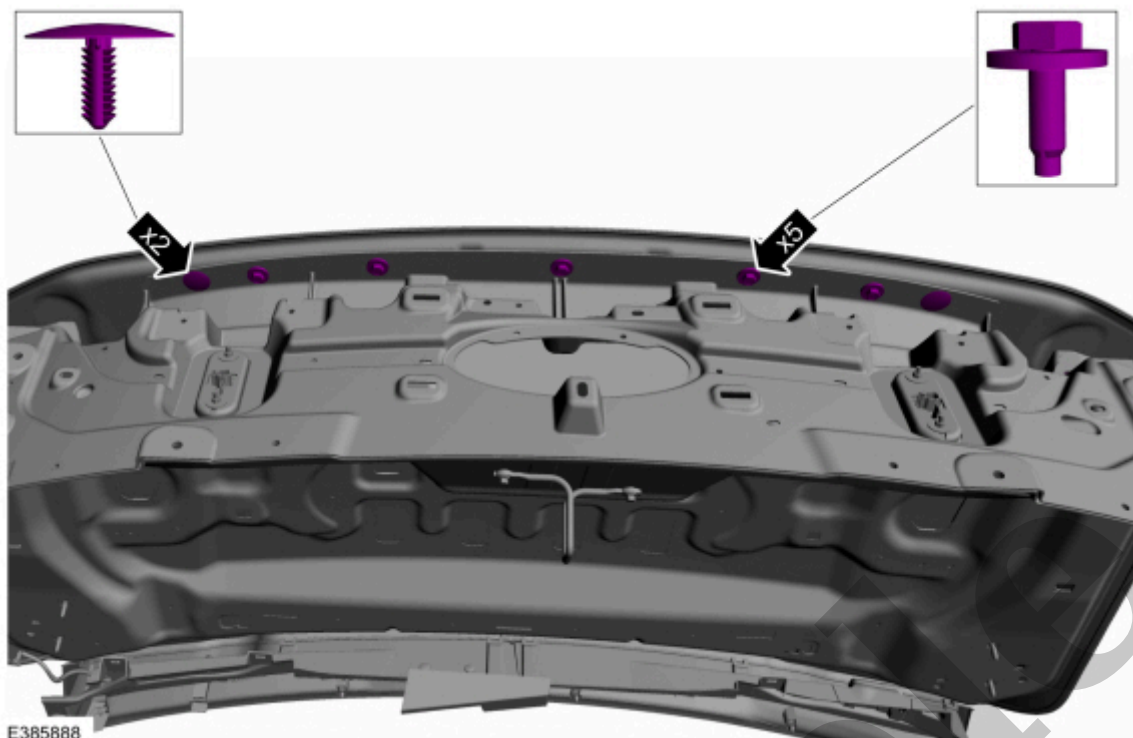


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

14. If required.

Remove the bolts and the hood panel.

Torque : 17 lb.ft (23 Nm)

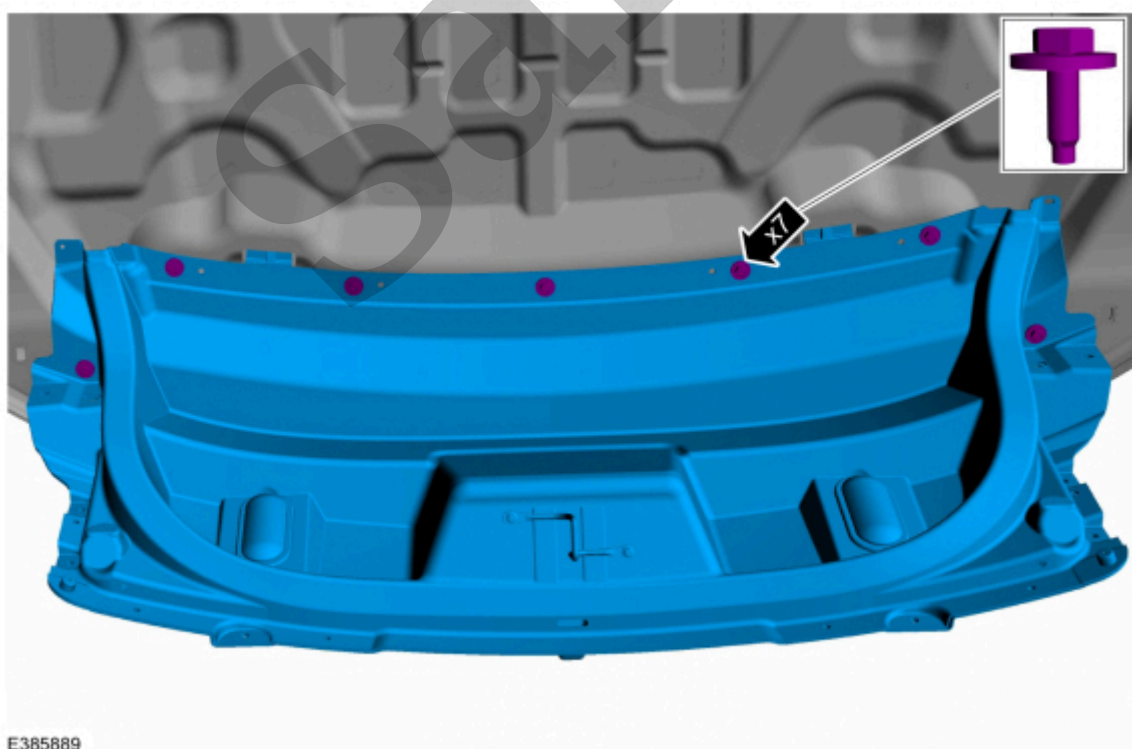

Refer to: [Front Parking Aid Camera](#)(413-13B Parking Aid - Vehicles With: Parking Aid Camera, Removal and Installation).

Copyright © Ford Motor Company

Sample