

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2008 FORD Mustang OEM Service and Repair Workshop Manual


[Go to manual page](#)

28. Remove the lower centerstack trim panel.

- Remove the bolts.

**Torque** : 22 lb.in (2.5 Nm)

- Release the clips.
- Disconnect the electrical connectors.

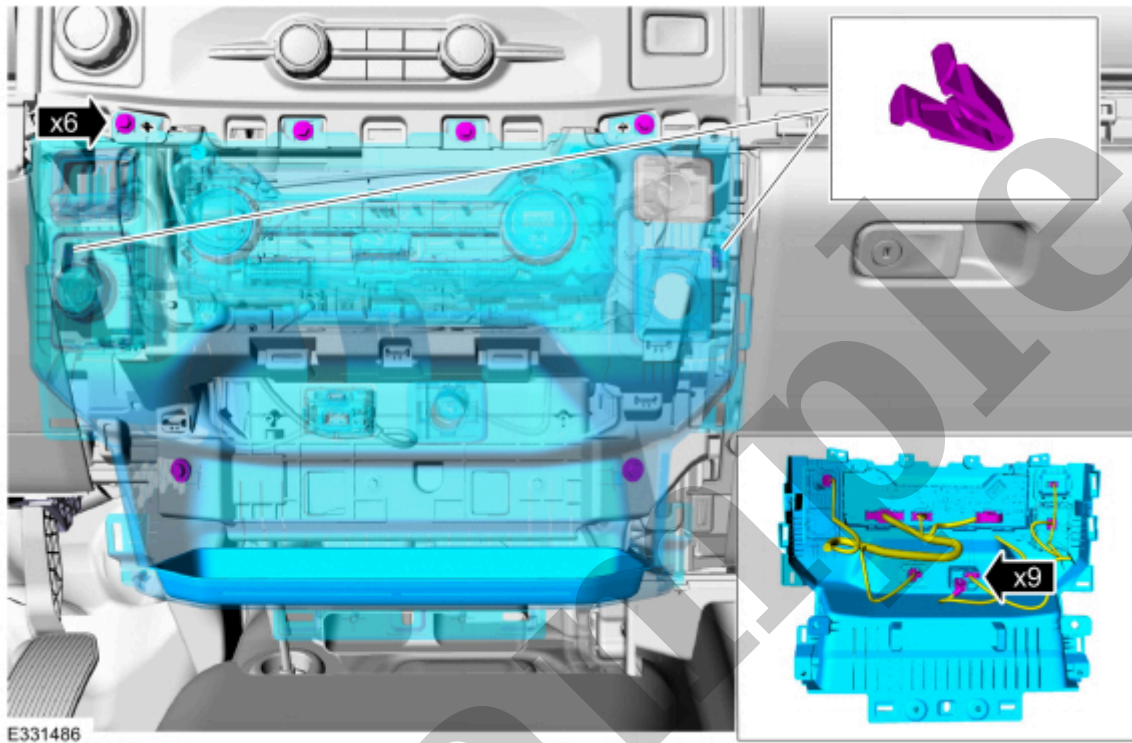

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

#### **Vehicles equipped with a 8 inch screen and an instrument panel center speaker**


29. Remove the instrument panel center speaker.

Refer to: [Instrument Panel Center Speaker - Vehicles With: 8 Inch Center Display Screen/12 Inch Center Display Screen](#)(415-00 Information and Entertainment System - General Information, Removal and Installation).

30. Remove the screws, release the clips and remove the instrument panel center speaker mounting plate.

32. Remove the screws, release the clips and remove the upper instrument panel tray.

Use the General Equipment: Interior Trim Remover

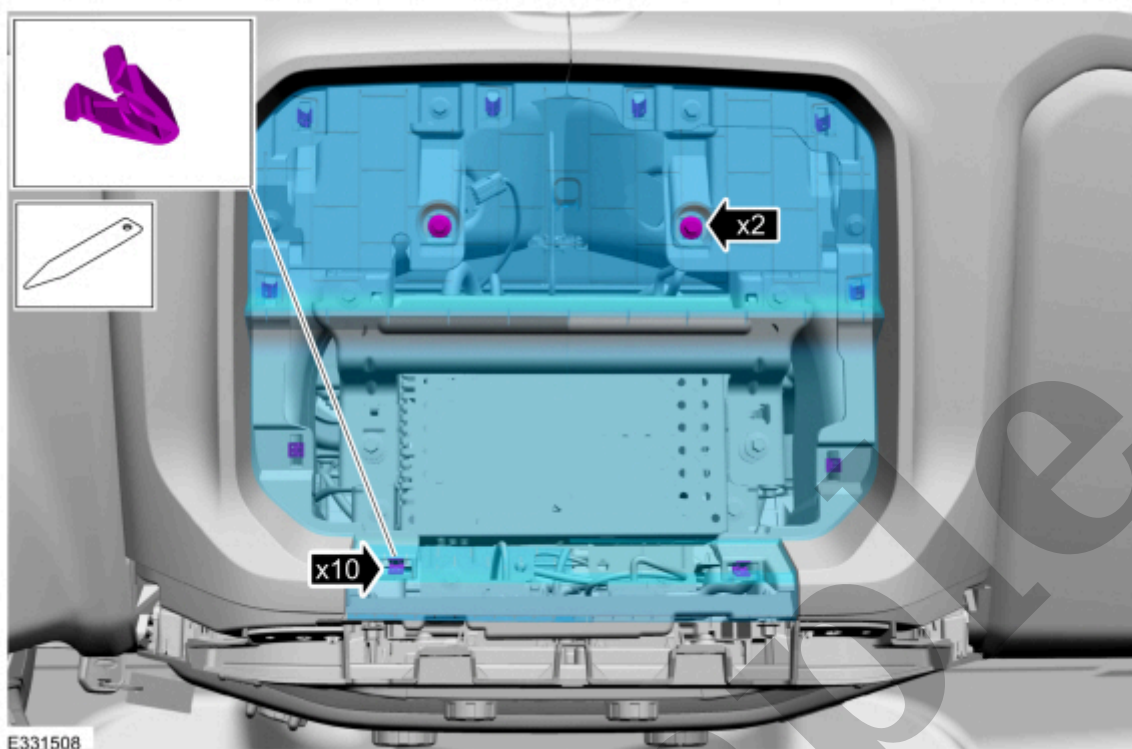


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

**Vehicles equipped with a 8 inch display**

33. Disconnect the electrical connectors.

35. Remove the bolts, disconnect the electrical connectors and remove the centerstack trim panel.

**Torque** : 55 lb.in (6.2 Nm)

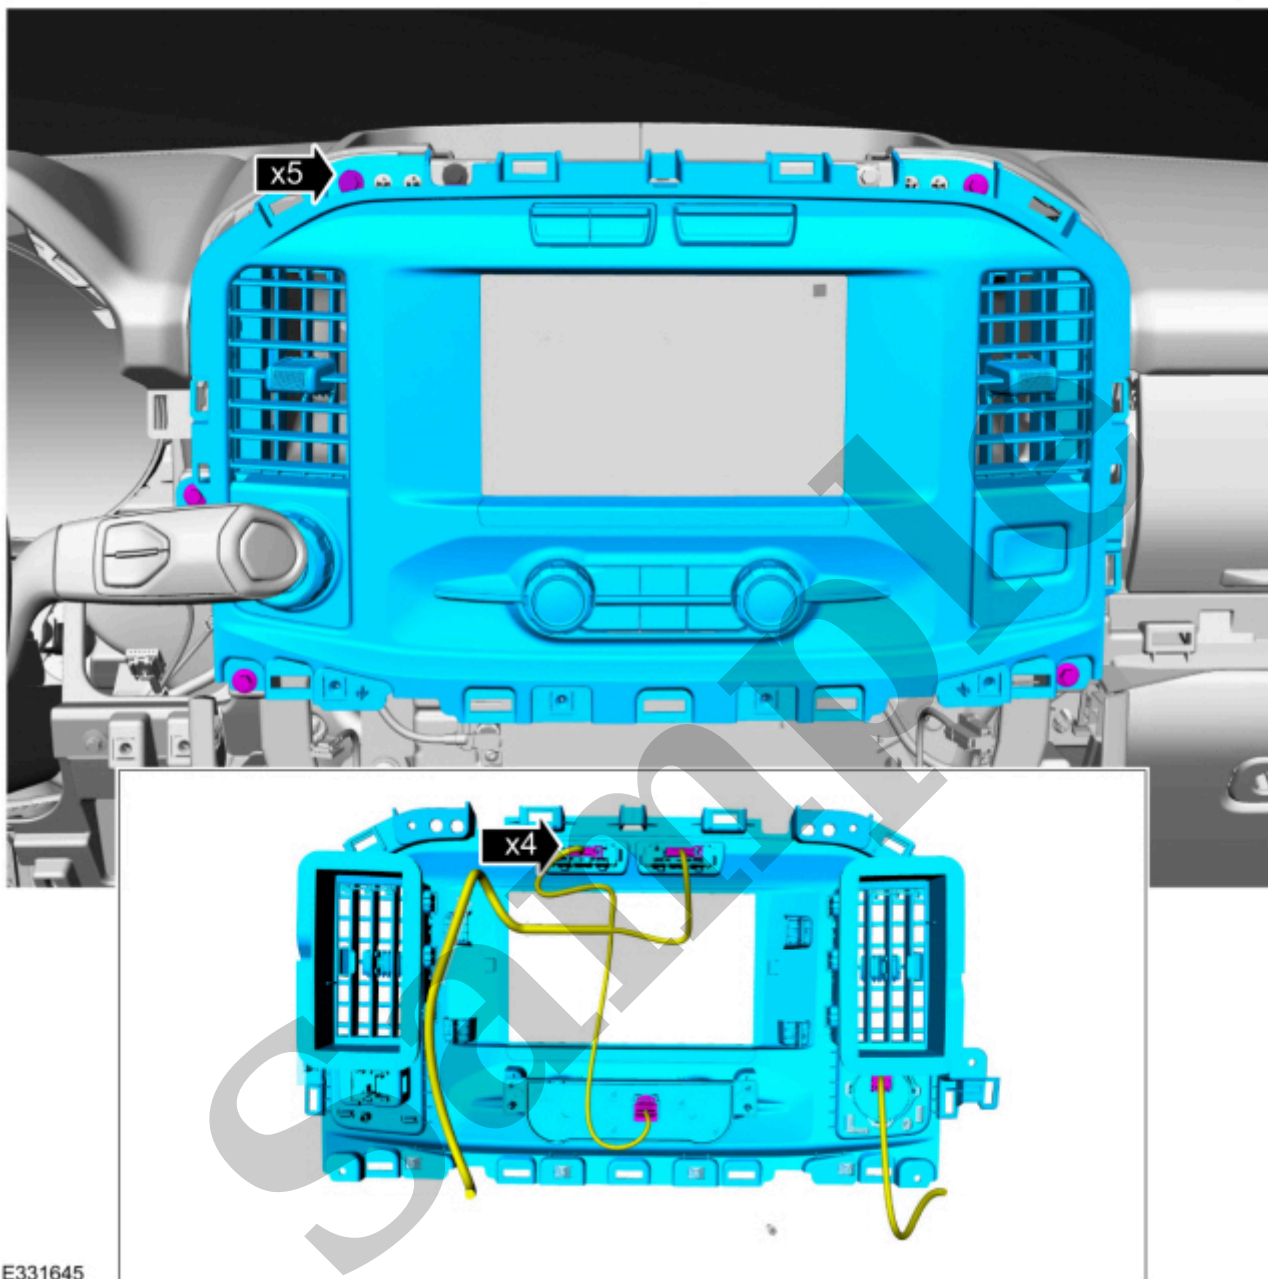

E331645

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

36. Remove the screws and the audio controls.

**Torque** : 19 lb.in (2.2 Nm)



## Audio Digital Signal Processing (DSP) Module

<b>415-00 Information and Entertainment System - General Information</b>	<b>2022 F-150</b>
<b>Removal and Installation</b>	<b>Procedure revision date: 09/18/2020</b>

### Audio Digital Signal Processing (DSP) Module

#### Removal

##### NOTE

Removal steps in this procedure may contain installation details.

##### 1. NOTE

If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.


Using a diagnostic scan tool, begin the PMI (programmable module installation) process for the DSP (audio digital signal processing module) following the on-screen instructions.

##### 2. NOTE

SuperCab equipped vehicles

##### NOTE

1. Raise the seat cushion.
2. Release the backrest latch.
3. Lower the backrest down.

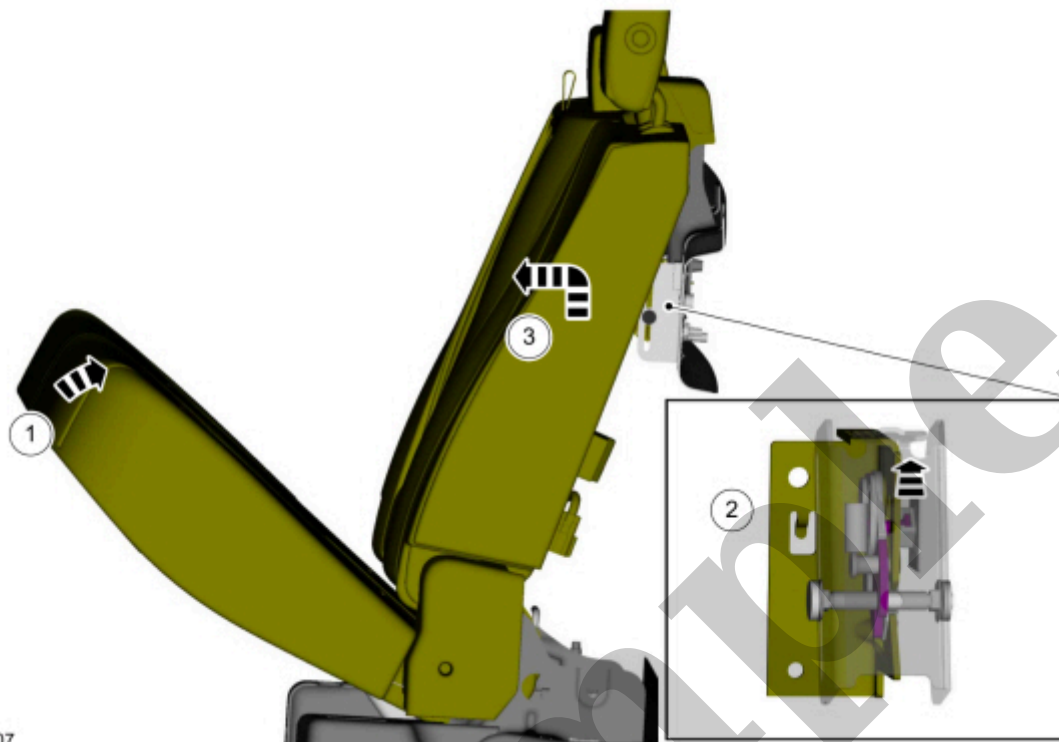

E195107

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

#### 4. **NOTE**

Eight speaker system DSP (audio digital signal processing module) is shown, 18 speaker system DSP (audio digital signal processing module) is similar.

Remove the 4 screws and the DSP (audio digital signal processing module) .

- Disconnect the electrical connectors.

## Audio Front Control Module (ACM) - Vehicles With: 15.5 Inch Center Display Screen

<b>415-00 Information and Entertainment System - General Information</b>	<b>2022 F-150</b>
<b>Removal and Installation</b>	<b>Procedure revision date: 06/24/2022</b>

### Audio Front Control Module (ACM) - Vehicles With: 15.5 Inch Center Display Screen

#### Removal

##### NOTE

Removal steps in this procedure may contain installation details.

##### 1. NOTE

If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI (programmable module installation) process for the ACM (audio front control module) following the onscreen instructions.

2. Remove the information and entertainment display unit fastener cover.

1. Release the clips.


Use the General Equipment: Interior Trim Remover

2. If equipped.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. Release the clips, separate the trim pin, and remove the RH (right-hand) instrument panel trim panel.

Use the General Equipment: Interior Trim Remover

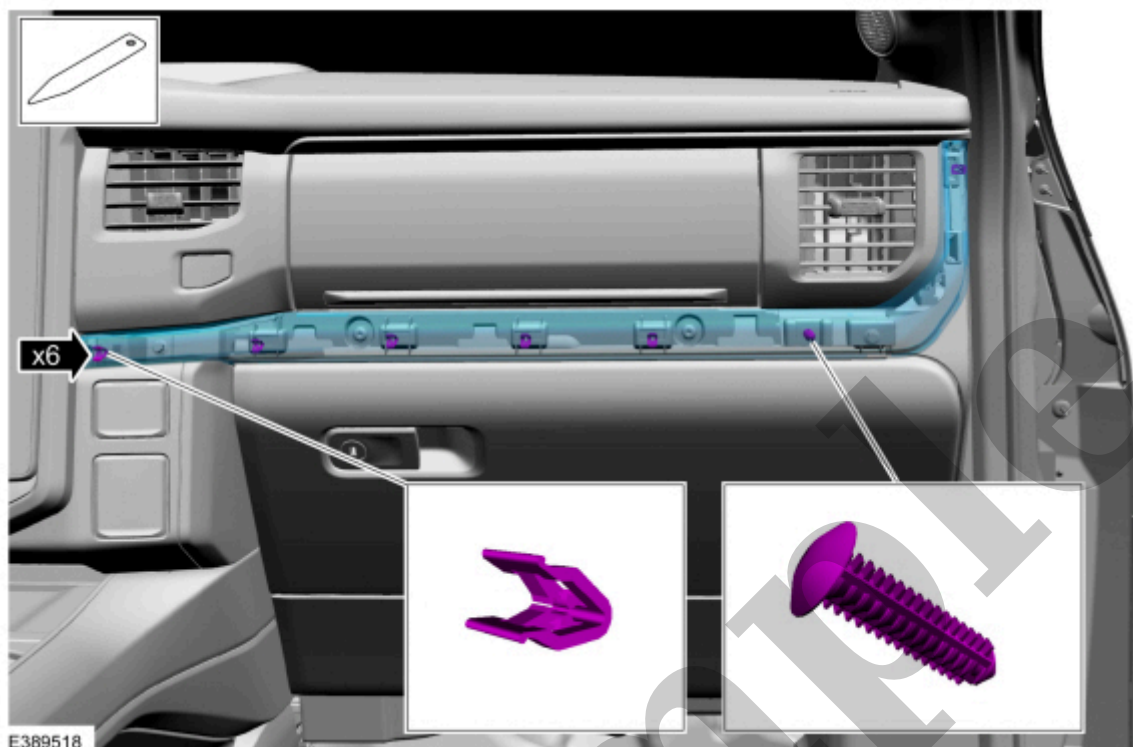

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. Release the clips, position the start/stop switch bezel, disconnect the electrical connector and remove the start/stop switch bezel.

Use the General Equipment: Interior Trim Remover



### Use the General Equipment: Interior Trim Remover



**Torque** : 22 lb.in (2.5 Nm)

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

## Installation

1. To install, reverse the removal procedure.

2. **NOTE**

This step is only necessary if replacing the component.

Using a diagnostic scan tool, complete the PMI (programmable module installation) process for the ACM (audio front control module) following the on-screen instructions.

Copyright © Ford Motor Company