

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


2014 VOLVO S60 Polestar OEM Service and Repair Workshop Manual

Go to manual page

NOTE: Removal steps in this procedure may contain installation details.


Remove the following items:

side door front. Refer to: FRONT DOORSide door rear. Refer to: SIDE DOOR REAR

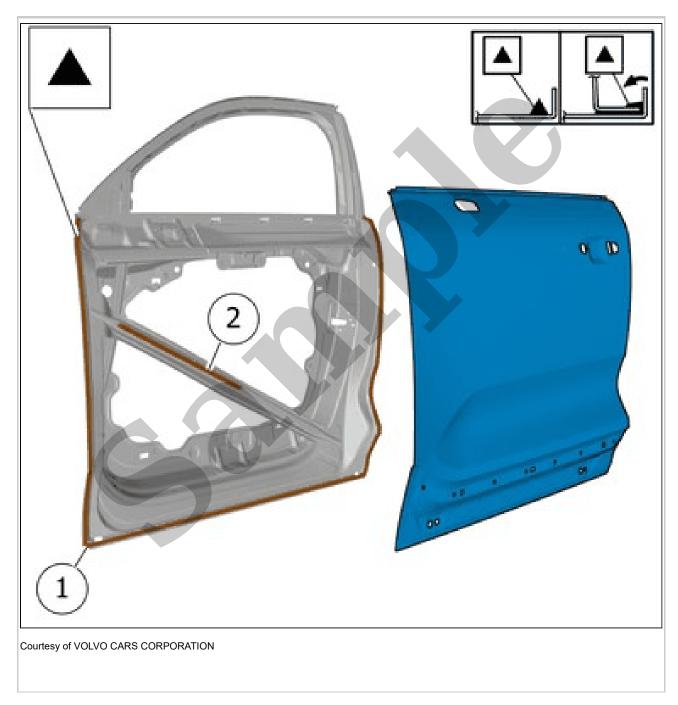

1. Use: Bodywork adhesive, 30764637

2. Use: Sealing compound, 1161767

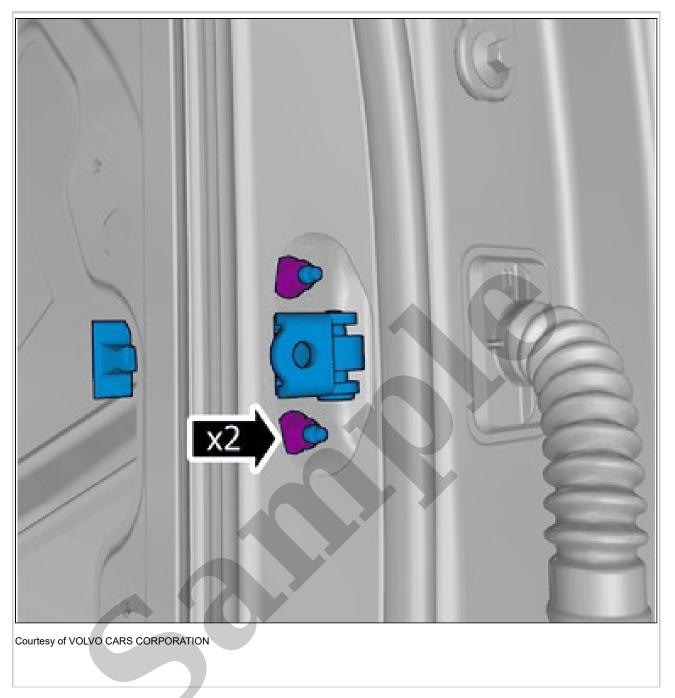

Remove the nuts.


Remove the marked part.

Torque: M6, 10Nm


DOOR STOP FRONT SIDE DOOR > DOOR STOP FRONT SIDE DOOR [2018-2022] > INSTALLATION

To install, reverse the removal procedure.

FRONT DOOR > FRONT DOOR [2018-2022] > REMOVAL

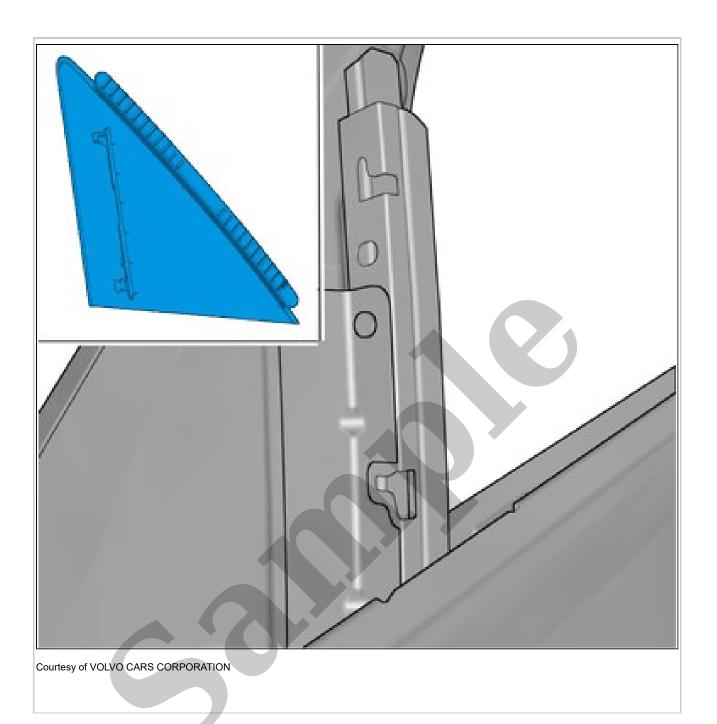

NOTE: The graphic shows the back of the component before removal.

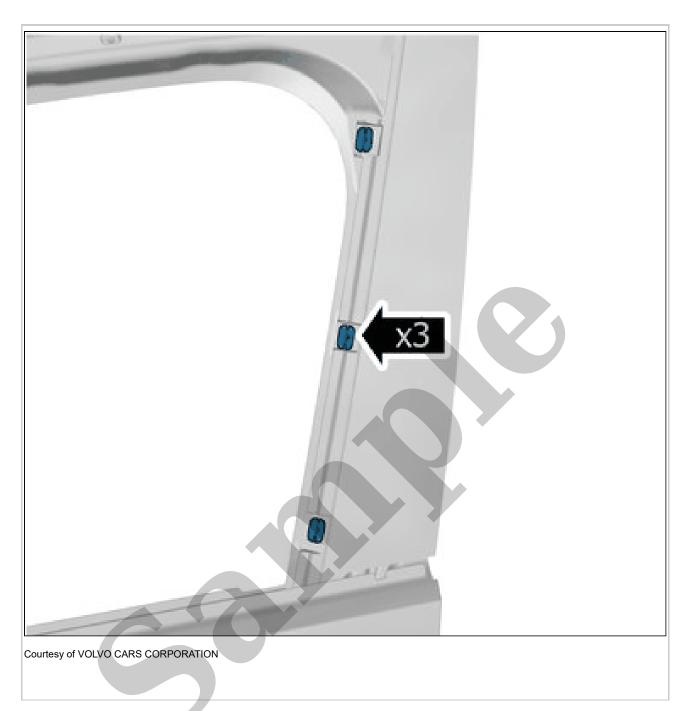


Remove the marked part. **Use:** Interior trim remover

NOTE: Removal steps in this procedure may contain installation details.

Remove the following items:

- Lift mechanism, rear door. Refer to: LIFT MECHANISM, REAR DOOR
- Window, rear door. Refer to: WINDOW, REAR DOOR
- lower trim strip, rear door. Refer to: LOWER TRIM STRIP, REAR DOOR
- Doorstop, door rear. Refer to: DOORSTOP, DOOR REAR
- side window, fixed, rear door. Refer to: REAR DOOR FIXED WINDOW GLASS

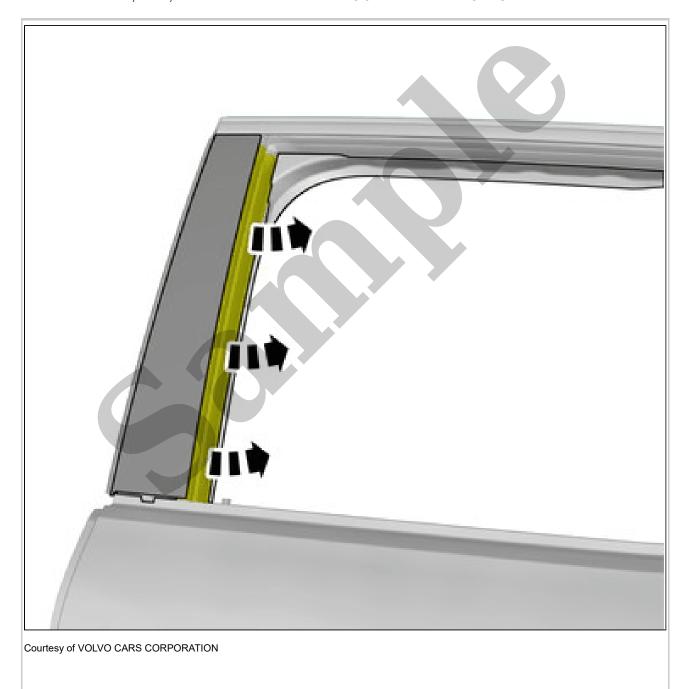

Fold marked part aside.



Remove the screws.
Remove the marked part. **Torque:** M8, 24Nm


SIDE DOOR REAR > SIDE DOOR REAR [2018-2022] > INSTALLATION

See information about components with double-sided adhesive tape. Refer to: COMPONENTS WITH DOUBLE-SIDED TAPE

See information about paint. Refer to: PAINT

See information about corrosion protection. Refer to: RUSTPROOFING

See information about door and lids. Refer to: DOORS AND LIDS

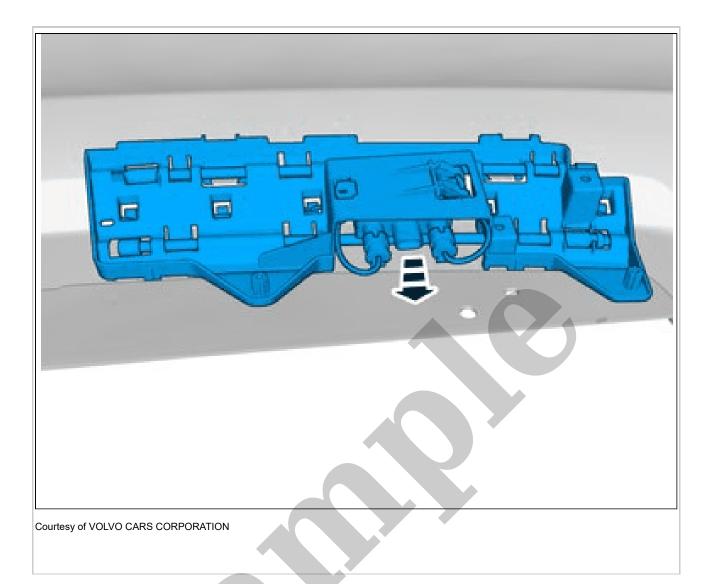


Remove the marked part.

FOOT MOVEMENT DETECTION MODULE > FOOT MOVEMENT DETECTION MODULE (FMDM) [2018-2022, B4204T18 | 2019-2022, B4204T47] > INSTALLATION


To install, reverse the removal procedure.

FOOT MOVEMENT DETECTION MODULE > FOOT MOVEMENT DETECTION MODULE (FMDM) [2021-2022, E400V6] > REMOVAL

Perform battery disconnecting and connecting. Refer to: BATTERY DISCONNECTING AND CONNECTING

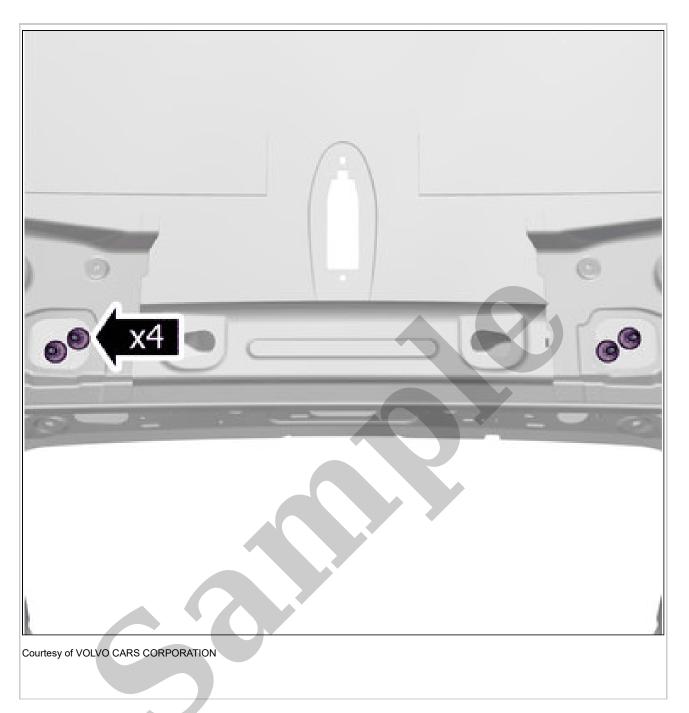

Remove the nuts. **Torque:** M8, 24Nm

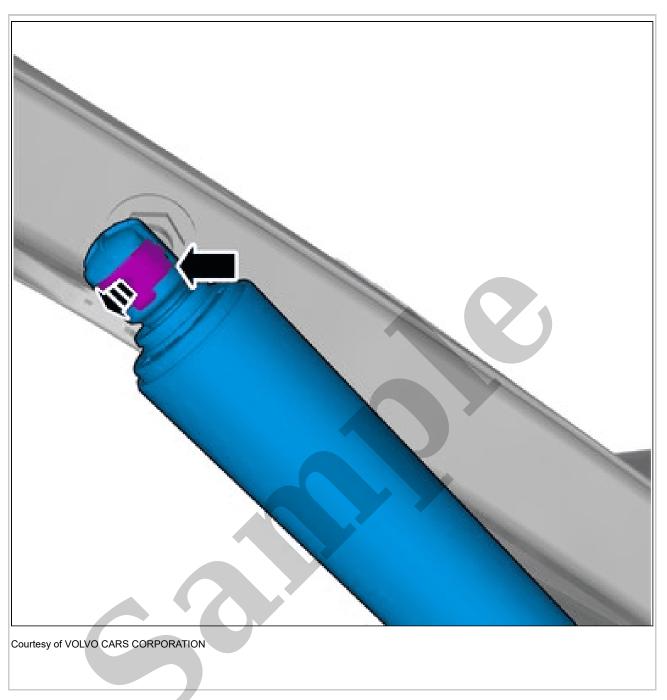

Loosen the clip.
Remove the marked part.

MOTOR, POWER OPERATED TAILGATE > MOTOR, POWER OPERATED TAILGATE [2018-2022] > INSTALLATION

To install, reverse the removal procedure.

POWER OPERATED TAILGATE MODULE > POWER OPERATED TAILGATE MODULE (POT) [2018-2022] > REMOVAL