


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


## 2016 VOLVO S60 OEM Service and Repair Workshop Manual

[Go to manual page](#)

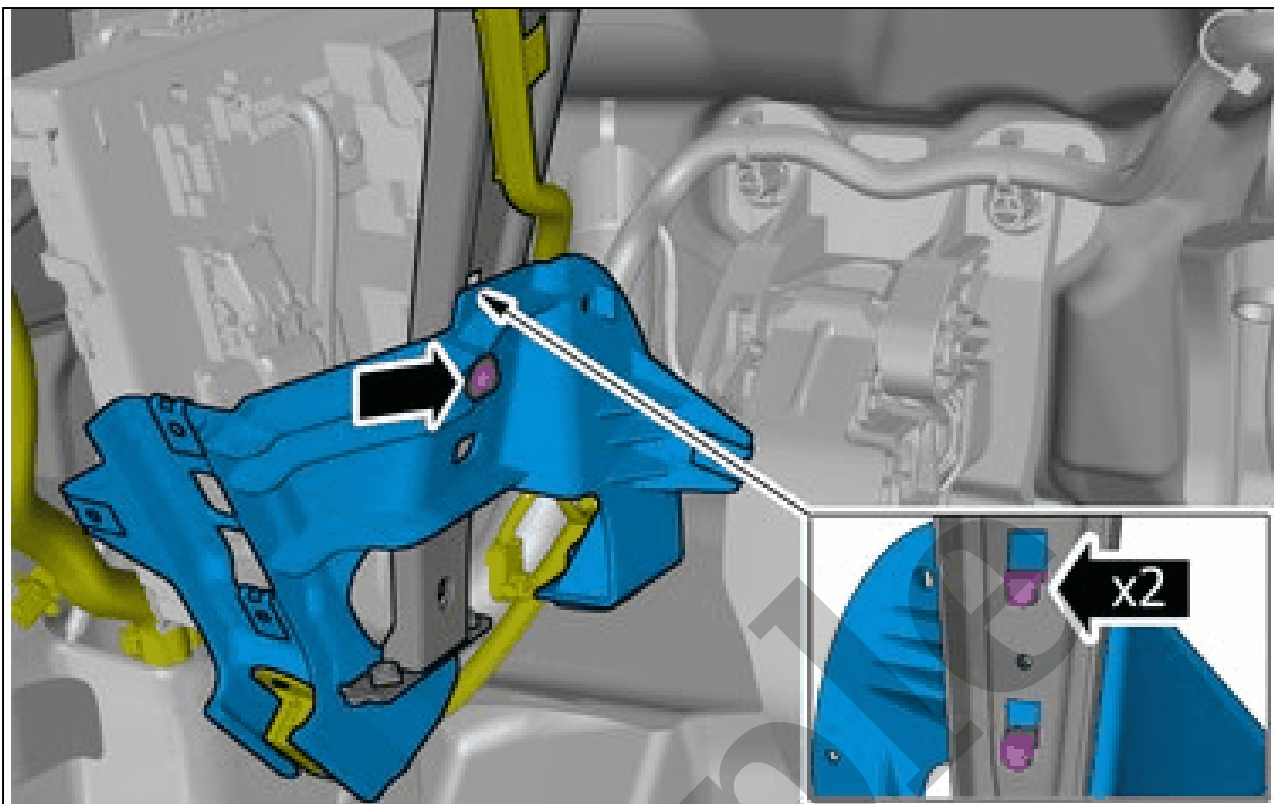

Courtesy of VOLVO CARS CORPORATION


Remove the screw.  
Release the catches.  
Remove the part carefully

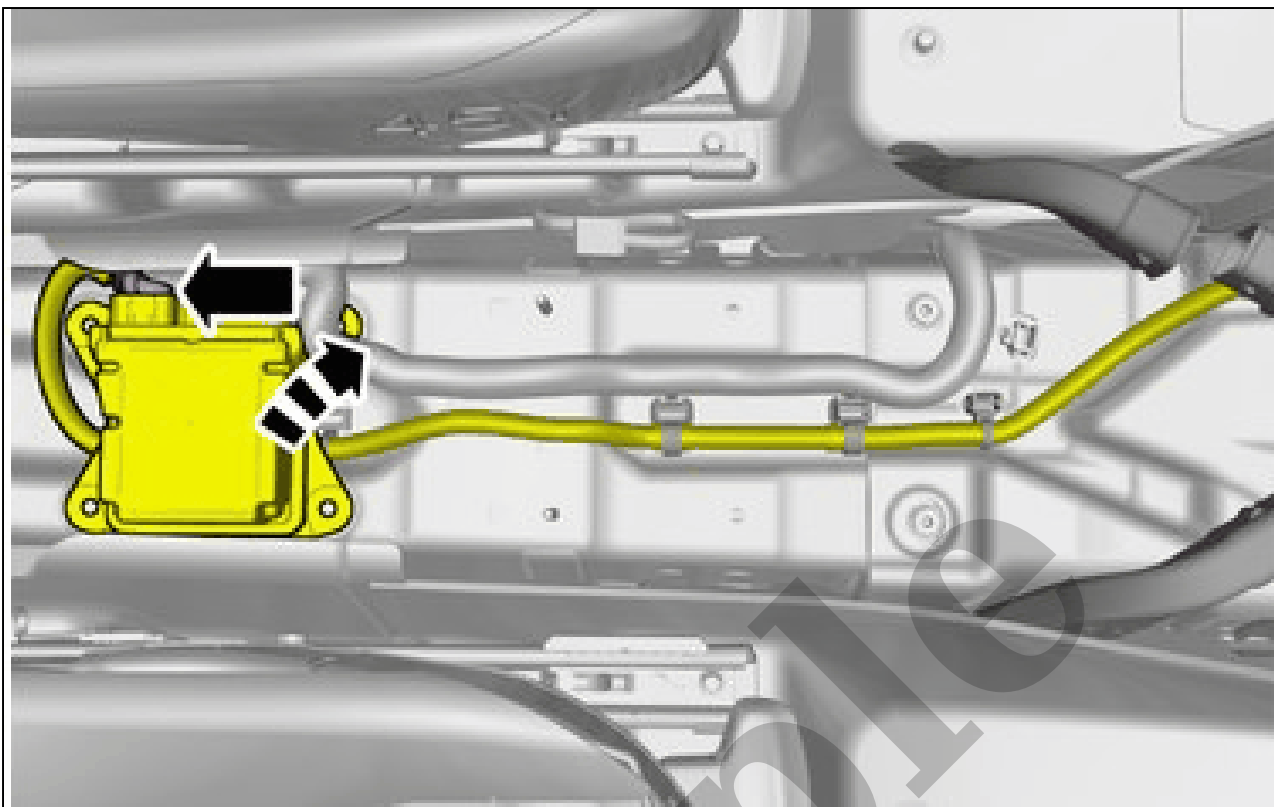

Courtesy of VOLVO CARS CORPORATION

**WARNING:** Take extra care when handling supplemental restraint system (SRS) components.


Disconnect the connector.  
Fold marked part aside.

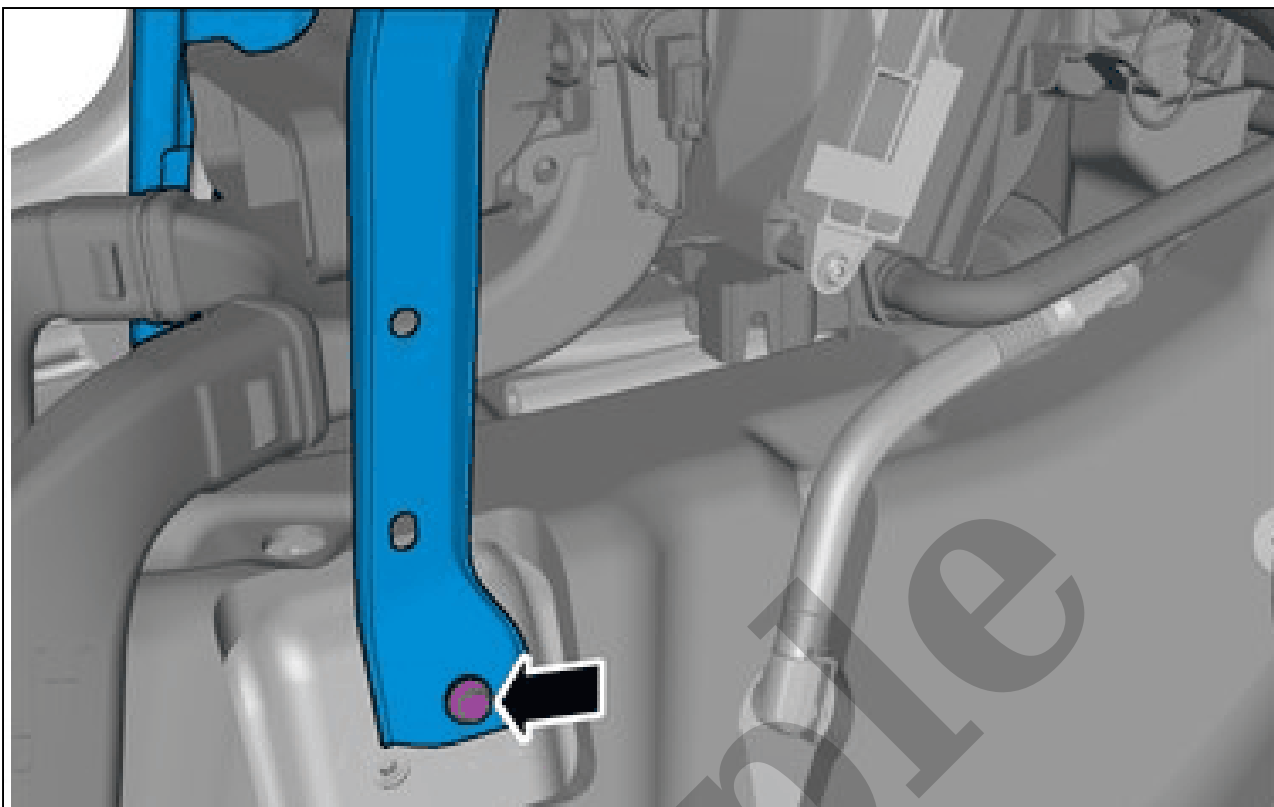

Courtesy of VOLVO CARS CORPORATION

Remove the screw.

**Torque:** Cross member, to Body, 10Nm

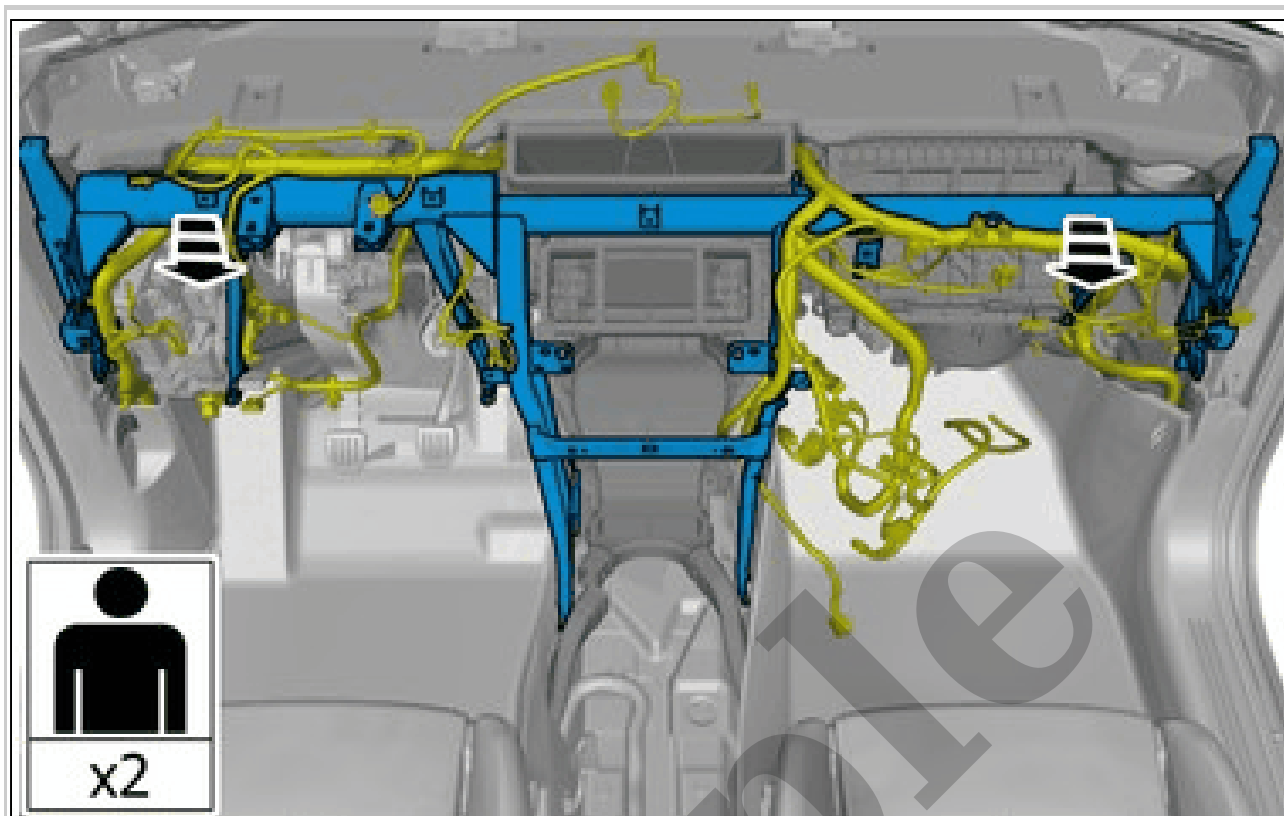


Courtesy of VOLVO CARS CORPORATION

**CAUTION:** Make sure that the wiring harness does not catch.


**NOTE:** This step requires the aid of another technician.

Remove the part carefully  
Remove the marked part.

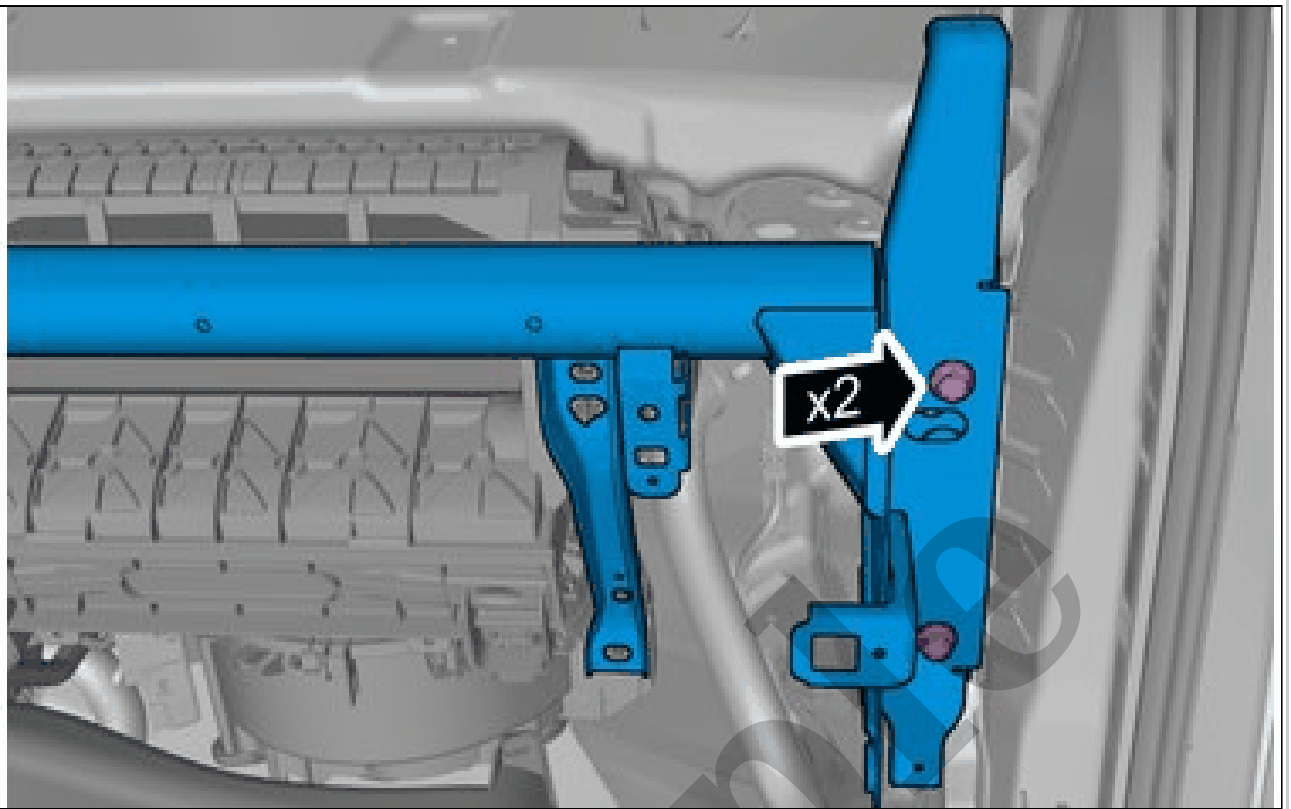

Courtesy of VOLVO CARS CORPORATION


Install the screws.  
**Torque:** M8, 24Nm

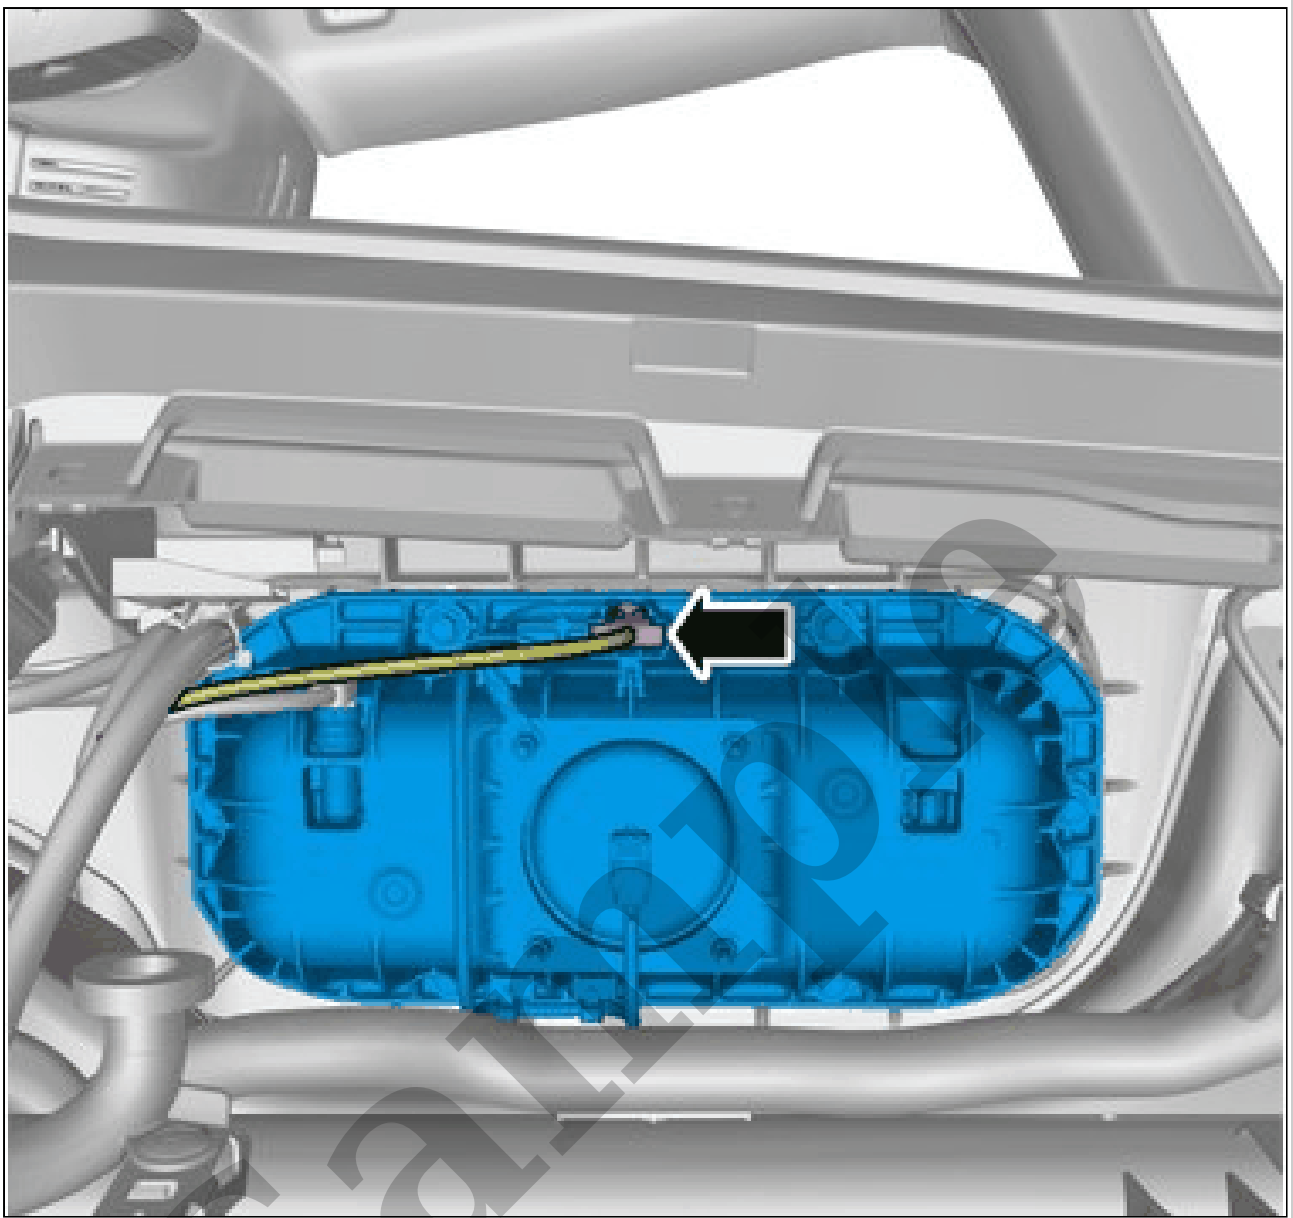

Courtesy of VOLVO CARS CORPORATION

**WARNING:** Take extra care when handling supplemental restraint system (SRS) components.

Disconnect the connector.

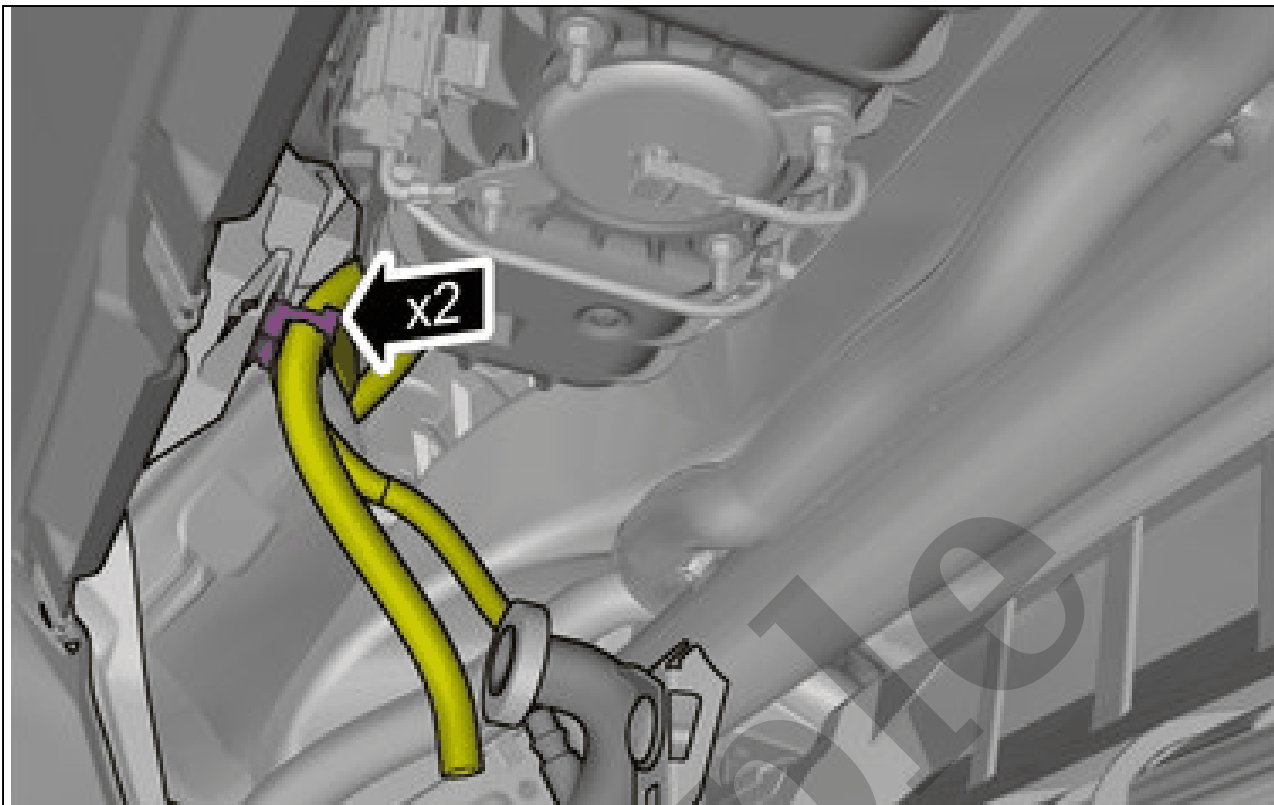


Courtesy of VOLVO CARS CORPORATION

Loosen the clip.

Remove the cable harness clips.


**VEHICLES WITH AIRBORNE PARTICULATE MATTER SENSOR APMS**



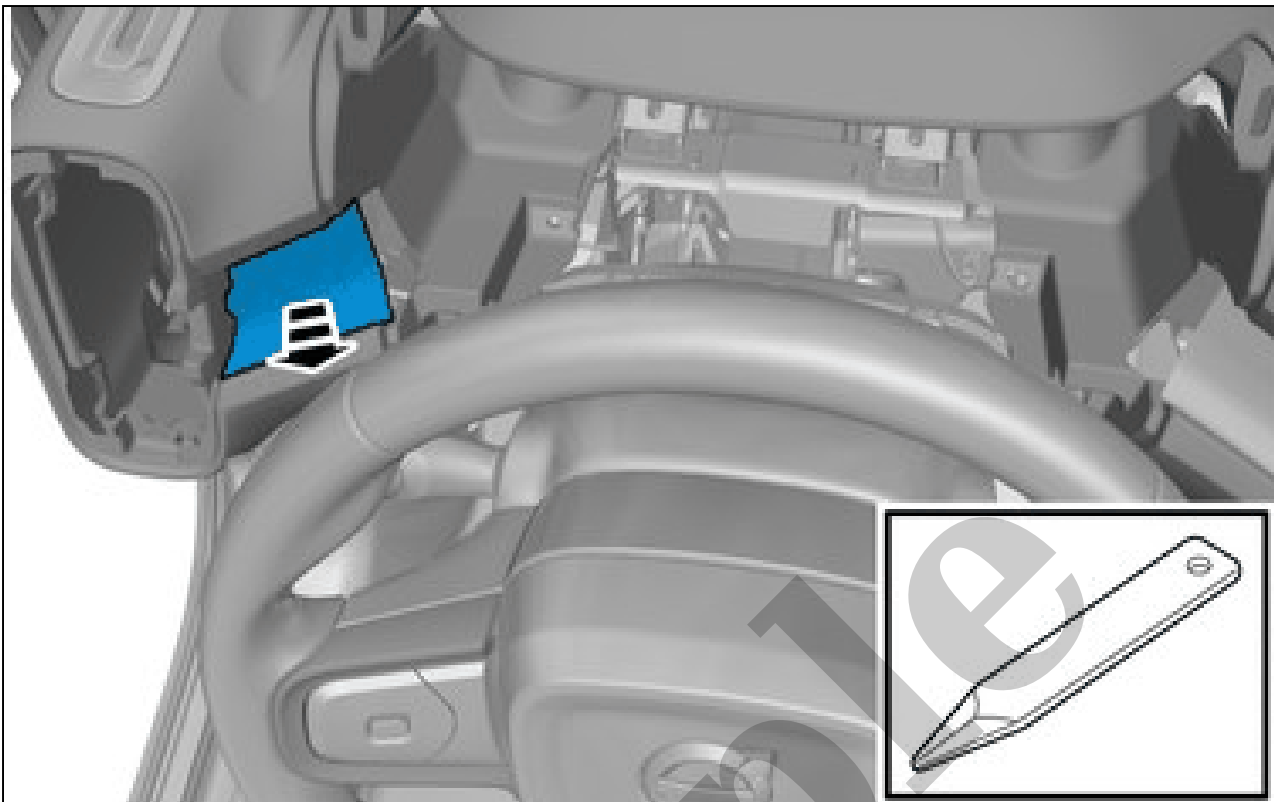

Courtesy of VOLVO CARS CORPORATION

**Use:** Interior trim remover  
Remove the part carefully  
Remove the marked part.

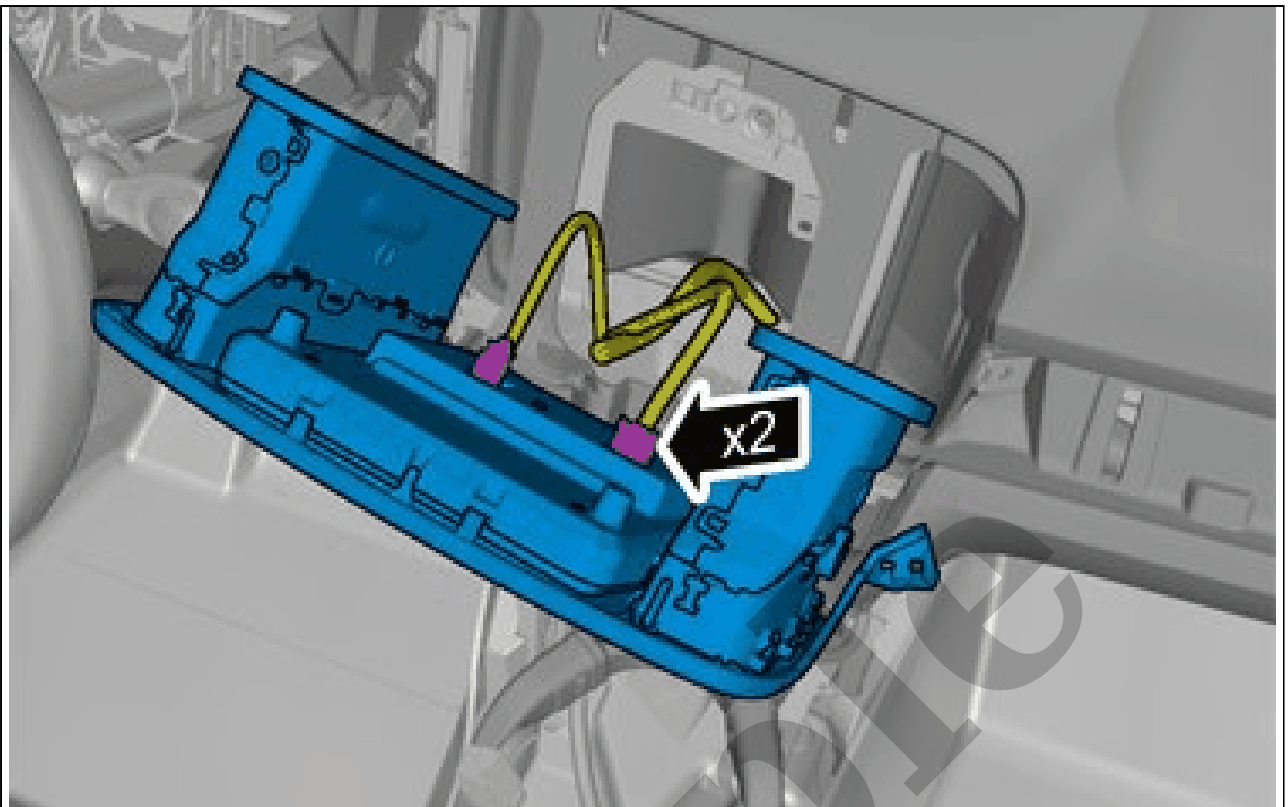

Courtesy of VOLVO CARS CORPORATION

Disconnect the connectors.  
Remove the marked part.

**NOTE:** *Note the position of the electrical connectors.*

**NOTE:** *Make sure that the wire positions are correct.*