


Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2018 Volvo S60 Manual - Service & Repair Guide


Go to manual page

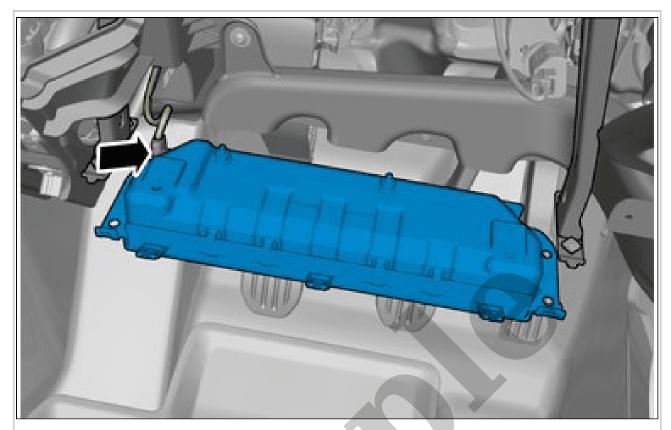


Disconnect the connector. Remove the marked part.

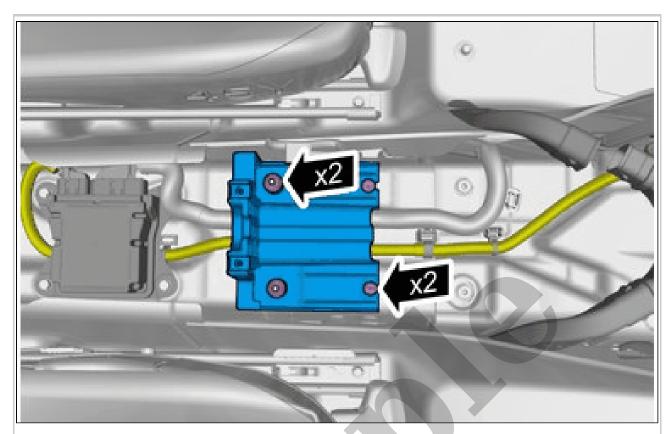

Remove the screws. Torque: M6, 10Nm Loosen the clips. Remove the marked part.

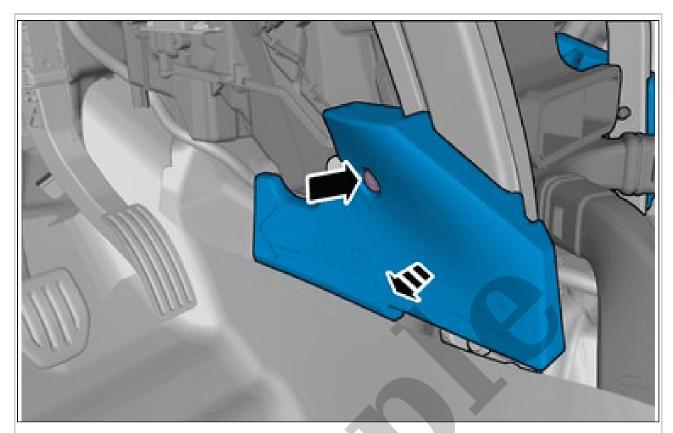


On both sides. Loosen the clips. Remove the marked part.

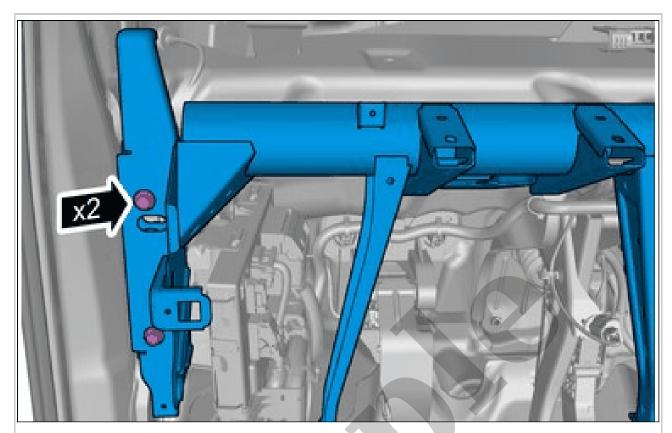

Courtesy of VOLVO CARS CORPORATION


Remove the screws. **Torque:** M8, 24Nm

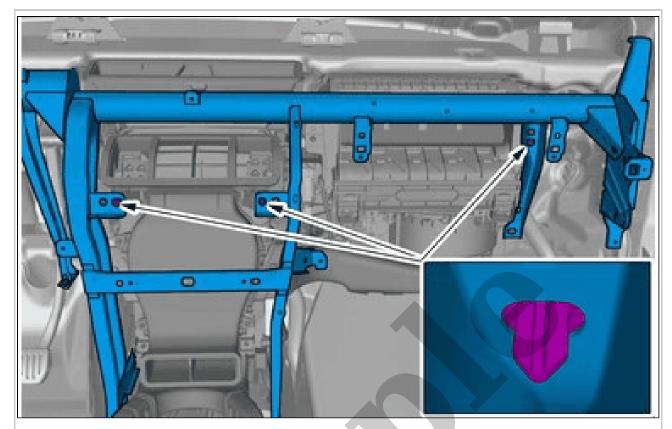


Courtesy of VOLVO CARS CORPORATION

CAUTION: Make sure that the component is positioned correctly.

CAUTION: Make sure that the component is correctly located on the locating dowels.

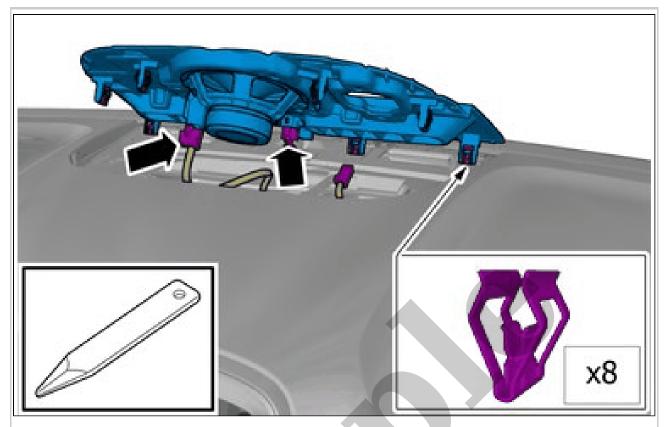

Remove the part carefully **Use:** Interior trim remover Disconnect the connectors. Remove the marked part.

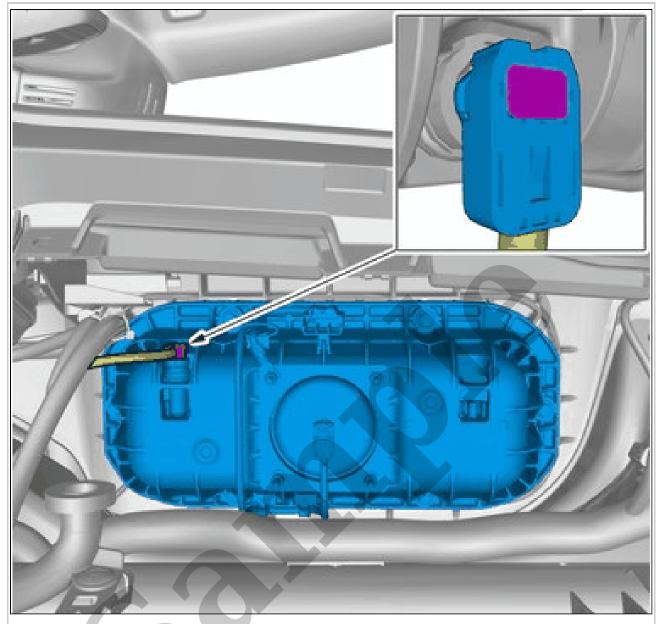


Courtesy of VOLVO CARS CORPORATION

NOTE: The number of connectors may vary depending on the vehicle's equipment level.

Disconnect the connector.

ALL VEHICLES

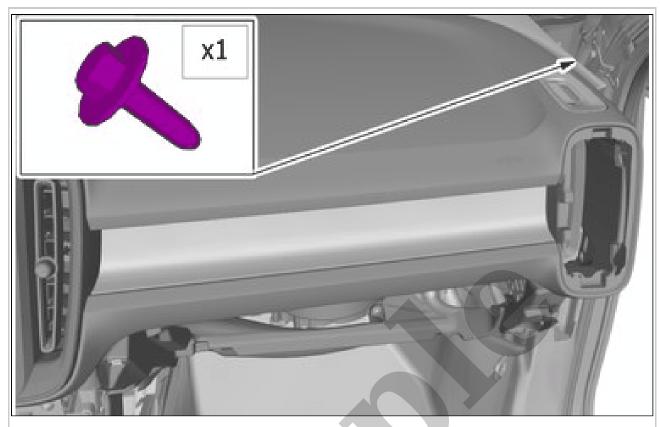


Remove the screw.

Torque: Dashboard, to crossmember, 3.5Nm

Remove the following items:

- left-hand side panel A-pillar. Refer to: A-PILLAR TRIM PANEL
- Driver side register. Refer to: VENT REGISTER, DRIVER SIDE
- Temperature sensor, air duct, dash board, left. Refer to: TEMPERATURE SENSOR, AIR DUCT, DASH BOARD, LEFT
- Start Button. Refer to: START BUTTON

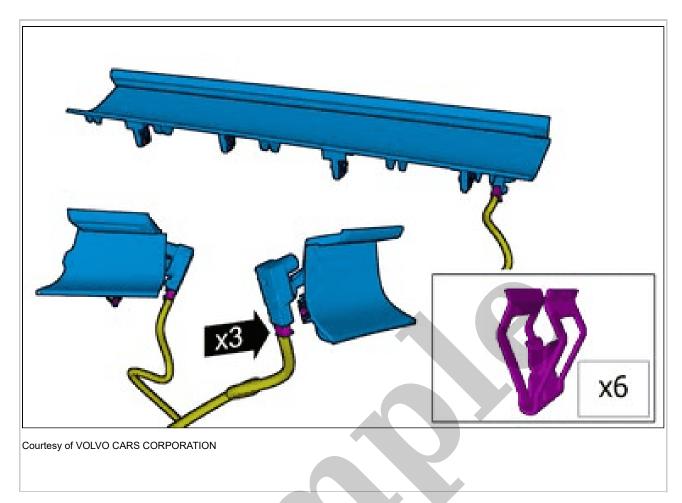

Disconnect the connectors.

ALL VEHICLES