


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2019 Toyota Fortuner Service Manual

[Go to manual page](#)

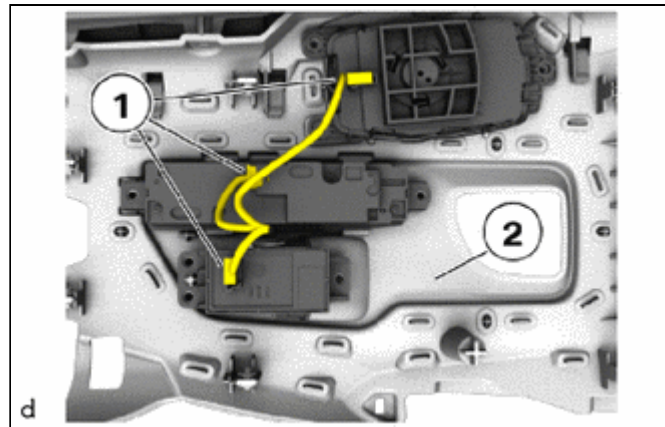

(d) Remove the upper console panel sub-assembly (2).

## 9. REMOVE TRANSMISSION FLOOR SHIFT ASSEMBLY

Click here [INFO](#)

## 10. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

(a) for LHD:

(1) Type A:

1. Turn the locks (3) by 90°.


(2) Type B:

1. Loosen screws (3).

(3) Detach the guide (2).

(4) Detach the guides (4) to remove the No. 1 instrument panel under cover sub-assembly (1).

(5) Unlock associated plug connections and disconnect.

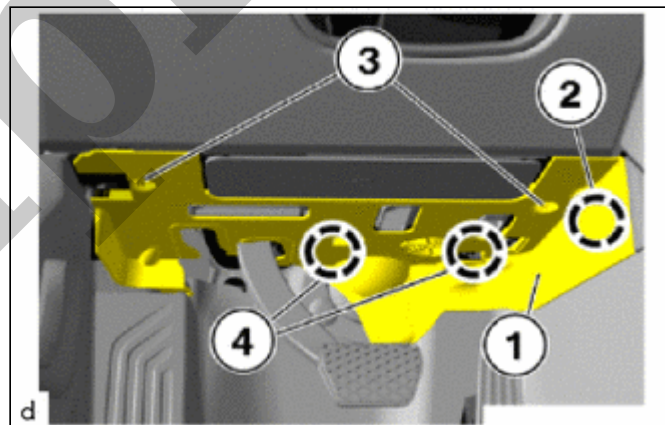


(b) for RHD:

(1) Turn the locks (3) by 90°.

(2) Detach the guide (2).


(3) Detach the guides (4) to remove the No. 1 instrument panel under cover sub-assembly (1).

(4) Unlock associated plug connections and disconnect.

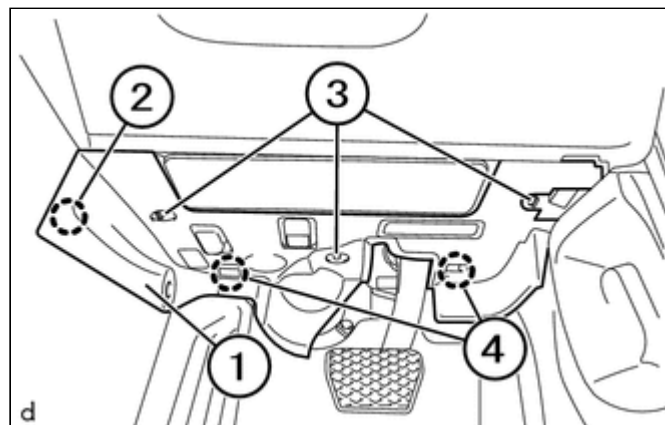


## 11. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY


(a) Turn the locks (3) by 90°.

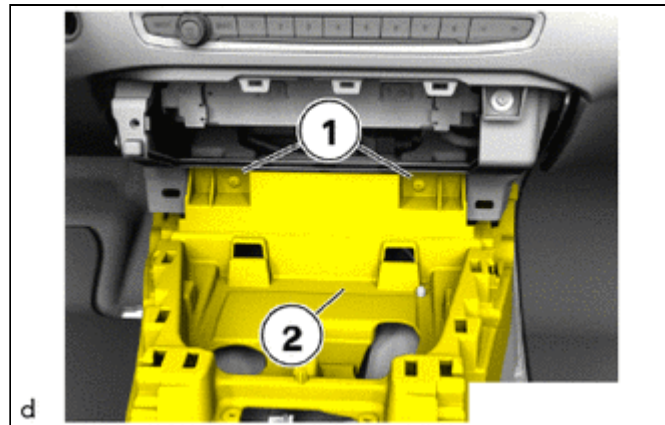

(d) Unlock plug connection (1) and disconnect.

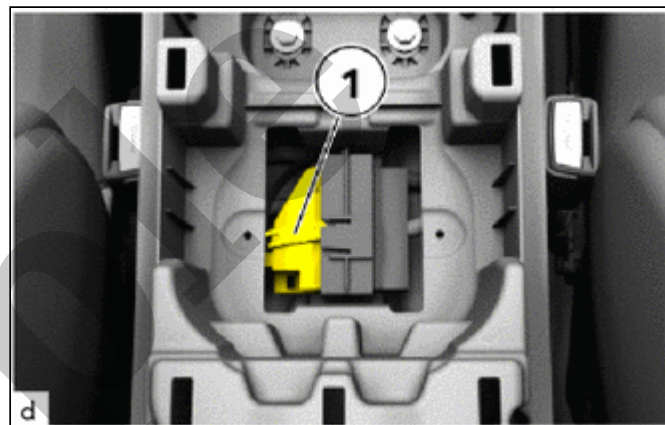

(e) Loosen bolts (1).

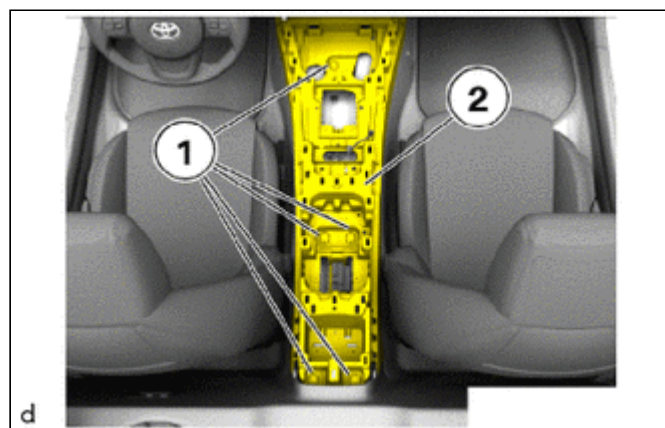

(f) Remove the console box assembly (2).

### 13. REMOVE CONSOLE BOX CUP HOLDER

#### HINT:

Perform this procedure only when replacement of the console box cup holder is necessary.

(a) Loosen T20 screws (1).

## 18. REMOVE NO. 1 STEREO JACK ADAPTER ASSEMBLY

### HINT:

Perform this procedure only when replacement of the front console box cover is necessary.

Click here [INFO](#)

## 19. REMOVE PATTERN SELECT SWITCH ASSEMBLY

### HINT:

Perform this procedure only when replacement of the upper console panel sub-assembly is necessary.

Click here [INFO](#)

## 20. REMOVE ELECTRIC PARKING BRAKE SWITCH ASSEMBLY

### HINT:

Perform this procedure only when replacement of the upper console panel sub-assembly is necessary.

Click here [INFO](#)

## 21. REMOVE REMOTE OPERATION CONTROLLER ASSEMBLY

### HINT:

Perform this procedure only when replacement of the upper console panel sub-assembly is necessary.


Click here [INFO](#)

## 22. REMOVE NO. 1 BOX PANEL

### HINT:

Perform this procedure only when replacement of the No. 1 box panel is necessary.

(a) Loosen T20 screws (1).

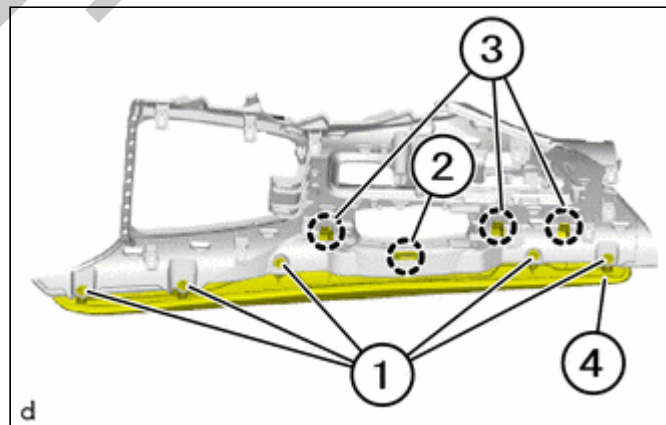

(b) Detach the claw (2) and guides (3).

(c) Remove the No. 1 box panel (4).

## 23. REMOVE EMERGENCY LOUDSPEAKER

### HINT:

Perform this procedure only when replacement of the No. 1 instrument panel under cover sub-assembly is necessary.


Click here [INFO](#)

## 24. REMOVE NO. 1 INTERIOR ILLUMINATION LIGHT ASSEMBLY (w/ Foot light)

### HINT:

Perform this procedure only when replacement of the instrument panel under cover sub-assembly is necessary.

- for Driver Side

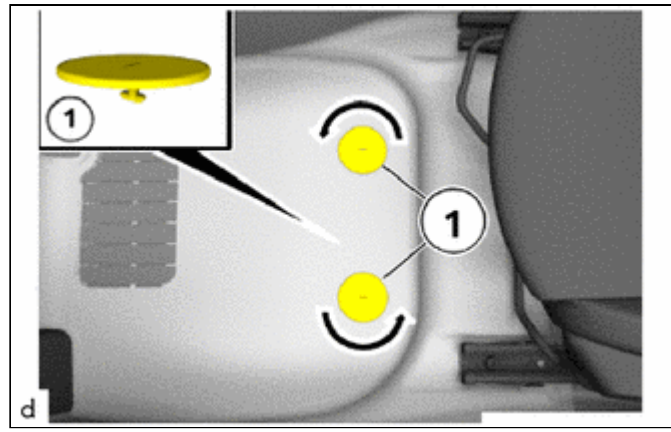

d