


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2022 Toyota RAV4 Prime Service and Repair Manual


[Go to manual page](#)

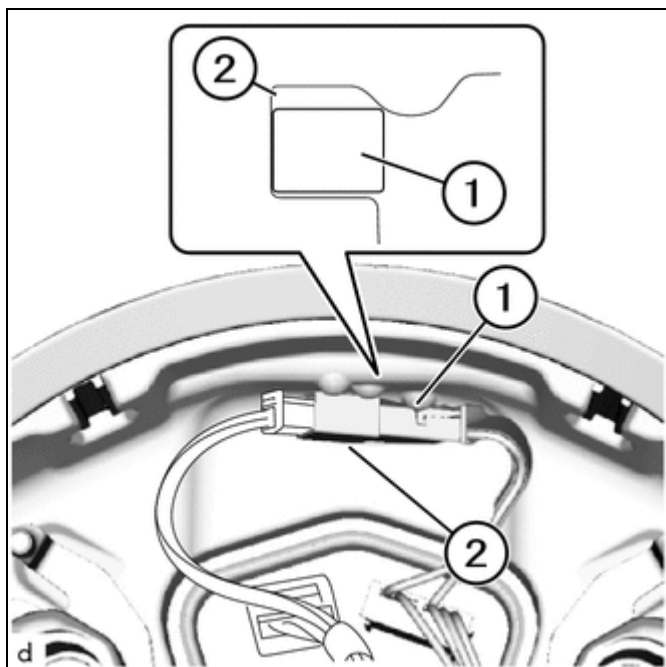

(d) Apply even amounts of pressure and press the horn button assembly (1) into the steering wheel assembly until the airbag unit audibly and noticeably engages.

NOTICE:

After installation, try to pull the horn button assembly and check that the horn button assembly is securely installed.

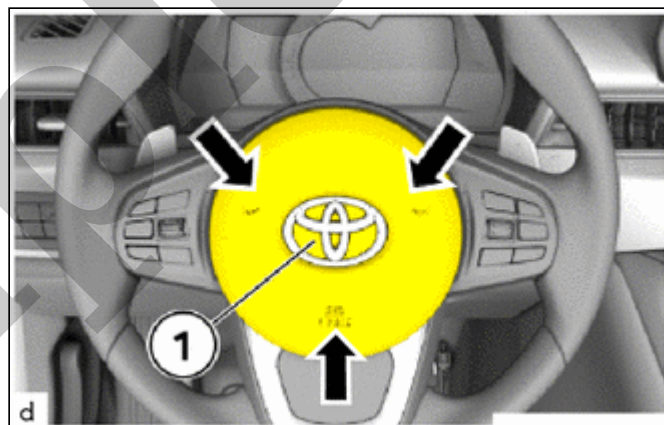

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

- for B46:

Click here [INFO](#)

- for B48:

Click here [INFO](#)

- for B58:

Click here [INFO](#)

3. INSPECT HORN BUTTON ASSEMBLY

(a) Make sure that the horn sounds.

Sample

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001R9LE
Model Year Start: 2021	Model: Supra	Prod Date Range: [07/2020 -]
Title: SUPPLEMENTAL RESTRAINT SYSTEMS: SPIRAL CABLE: REMOVAL; 2021 - 2025 MY Supra [07/2020 -]		

REMOVAL

CAUTION / NOTICE / HINT


CAUTION:

- Airbag unit.

Danger! Life-threatening injuries!



- Before performing any work on the airbag, always disconnect the battery earth lead from the battery.
- Airbag unit may only be set down with the cushion (airbag itself) facing upwards.

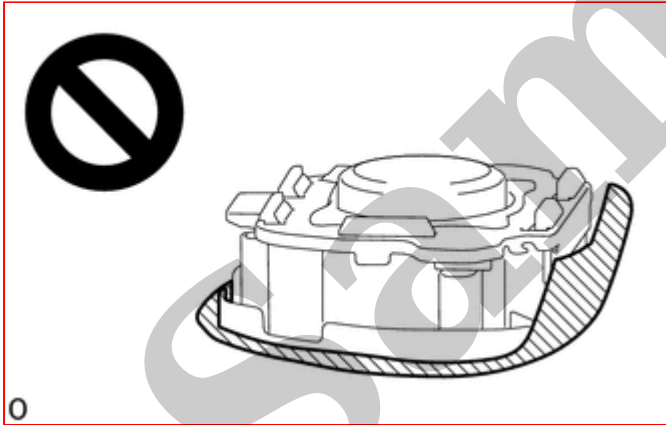

- All work on pyrotechnic parts may be carried out by technically experienced and appropriately trained personnel only.
- Replace any damaged part or ones that have been dropped.
- For additional information see:

Click here [INFO](#)

- Wait at least 60 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.
- If the airbag deploys for any reason, it may cause a serious accident.
- Working on 12 V vehicle electrical system.

Risk of short circuits! Risk of fire!

- Detach the cable from the negative (-) battery terminal.
- w/ No. 2 Battery: Detach the cable from the negative (-) battery terminal of the No. 2 battery.

NOTICE:

Last Modified: 07-26-2024	6.11:8.1.0	Doc ID: RM100000001JCIU
Model Year Start: 2020	Model: Supra	Prod Date Range: [03/2019 -]
Title: SUPPLEMENTAL RESTRAINT SYSTEMS: SPIRAL CABLE: INSPECTION; 2020 - 2025 MY Supra [03/2019 -]		

INSPECTION

PROCEDURE

1. INSPECT SPIRAL CABLE SUB-ASSEMBLY


(a) Visually check the spiral cable sub-assembly for defects.

(1) The defects are as follows:

- Scratches
- Small cracks
- Dents
- Chips
- Cracks or other damage to the connector

OK:

No defects are found.



Sample