

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2024 Jeep Renegade Service Manual

[Go to manual page](#)

YOUR CURRENT VEHICLE

Switch-Paddle Audio-Right

SWITCH-PADDLE AUDIO-RIGHT

SWITCH No:D2839A		Option:Standard
Connector Details		Harness Family
Color	NATURAL	
Part Number	PNIRP-04V-S	Steering_Wheel
Repair Kit Part Number	Not Available	Steering_Wheel
Part Description		Steering_Wheel
Cavity Count	4	Steering_Wheel
Location View	Location View	Steering_Wheel

Connector Views
Mating Side:

YOUR CURRENT VEHICLE

Switch-Parking Brake

SWITCH-PARKING BRAKE

SWITCH No:D2269A		Option:Standard
Connector Details		Harness Family
Color	BLACK	
Part Number	638394-5	IP
Repair Kit Part Number	68335266AA	IP
Part Description		IP
Cavity Count	12	IP
Location View	Location View	IP

Connector Views
Mating Side:

YOUR CURRENT VEHICLE


Switch-Power Folding Seat-D-Pillar

SWITCH-POWER FOLDING SEAT-D-PILLAR


SWITCH No:D2381A		Option:Standard
Connector Details		Harness Family
Color	GRAY	
Part Number	AIT2PB-06-1BH	JUMPER_QUARTER_TRIM_REAR_RIGHT
Repair Kit Part Number	TBD 19HD-17	JUMPER_QUARTER_TRIM_REAR_RIGHT
Part Description		JUMPER_QUARTER_TRIM_REAR_RIGHT
Cavity Count	6	JUMPER_QUARTER_TRIM_REAR_RIGHT
Location View	Location View	JUMPER_QUARTER_TRIM_REAR_RIGHT

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
JUMPER_QUARTER_TRIM_REAR_RIGHT					
1	Z924	GROUND	BK	0.75	
2	P710	2ND ROW SIGNAL	BG	0.35	
3	P279	RETURN	GN	0.35	
4	P709	3RD ROW SIGNAL	BG	0.35	
5	N0	NO CONNECT	NA	0	

Connector Views

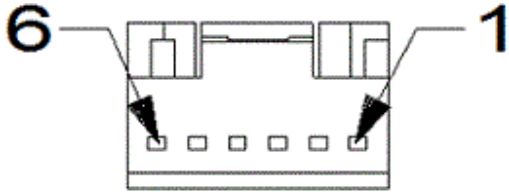

Isometric View:

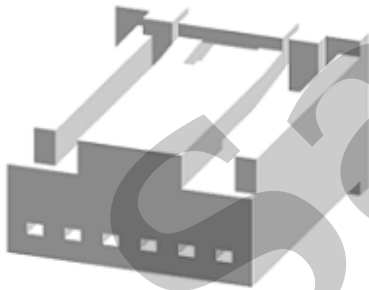


Wire Insertion Side:


Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
2	Q901	LOGIC GROUND	OG	0.35	
3	N0	NO CONNECT	NA	0	
4	N0	NO CONNECT	NA	0	
5	N0	NO CONNECT	NA	0	
6	N0	NO CONNECT	NA	0	

Sample

Connector Views

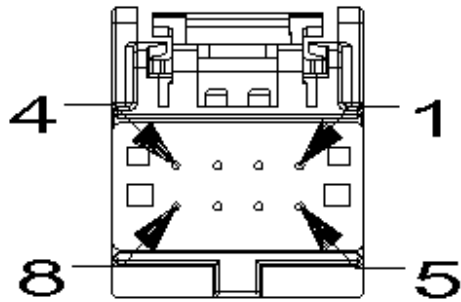


Isometric View:

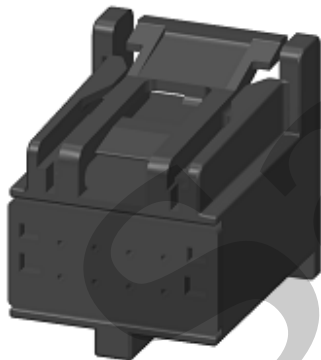


Wire Insertion Side:

Connector Views

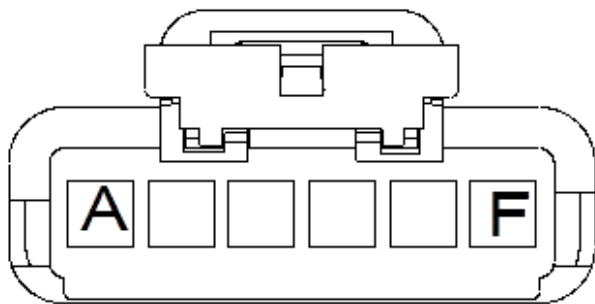

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
SEAT_CUSHION_DRIVER					
A	P172	MOTOR (DOWN)	GN	0.35	EXCEPT SEAT BACK MASSAGE
A	Z921	GROUND	BK	0.50	SEAT BACK MASSAGE
B	N0	NO CONNECT	NA	0	SEAT BACK MASSAGE
B	P105	MOTOR (OUT)	GN	0.35	RHD EXCEPT SEAT BACK MASSAGE
B	P107	MOTOR (IN)	GN	0.35	LHD EXCEPT SEAT BACK MASSAGE
C	N0	NO CONNECT	NA	0	SEAT BACK MASSAGE
C	P105	MOTOR (OUT)	GN	0.35	LHD EXCEPT SEAT BACK MASSAGE
C	P107	MOTOR (IN)	GN	0.35	RHD EXCEPT SEAT BACK MASSAGE
D	N0	NO CONNECT	NA	0	SEAT BACK MASSAGE
D	Z921	GROUND	BK	0.75	EXCEPT SEAT BACK MASSAGE
E	N0	NO CONNECT	NA	0	SEAT BACK MASSAGE


Connector Views

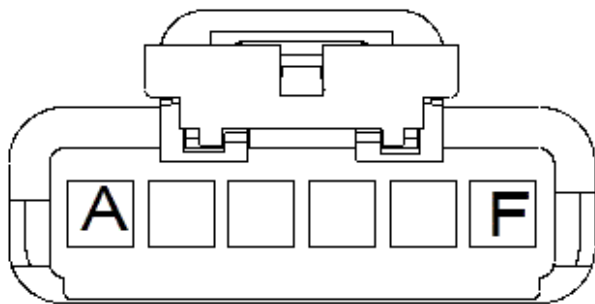

Pin	Circuit	Circuit Function	Color	Gauge/Size	Option
SEAT_CUSHION_PASSENGER					
A	P173	MOTOR (DOWN)	GN	0.35	EXCEPT SEAT BACK MASSAGE
A	Z920	GROUND	BK	0.50	SEAT BACK MASSAGE
B	N0	NO CONNECT	NA	0	SEAT BACK MASSAGE
B	P106	MOTOR (OUT)	GN	0.35	LHD EXCEPT SEAT BACK MASSAGE
B	P108	MOTOR (IN)	GN	0.35	RHD EXCEPT SEAT BACK MASSAGE
C	N0	NO CONNECT	NA	0	SEAT BACK MASSAGE
C	P106	MOTOR (OUT)	GN	0.35	RHD EXCEPT SEAT BACK MASSAGE
C	P108	MOTOR (IN)	GN	0.35	LHD EXCEPT SEAT BACK MASSAGE
D	N0	NO CONNECT	NA	0	SEAT BACK MASSAGE
D	Z920	GROUND	BK	0.75	EXCEPT SEAT BACK MASSAGE
E	N0	NO CONNECT	NA	0	SEAT BACK MASSAGE

Connector Views

Wire Insertion Side:

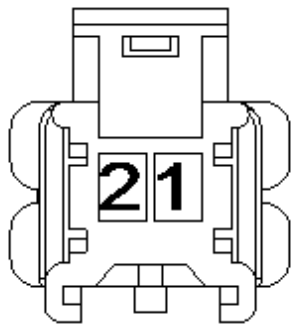

Pin	Cicuit	Cicuit Function	Color	Gauge/Size	Option
SEAT_BACK_2ND_ROW					
1	R70	SIGNAL	VT	0.35	
2	R90	DETECTION SIGNAL	GN	0.35	OCCUPANT DETECTION