

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2012 FORD Fiesta Sedan OEM Service and Repair Workshop Manual

[Go to manual page](#)

## Does the resistance match the specification on the temperature chart?

<b>Yes</b>	GO to <a href="#">B12</a>
------------	---------------------------


<b>No</b>	GO to <a href="#">B11</a>
-----------	---------------------------

## B11 CHECK THE TFT (TRANSMISSION FLUID TEMPERATURE) SENSOR RESISTANCE

- Remove the main control valve body.  
REFER to: [Main Control Valve Body](#)(307-01A Automatic Transmission - 10-Speed Automatic Transmission – 10R80, Removal and Installation).
- Disconnect TFT (transmission fluid temperature) sensor C1842 .
- Measure and record the resistance of the TFT (transmission fluid temperature) sensor.
- Compare the measured resistance to the current temperature of the TFT (transmission fluid temperature) sensor using the following chart.

°C	°F	Resistance (ohms)
-50 to -40	-58 to -40	41k-97k
-39 to -20	-39 to -4	14k-52k
-19 to -1	-3 to 31	5.5k-17k
0 to 20	32 to 68	2.3k-6.4k
21 to 40	69 to 104	1.1k-2.7k
41 to 70	105 to 158	0.4k-1.3k
71 to 90	159-194	236-445
91 to 110	195-230	140-247
111 to 130	231-266	87-145
131 to 150	267-302	55-90

## Does the resistance match the specification on the temperature chart?

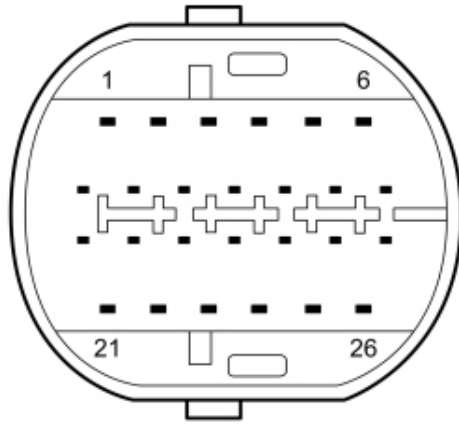

E275612

Transmission component side, pin 20

$\Omega$

Ground

**Are both resistances greater than 10,000 ohms?**

**Yes** GO to [B14](#)

**No** GO to [B13](#)

**B13 CHECK THE TFT (TRANSMISSION FLUID TEMPERATURE) SENSOR FOR A SHORT TO GROUND**

- Remove the main control valve body.  
REFER to: [Main Control Valve Body](#)(307-01A Automatic Transmission - 10-Speed Automatic Transmission – 10R80, Removal and Installation).
- Disconnect TFT (transmission fluid temperature) sensor C1842 .
- Measure:

Positive Lead	Measurement / Action	Negative Lead
TFT (transmission fluid temperature) sensor component side pin 1	$\Omega$	Ground
TFT (transmission fluid temperature) sensor component side pin 2	$\Omega$	Ground

0 to 20	32 to 68	2.3k-6.4k
21 to 40	69 to 104	1.1k-2.7k
41 to 70	105 to 158	0.4k-1.3k
71 to 90	159-194	236-445
91 to 110	195-230	140-247
111 to 130	231-266	87-145
131 to 150	267-302	55-90

**Does the resistance match the specification on the temperature chart?**

CONNECT all electrical connectors. CLEAR the DTC (diagnostic trouble code) . CARRY OUT the KOEO (key on, engine off) and KOER (key on, engine running) self-tests.

If the DTC (diagnostic trouble code) returns,

**Yes** Guided Routine available in the on-line Workshop Manual. After programming the new PCM (powertrain control module) , CARRY OUT the transmission strategy download. REFER to: [Transmission Strategy Download](#) (307-01A Automatic Transmission - 10-Speed Automatic Transmission – 10R80, General Procedures).

If the DTC (diagnostic trouble code) does not return, the fault is no longer present and might have been caused by a terminal fitment issue.

**No** There is a terminal fitment issue. REPAIR any loose, damaged or bent terminals.

**PINPOINT TEST C : TRANSMISSION RANGE SENSOR**

	Performance: No Sub Type Information	
PCM (powertrain control module) P2801:00	Transmission Range Sensor 'B' Circuit Range/Performance: No Sub Type Information	This DTC (diagnostic trouble code) indicates the frequency of TR (transmission range) sensor B is out of range (expected to be 125 Hz +/- 50 Hz). This could be caused by an open or a short in the TR (transmission range) sensor power or ground circuits.
PCM (powertrain control module) P2802:00	Transmission Range Sensor 'B' Circuit Low: No Sub Type Information	This DTC (diagnostic trouble code) indicates the duty cycle of TR (transmission range) sensor B is out of range low (less than 7%). This could be caused by an open circuit or a short to ground in the TR (transmission range) sensor B circuit.
PCM (powertrain control module) P2803:00	Transmission Range Sensor 'B' Circuit High: No Sub Type Information	This DTC (diagnostic trouble code) indicates the duty cycle of TR (transmission range) sensor B is out of range high (greater than 93%). This could be caused by a short to power in the TR (transmission range) sensor B circuit.
PCM (powertrain control module) P2804:00	Transmission Range Sensor 'B' Circuit Intermittent: No Sub Type Information	This DTC (diagnostic trouble code) illuminates the wrench light in conjunction with P2801, P2802 and/or P2803. Resolve the more specific DTC (diagnostic trouble code) first.
PCM (powertrain control module) P2805:00	Transmission Range Sensor 'A'/'B' Correlation: No Sub Type Information	This DTC (diagnostic trouble code) indicates both TR (transmission range) sensors are within range, but the sum of their duty cycles is out of range (total duty cycle should be 96% to 104%).

#### Possible Sources

- Connectors damaged or pushed-out terminals, corrosion, loose wires and missing or damaged seals
- Circuit open or shorted
- Transmission internal wiring harness
- TR (transmission range) sensor
- PCM (powertrain control module)

#### **C1 CHECK THE TR (TRANSMISSION RANGE) SENSOR VREF CIRCUIT FOR VOLTAGE**

<b>No</b>	GO to <a href="#">C3</a>
-----------	--------------------------

### C3 CHECK THE TR (TRANSMISSION RANGE) SENSOR VREF AND SIGNAL CIRCUITS FOR AN OPEN

- Ignition OFF.
- Disconnect PCM (powertrain control module) C1551T .
- Inspect the connector for damaged or pushed out terminals, corrosion, loose wires and missing or damaged seals.
- Measure:

Positive Lead	Measurement / Action	Negative Lead
C168A-5	$\Omega$	C1551T-86
C168A-6	$\Omega$	C1551T-85
C168A-8	$\Omega$	C1551T-50

**Are the resistances less than 3 ohms?**

<b>Yes</b>	GO to <a href="#">C4</a>
------------	--------------------------


<b>No</b>	REPAIR the open circuit.
-----------	--------------------------

### C4 CHECK THE TR (TRANSMISSION RANGE) SENSOR VREF AND SIGNAL CIRCUITS FOR A SHORT TO GROUND

- Measure:


Positive Lead	Measurement / Action	Negative Lead
---------------	----------------------	---------------

<b>Yes</b>	REPAIR the short to power.
------------	----------------------------

<b>No</b>	 <p>Guided Routine available in the on-line Workshop Manual. After programming the new PCM (powertrain control module) , CARRY OUT the transmission strategy download. REFER to: <a href="#">Transmission Strategy Download</a> (307-01A Automatic Transmission - 10-Speed Automatic Transmission - 10R80, General Procedures).</p>
-----------	--

**C6 CHECK THE TR (TRANSMISSION RANGE) SENSOR GROUND CIRCUIT**

- Ignition ON.
- Measure:

Positive Lead	Measurement / Action	Negative Lead
C168A-8		C168A-20

**Is the voltage approximately 9 volts?**

<b>Yes</b>	GO to <a href="#">C9</a>
------------	--------------------------

<b>No</b>	GO to <a href="#">C7</a>
-----------	--------------------------

**C7 CHECK THE TR (TRANSMISSION RANGE) SENSOR GROUND CIRCUIT FOR AN OPEN**

- Ignition OFF.
- Disconnect PCM (powertrain control module) C1551T .


After programming the new PCM (powertrain control module)  
, CARRY OUT the transmission strategy download.

REFER to: [Transmission Strategy Download](#)


(307-01A Automatic Transmission - 10-Speed Automatic Transmission – 10R80, General Procedures).

**C9 CHECK THE TRANSMISSION INTERNAL WIRING HARNESS TR (TRANSMISSION RANGE) SENSOR CIRCUITS FOR AN OPEN**

- Ignition OFF.
- Drain the transmission fluid and remove the transmission fluid pan.  
REFER to: [Transmission Fluid Pan, Gasket and Filter](#)(307-01A Automatic Transmission - 10-Speed Automatic Transmission – 10R80, Removal and Installation).
- Disconnect TR (transmission range) sensor C167 .
- Measure:

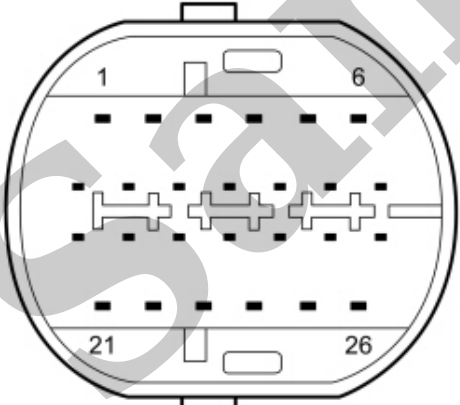Positive Lead	Measurement / Action	Negative Lead
 <p>E275612</p> <p>Transmission component side, pin 5</p>	$\Omega$	C167-2



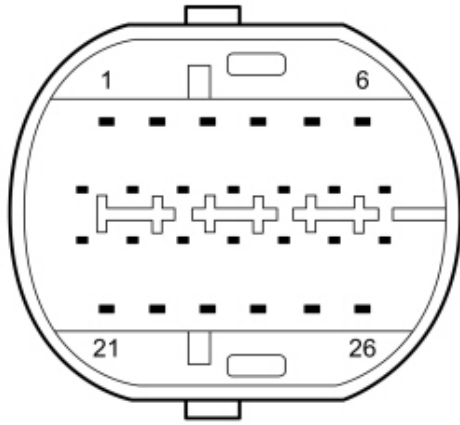

E275612

Transmission component side, pin 20

$\Omega$

C167-1

**Are the resistances less than 3 ohms?**

**Yes**

GO to [C10](#)

**No**

INSTALL a new transmission case harness.

REFER to: [Transmission Internal Wiring Harness](#)

(307-01A Automatic Transmission - 10-Speed Automatic Transmission – 10R80, Removal and Installation).


**C10 CHECK THE TRANSMISSION INTERNAL WIRING HARNESS TR (TRANSMISSION RANGE) SENSOR CIRCUITS FOR A SHORT TO GROUND**

- Measure:

Positive Lead

Measurement /  
Action

Negative  
Lead

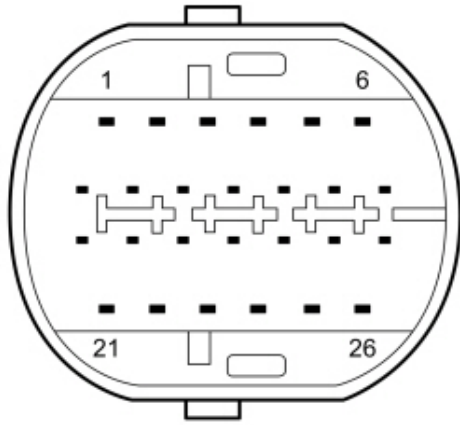


E275612

Transmission component side, pin 8

$\Omega$

Ground

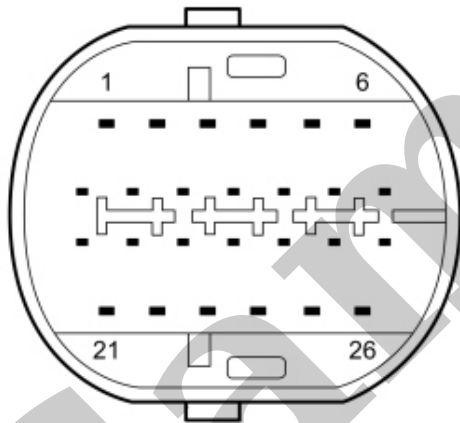

E275612

Transmission component side, pin 20

$\Omega$

Ground

**Are the resistances greater than 10,000 ohms?**

**Yes**

GO to [C11](#)

**No**

INSTALL a new transmission case harness.

REFER to: [Transmission Internal Wiring Harness](#)

(307-01A Automatic Transmission - 10-Speed Automatic Transmission – 10R80, Removal and Installation).