

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2003 FORD Excursion OEM Service and Repair Workshop Manual

[Go to manual page](#)

P0758:00		P097B. Resolve the more specific DTC (diagnostic trouble code) first.
PCM (powertrain control module) P0759:00	Shift Solenoid 'B' Intermittent: No Sub Type Information	This DTC (diagnostic trouble code) indicates a SSB (shift solenoid B) fault, but the fault did not last long enough to set a more specific DTC (diagnostic trouble code) .
PCM (powertrain control module) P0763:00	Shift Solenoid 'C' Electrical: No Sub Type Information	This DTC (diagnostic trouble code) illuminates the wrench light in conjunction with P0779, P0980 and/or P097C. Resolve the more specific DTC (diagnostic trouble code) first.
PCM (powertrain control module) P0764:00	Shift Solenoid 'C' Intermittent: No Sub Type Information	This DTC (diagnostic trouble code) indicates a SSC (shift solenoid C) fault, but the fault did not last long enough to set a more specific DTC (diagnostic trouble code) .
PCM (powertrain control module) P0768:00	Shift Solenoid 'D' Electrical: No Sub Type Information	This DTC (diagnostic trouble code) illuminates the wrench light in conjunction with P0982, P0983 and/or P097D. Resolve the more specific DTC (diagnostic trouble code) first.
PCM (powertrain control module) P0769:00	Shift Solenoid 'D' Intermittent: No Sub Type Information	This DTC (diagnostic trouble code) indicates a SSD (shift solenoid D) fault, but the fault did not last long enough to set a more specific DTC (diagnostic trouble code) .
PCM (powertrain control module) P0773:00	Shift Solenoid 'E' Electrical: No Sub Type Information	This DTC (diagnostic trouble code) illuminates the wrench light in conjunction with P0985, P0986 and/or P097E. Resolve the more specific DTC (diagnostic trouble code) first.
PCM (powertrain control module) P0774:00	Shift Solenoid 'E' Intermittent: No Sub Type Information	This DTC (diagnostic trouble code) indicates a SSE (shift solenoid E) fault, but the fault did not last long enough to set a more specific DTC (diagnostic trouble code) .
PCM (powertrain control module) P0973:00	Shift Solenoid 'A' Control Circuit Low: No Sub Type Information	This DTC (diagnostic trouble code) indicates a short to ground in the SSA (shift solenoid A) circuit.

PCM (powertrain control module) P0980:00	Shift Solenoid 'C' Control Circuit High: No Sub Type Information	This DTC (diagnostic trouble code) indicates a short to power in the SSC (shift solenoid C) circuit.
PCM (powertrain control module) P0982:00	Shift Solenoid 'D' Control Circuit Low: No Sub Type Information	This DTC (diagnostic trouble code) indicates a short to ground in the SSD (shift solenoid D) circuit.
PCM (powertrain control module) P0983:00	Shift Solenoid 'D' Control Circuit High: No Sub Type Information	This DTC (diagnostic trouble code) indicates a short to power in the SSD (shift solenoid D) circuit.
PCM (powertrain control module) P0985:00	Shift Solenoid 'E' Control Circuit Low: No Sub Type Information	This DTC (diagnostic trouble code) indicates a short to ground in the SSE (shift solenoid E) circuit.
PCM (powertrain control module) P0986:00	Shift Solenoid 'E' Control Circuit High: No Sub Type Information	This DTC (diagnostic trouble code) indicates a short to power in the SSE (shift solenoid E) circuit.
PCM (powertrain control module) P0998:00	Shift Solenoid 'F' Control Circuit Low: No Sub Type Information	This DTC (diagnostic trouble code) indicates a short to ground in the SSF (shift solenoid F) circuit.
PCM (powertrain control module) P0999:00	Shift Solenoid 'F' Control Circuit High: No Sub Type Information	This DTC (diagnostic trouble code) indicates a short to power in the SSF (shift solenoid F) circuit.
PCM (powertrain control module) P2709:00	Shift Solenoid 'F' Electrical: No Sub Type Information	This DTC (diagnostic trouble code) illuminates the wrench light in conjunction with P0998, P0999 and/or P097F. Resolve the more specific DTC (diagnostic trouble code) first.
PCM (powertrain control module) P2710:00	Shift Solenoid 'F' Intermittent: No Sub Type Information	This DTC (diagnostic trouble code) indicates a SSF (shift solenoid F) fault, but the fault did not last long enough to set a more specific DTC (diagnostic trouble code) .

Possible Sources

- Connectors damaged or pushed-out terminals, corrosion, loose wires and missing or damaged seals

C168A-9	Ω	Ground
---------	----------	--------

Is the resistance greater than 10,000 ohms?

Yes	GO to A3
------------	--------------------------

No	REPAIR the short to ground.
-----------	-----------------------------

A3 CHECK THE SOLENOID CONTROL CIRCUIT FOR AN OPEN

- Measure the resistance of the suspect solenoid control circuit using the following chart:

Positive Lead	Measurement / Action	Negative Lead
SSA (shift solenoid A) C168A-14	Ω	C1381T-35
SSF (shift solenoid F) C168A-23	Ω	C1381T-34
SSC (shift solenoid C) C168A-16	Ω	C1381T-18
SSB (shift solenoid B) C168A-15	Ω	C1381T-5
SSE (shift solenoid E) C168A-22	Ω	C1381T-4
SSD (shift solenoid D) C168A-21	Ω	C1381T-48

Yes	GO to A5
------------	--------------------------

No	REPAIR the short to ground.
-----------	-----------------------------

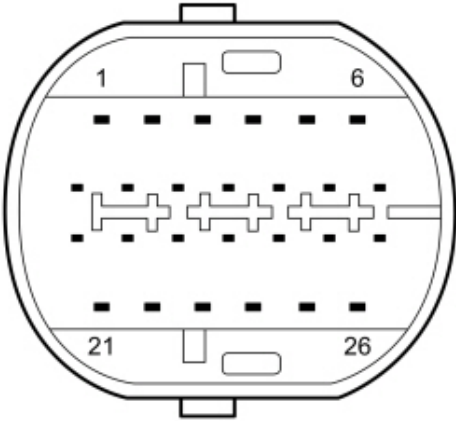
A5 CHECK THE SOLENOID CONTROL CIRCUIT FOR A SHORT TO POWER

- Ignition ON.
- Measure the voltage present on the suspect solenoid control circuit using the following chart:

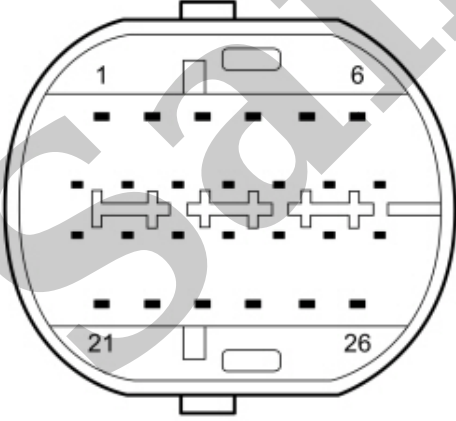
Positive Lead	Measurement / Action	Negative Lead
SSA (shift solenoid A) C168A-14	$\overline{\overline{V}}$	Ground
SSF (shift solenoid F) C168A-23	$\overline{\overline{V}}$	Ground
SSC (shift solenoid C) C168A-16	$\overline{\overline{V}}$	Ground
SSB (shift solenoid B) C168A-15	$\overline{\overline{V}}$	Ground
SSE (shift solenoid E) C168A-22	$\overline{\overline{V}}$	Ground
SSD (shift solenoid D) C168A-21	$\overline{\overline{V}}$	Ground

Is any voltage present on the suspect circuit?

Yes	REPAIR the short to power.
------------	----------------------------

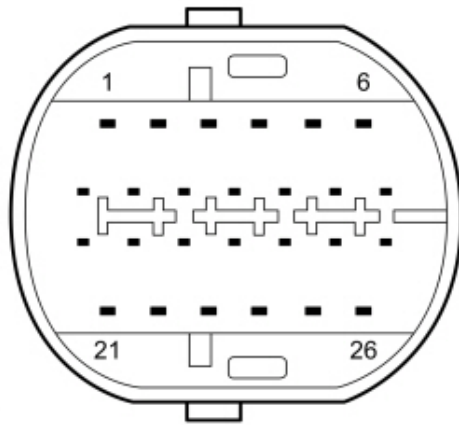
 <p>E275612</p> <p>Transmission component side, pin 9</p>	Ω	C1848-1
--	----------	---------

SSC (shift solenoid C)

Positive Lead	Measurement / Action	Negative Lead
 <p>E275612</p> <p>Transmission component side, pin 9</p>	Ω	C1845-1

SSB (shift solenoid B)

Positive Lead	Measurement / Action	Negative Lead



E275612

Transmission component side, pin 9

Ω

C1846-1

Is the resistance less than 3 ohms on the suspect circuit?

Yes

GO to [A7](#)

No

INSTALL a new transmission internal wiring harness (both pieces).

REFER to: [Transmission Internal Wiring Harness](#)

(307-01A Automatic Transmission - 10-Speed Automatic Transmission – 10R80, Removal and Installation).

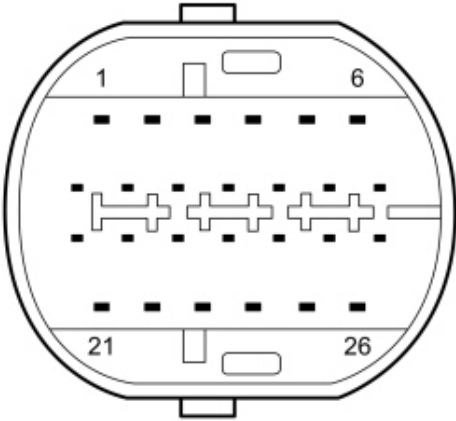
A7 CHECK THE TRANSMISSION INTERNAL WIRING HARNESS SOLENOID POWER CIRCUIT FOR A SHORT TO GROUND

- Inspect the transmission internal wiring harness for pinched, chafing, or bare wires.
- Measure:

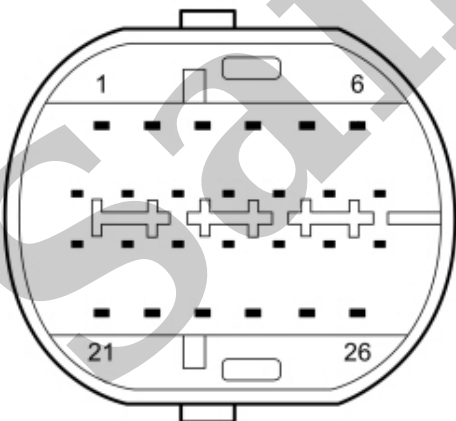
Positive Lead

Measurement /
Action

Negative
Lead

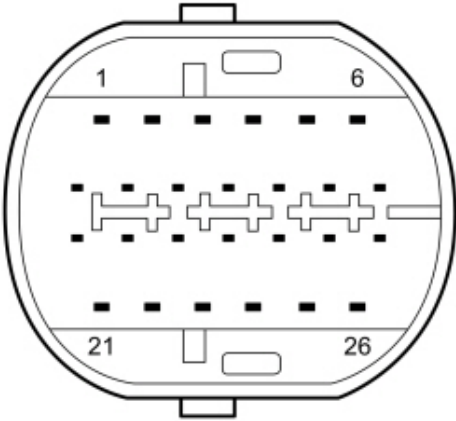
 <p>E275612</p> <p>Transmission component side, pin 14</p>	Ω	C1843-2
---	----------	---------

SSF (shift solenoid F)

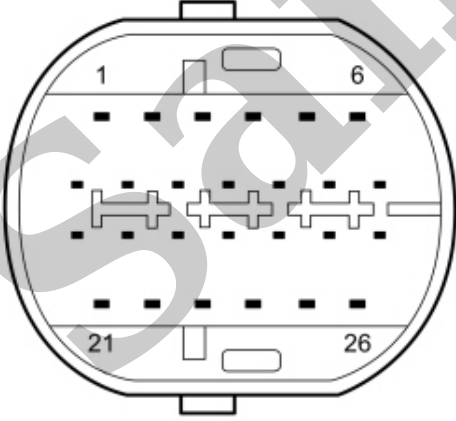
Positive Lead	Measurement / Action	Negative Lead
 <p>E275612</p> <p>Transmission component side, pin 23</p>	Ω	C1848-2

SSC (shift solenoid C)

Positive Lead	Measurement / Action	Negative Lead
---------------	-------------------------	------------------

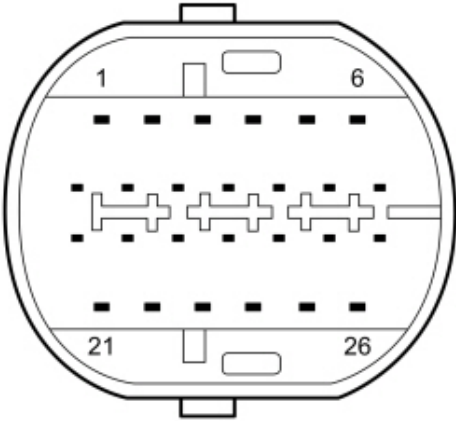
 <p>E275612</p> <p>Transmission component side, pin 22</p>	Ω	C1847-2
---	----------	---------

SSD (shift solenoid D)

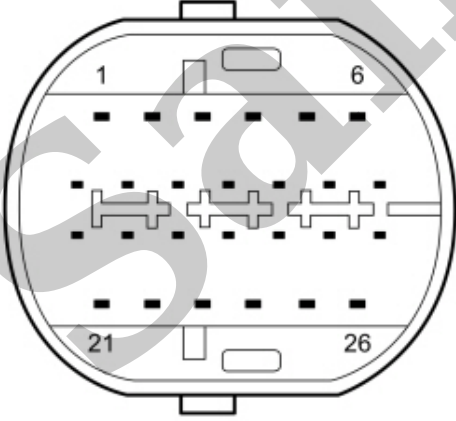
Positive Lead	Measurement / Action	Negative Lead
 <p>E275612</p> <p>Transmission component side, pin 21</p>	Ω	C1846-2

Is the resistance less than 3 ohms on the suspect circuit?

Yes	GO to A9
-----	--------------------------

 <p>E275612</p> <p>Transmission component side, pin 23</p>	Ω	Ground
---	----------	--------

SSC (shift solenoid C)

Positive Lead	Measurement / Action	Negative Lead
 <p>E275612</p> <p>Transmission component side, pin 16</p>	Ω	Ground

SSB (shift solenoid B)

Positive Lead	Measurement / Action	Negative Lead
---------------	-------------------------	------------------